

# **MELSEC System Q**

Programmable Logic Controllers

User's Manual

## **Channel Isolated RTD Input Modules Q64RD, Q64RD-G GX Configurator-TI**

# • SAFETY PRECAUTIONS •

(Always read these instructions before using this equipment.)

Before using this product, please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety to handle the product correctly.

The instructions given in this manual are concerned with this product. For the safety instructions of the PLC system, please read the user's manual for the CPU module to use.


In this manual, the safety instructions are ranked as "DANGER" and "CAUTION".



Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.



Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Note that the  CAUTION level may lead to a serious consequence according to the circumstances. Always follow the instructions of both levels because they are important to personal safety.

Please store this manual in a safe place and make it accessible when required. Always forward it to the end user.

## [DESIGN PRECAUTION]

### DANGER

- Do not write data into the "system area" of the buffer memory of intelligent function modules. Also, do not use any "prohibited to use" signals as an output signal to an intelligent function module from the PLC CPU. Writing data into the "system area" or outputting a signal for "prohibited to use" may cause a PLC system malfunction.

### CAUTION

- Do not bunch the control wires or communication cables with the main circuit or power wires, or install them close to each other. They should be installed 100mm(3.94inch) or more from each other. Not doing so could result in noise that may cause malfunction.

## [INSTALLATION PRECAUTIONS]

### CAUTION

- Use the PLC in an environment that meets the general specifications contained in the user's manual of the CPU module to use.  
Using this PLC in an environment outside the range of the general specifications may cause electric shock, fire, malfunction, and damage to or deterioration of the product.
- While pressing the installation lever located at the bottom of module, insert the module fixing tab into the fixing hole in the base unit until it stops. Then, securely mount the module with the fixing hole as a supporting point.  
Improper installation may result in malfunction, breakdown or the module coming loose and dropping.  
Securely fix the module with screws if it is subject to vibration during use.
- Tighten the screws within the range of specified torque.  
If the screws are loose, it may cause the module to fallout, short circuits, or malfunction.  
If the screws are tightened too much, it may cause damage to the screw and/or the module, resulting in fallout, short circuits or malfunction.
- Switch all phases of the external power supply off when mounting or removing the module.  
Not doing so may cause damage to the module.  
In the system where a CPU module supporting the online module change is used and on the MELSECNET/H remote I/O stations, modules can be replaced online (during energizing).  
However, there are some restrictions on replaceable modules and the replacement procedures are predetermined for each module.  
For details, refer to the chapter of the online module change in this manual.
- Do not directly touch the conductive area or electronic components of the module.  
Doing so may cause malfunction or failure in the module.

## [WIRING PRECAUTIONS]

### CAUTION

- Always ground the FG terminal for the PLC.  
There is a risk of electric shock or malfunction.
- When turning on the power and operating the module after wiring is completed, always attach the terminal cover that comes with the product.  
There is a risk of electric shock if the terminal cover is not attached.
- Tighten the terminal screws within the range of specified torque.  
If the terminal screws are loose, it may result in short circuits or malfunction.  
If the terminal screws are tightened too much, it may cause damage to the screw and/or the module, resulting in short circuits or malfunction.
- Be careful not to let foreign matter such as sawdust or wire chips get inside the module.  
They may cause fires, failure or malfunction.
- The top surface of the module is covered with protective film to prevent foreign objects such as cable offcuts from entering the module when wiring.  
Do not remove this film until the wiring is complete.  
Before operating the system, be sure to remove the film to provide adequate ventilation.

## [STARTING AND MAINTENANCE PRECAUTIONS]

### CAUTION

- Do not disassemble or modify the modules.  
Doing so could cause failure, malfunction injury or fire.
- Switch all phases of the external power supply off when mounting or removing the module.  
Not doing so may cause failure or malfunction of the module.  
In the system where a CPU module supporting the online module change is used and on the MELSECNET/H remote I/O stations, modules can be replaced online (during energizing).  
However, there are some restrictions on replaceable modules and the replacement procedures are predetermined for each module.  
For details, refer to the chapter of the online module change in this manual.
- Do not mount/remove the module onto/from base unit more than 50 times (IEC 61131-2-compliant), after the first use of the product.  
Failure to do so may cause the module to malfunction due to poor contact of connector.
- Do not touch the connector while the power is on.  
Doing so may cause malfunction.
- Switch all phases of the external power supply off when cleaning or retightening the terminal screws and module installation screws.  
Not doing so may cause failure or malfunction of the module.  
If the screws are loose, it may cause the module to fallout, short circuits, or malfunction.  
If the screws are tightened too much, it may cause damages to the screws and/or the module, resulting in the module falling out, short circuits or malfunction.
- Always make sure to touch the grounded metal to discharge the electricity charged in the body, etc., before touching the module.  
Failure to do so may cause a failure or malfunctions of the module.

## [DISPOSAL PRECAUTIONS]

### CAUTION

- When disposing of this product, treat it as industrial waste.

REVISIONS

\* The manual number is given on the bottom left of the back cover.

Print Date	* Manual Number	Revision
Nov., 2000	SH (NA)-080142-A	First printing
Jun., 2001	SH (NA)-080142-B	<p><b>Addition</b> Section 2.1, 2.2</p> <p><b>Correction</b> Conformation to the EMC Directive and Low Voltage Instruction, About the Generic Terms and Abbreviations, Product Structure, Section 5.2, 5.2.1, 5.2.2, 5.3.3</p>
Feb., 2002	SH (NA)-080142-C	<p><b>Addition</b> Section 1.2, Section 3.4.18, 3.4.19, Chapter 7, App 2,3</p> <p><b>Partial addition</b> SAFETY PRECAUTIONS, About the Generic Terms and Abbreviations, Section 2.1, Section 3.1, 3.2, 3.4.1, Section 4.3, 4.6, Section 5.2.1, 5.2.2, Section 8.1, 8.2.1</p> <p><b>Correction</b> Section 3.3.2, 3.4.10, 3.4.17, Section 4.2, 4.4.1, Section 5.3.2, 5.5, 5.6.1 Section 6.1.1, 6.2.2, Section 8.2.4,</p>
Feb., 2003	SH (NA)-080142-D	<p><b>Addition</b> Section 5.6.3, 5.6.4</p> <p><b>Correction</b> SAFETY PRECAUTIONS, Section 1.2, Section 2.1, Section 3.1.1, 3.2, 3.3.1, 3.3.2, 3.4.1, 3.4.3, 3.4.4, 3.4.6, 3.4.7, 3.4.10 to 3.4.19, Section 4.5, 4.6, Section 5.1, 5.2.1, 5.2.2, 5.3.2, 5.4, 5.5, 5.6.1, 5.6.2, Section 6.1, 6.1.1, 6.1.2, 6.2, 6.2.1, 6.2.2, Section 7.3.1, 7.3.3 to 7.3.6, 7.4, Section 8.1, 8.2, 8.2.5, Appendix 2.1, Appendix 3.1 to 3.3</p>
Sep., 2003	SH(NA)-080142-E	<p>Description for new model, Q64RD-G is added.</p> <p><b>Addition</b> Section 3.1.2, 3.4.2, 3.4.5, 3.4.7, 3.4.12, 3.4.13, 3.4.23, 7.4.2, 8.2.5, 8.2.6, Appendix 1.3</p> <p><b>Correction</b> About the Generic Terms and Abbreviations, Product Lineup, Chapter 1, Section 1.1, 2.1, 2.2, 3.1.1, 3.1.3, 3.2, 3.2.1, 3.3.1, 3.3.2, 3.4.1, 3.4.4, 3.4.15 to 3.4.17, 3.4.21, 3.4.25, 4.3, 4.4.2, 4.5, 4.6, 5.1, 5.2.1, 5.6.1, 5.6.2, 5.6.4, 6.1, Chapter 7, Section 7.3.4, 7.3.6, 7.4.1, 8.1, 8.2.10, Appendix 1.1, 1.2, 3.2, 3.3, 4</p>
May, 2004	SH(NA)-080142-F	<p><b>Correction</b> Section 2.2, 3.4.16, 7.1, 7.3.1 to 7.3.6</p>

Japanese Manual Version SH-080133-F

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

## INTRODUCTION

Thank you for purchasing the MELSEC-Q series PLC.

Before using the equipment, please read this manual carefully to develop full familiarity with the functions and performance of the Q series PLC you have purchased, so as to ensure correct use.

Please forward a copy of this manual to the end user.

## CONTENTS

SAFETY PRECAUTIONS.....	A- 1
REVISIONS.....	A- 4
INTRODUCTION .....	A- 5
Conformation to the EMC Directive and Low Voltage Instruction .....	A- 9
About the Generic Terms and Abbreviations.....	A- 9
Product Lineup .....	A- 9

<b>1 OVERVIEW</b>	<b>1- 1 to 1- 3</b>
-------------------	---------------------

1.1 Features .....	1- 2
1.2 Functions Added for Function Version C .....	1- 3

<b>2 SYSTEM CONFIGURATION</b>	<b>2- 1 to 2- 3</b>
-------------------------------	---------------------

2.1 Applicable Systems.....	2- 1
2.2 How to Check the Function Version and Software Version.....	2- 3

<b>3 SPECIFICATIONS</b>	<b>3- 1 to 3-36</b>
-------------------------	---------------------

3.1 Performance Specifications .....	3- 1
3.1.1 Specifications of Q64RD .....	3- 1
3.1.2 Specifications of Q64RD-G.....	3- 2
3.1.3 Specifications of RTD connection.....	3- 4
3.2 Function List .....	3- 5
3.2.1 Temperature conversion system .....	3- 6
3.3 I/O Signals Transferred to/from PLC CPU .....	3- 9
3.3.1 I/O signal list .....	3- 9
3.3.2 I/O signal details .....	3-10
3.4 Buffer Memory.....	3-15
3.4.1 Buffer memory assignment (Q64RD).....	3-15
3.4.2 Buffer memory assignment (Q64RD-G).....	3-19
3.4.3 Conversion enable/disable setting (Un\G0) .....	3-22
3.4.4 CH $\square$ time/count averaging setting (Q64RD) (Un\G1 to 4) .....	3-22
3.4.5 CH $\square$ time/count/moving average/time constant setting (Q64RD-G) (Un\G1 to 4) .....	3-23
3.4.6 Averaging processing specification (Q64RD) (Un\G9) .....	3-23
3.4.7 Averaging processing specification (Q64RD-G) (Un\G9).....	3-24
3.4.8 Conversion completion flag (Un\10).....	3-25
3.4.9 CH $\square$ measured temperature value (Un\11 to 14).....	3-25
3.4.10 Error code (Un\G19).....	3-26
3.4.11 Setting range (Q64RD) (Un\G20).....	3-26
3.4.12 Setting range 1 (Q64RD-G) (Un\G20).....	3-27
3.4.13 Setting range 2 (Q64RD-G) (Un\G21).....	3-27

3.4.14 Warning output enable/disable setting (Un\G47).....	3-28
3.4.15 Warning output flag (Un\G48).....	3-28
3.4.16 Disconnection detection flag (Un\G49).....	3-29
3.4.17 CH□ scaling value (Un\G50 to 53).....	3-30
3.4.18 CH□ measured temperature value (32 bit) (Un\G54 to 61) .....	3-31
3.4.19 CH□ scaling upper/lower limit values (Un\G62 to 77) .....	3-31
3.4.20 CH□ scaling width upper/lower limit values (Un\G78 to 85).....	3-31
3.4.21 CH□ warning output upper/lower limit values (Un\86 to 101) .....	3-32
3.4.22 CH□ offset/gain temperature set value (Un\G118 to 133) .....	3-33
3.4.23 Extended averaging processing specification (Q64RD-G) (Un\G134) .....	3-34
3.4.24 Mode switching setting (Un\G158 to 159).....	3-35
3.4.25 Factory default offset/gain value/User range settings offset/gain value/User range settings offset/gain resistance value (Un\G160 to 255) .....	3-35

<b>4 SETUP AND PROCEDURES BEFORE OPERATION</b>	<b>4- 1 to 4-13</b>
--	---------------------

4.1 Handling Precautions .....	4- 1
4.2 Setup and Procedures before Operation .....	4- 2
4.3 Part Names and Settings .....	4- 3
4.4 Wiring.....	4- 4
4.4.1 Wiring Instructions.....	4- 4
4.4.2 External Wiring .....	4- 5
4.5 Switch Setting for Intelligent Function Module .....	4- 7
4.6 Offset/Gain Setting.....	4- 9

<b>5 UTILITY PACKAGE (GX Configurator-TI)</b>	<b>5- 1 to 5-21</b>
---	---------------------

5.1 Utility Package Functions .....	5- 1
5.2 Installing and Uninstalling the Utility Package.....	5- 3
5.2.1 Precautions for use .....	5- 3
5.2.2 Operating environment.....	5- 5
5.3 Explanation of Utility Package Operation.....	5- 6
5.3.1 How to perform common utility package operations.....	5- 6
5.3.2 Operation overview .....	5- 8
5.3.3 Starting the intelligent function module utility .....	5-10
5.4 Initial Setting .....	5-12
5.5 Automatic Refresh Settings .....	5-13
5.6 Monitor/Test .....	5-15
5.6.1 Monitor/test screen.....	5-15
5.6.2 Offset/gain setting operation (Function version C or later) .....	5-18
5.6.3 Offset/gain setting operation (Function version B).....	5-19
5.6.4 OMC (Online Module Change) refresh data .....	5-20

<b>6 PROGRAMMING</b>	<b>6- 1 to 6- 9</b>
----------------------	---------------------

6.1 Programs Used in Normal System Configuration .....	6- 1
6.1.1 Program example used when utility package is used.....	6- 2
6.1.2 Program example used when utility package is not used.....	6- 3

6.2 Programs Used on Remote I/O Network .....	6- 4
6.2.1 Program example used when utility package is used.....	6- 5
6.2.2 Program example used when utility package is not used.....	6- 7

<b>7 ONLINE MODULE CHANGE</b>	<b>7- 1 to 7-37</b>
-------------------------------	---------------------

7.1 Online Module Change Conditions.....	7- 2
7.2 Online Module Change Operations .....	7- 3
7.3 Online Module Change Procedure .....	7- 4
7.3.1 When factory default is used and initial setting was made with GX Configurator-TI .....	7- 4
7.3.2 When factory default is used and initial setting was made with sequence program .....	7- 9
7.3.3 When user range setting is used and initial setting was made with GX Configurator-TI (other system is available).....	7-14
7.3.4 When user range setting is used and initial setting was made with GX Configurator-TI (other system is unavailable).....	7-19
7.3.5 When user range setting is used and initial setting was made with sequence program (other system is available).....	7-24
7.3.6 When user range setting is used and initial setting was made with sequence program (other system is unavailable).....	7-29
7.4 Range Reference Table.....	7-35
7.4.1 Range reference table (Q64RD).....	7-35
7.4.2 Range reference table (Q64RD-G).....	7-36
7.5 Precautions for Online Module Change .....	7-37

<b>8 TROUBLESHOOTING</b>	<b>8- 1 to 8- 6</b>
--------------------------	---------------------

8.1 Error Code List .....	8- 1
8.2 Troubleshooting .....	8- 3
8.2.1 RUN LED is extinguished .....	8- 3
8.2.2 RUN LED flickers .....	8- 3
8.2.3 ERROR/ERR. LED flickers .....	8- 3
8.2.4 ERROR/ERR. LED is lit .....	8- 3
8.2.5 ALM LED flickers.....	8- 3
8.2.6 ALM LED is lit.....	8- 4
8.2.7 Disconnection detection flag (XC) has turned on.....	8- 4
8.2.8 Temperature conversion value cannot be read .....	8- 4
8.2.9 Temperature conversion value is abnormal .....	8- 4
8.2.10 Checking the Q64RD/Q64RD-G status using GX Developer system monitor .....	8- 5

<b>APPENDIX</b>	<b>App.- 1 to App.-18</b>
-----------------	---------------------------

Appendix 1 Reference Resistance Values of RTD .....	App.- 1
Appendix 1.1 New JIS/IEC type (Pt100).....	App.- 1
Appendix 1.2 Old JIS type (JPt100).....	App.- 1
Appendix 1.3 Ni100Ω type .....	App.- 1
Appendix 2 Function upgrade for the Q64RD.....	App.- 2
Appendix 2.1 A comparison of function of the Q64RD .....	App.- 2



Appendix 3 Dedicated Instruction List .....App.- 3  
Appendix 3.1 OFFGAN .....App.- 4  
Appendix 3.2 OGLOAD .....App.- 6  
Appendix 3.3 OGSTOR..... App.- 11  
Appendix 4 External Dimension Diagram ..... App.- 17

INDEX	Index- 1 to Index- 2
-------	----------------------

### Conformation to the EMC Directive and Low Voltage Instruction

For details on making Mitsubishi PLC conform to the EMC directive and low voltage instruction when installing it in your system, please see Chapter 3, "EMC Directive and Low Voltage Instruction" of the User's Manual (Hardware) of the PLC CPU to use.

The CE logo is printed on the rating plate on the main body of the PLC that conforms to the EMC directive and low voltage instruction.

BY making this product conform to the EMC directive and low voltage instruction, it is not necessary to make those steps individually.

### About the Generic Terms and Abbreviations

Unless otherwise specified, this manual uses the following general terms and abbreviations.

Abbreviation/general terms	Description
Q64RD	Q64RD platinum RTD input module
Q64RD-G	Q64RD-G channel isolated RTD input module
Personal computer	IBM PC/AT <sup>®</sup> or compatible computer with DOS/V.
GX Developer	Generic product name of the product types SWnD5C-GPPW-E, SWnD5C-GPPW-EA, SWnD5C-GPPW-EV and SWnD5C-GPPW-EVA. "n" in the model name is 4 or greater.
GX Configurator-TI	Generic term for temperature input module setting and monitor tool GX Configurator-TI (SW1D5C-QTIU-E)
QCPU (Q mode)	Generic term for, Q00JCPU, Q00CPU, Q01CPU, Q02CPU, Q02HCPU, Q06HCPU, Q12HCPU, Q25HCPU, Q12PHCPU, Q25PHCPU
QnPHCPU	Generic term for, Q12PHCPU and Q25PHCPU
RTD	Abbreviation for Resistance Temperature Detector. Platinum or nickel temperature-measuring resistor.

### Product Lineup

The lineup for this product is given in the table below.

Model code	Product	Quantity
Q64RD	Q64RD platinum RTD input module	1
Q64RD-G	Q64RD-G channel isolated RTD input module	1
SW1D5C-QTIU-E	GX Configurator-TI Version 1 (Single license product) (CD-ROM)	1
SW1D5C-QTIU-EA	GX Configurator-TI Version 1 (Volume license product) (CD-ROM)	1



1 OVERVIEW


This user's manual provides the specifications, handling instructions, programming procedures and other information of the Q64RD platinum RTD (Resistance Temperature Detector) input module and the Q64RD-G channel isolated RTD input module (hereinafter referred to as the Q64RD and Q64RD-G), which are designed to use together with the MELSEC-Q series CPU module (hereinafter referred to as the PLC CPU).

The Q64RD is a module for connection of 3-wire or 4-wire type platinum RTDs (2-wire application is available if terminals are short-circuited.) and converts temperature data [°C] input from Pt100 or JPt100 platinum RTD (hereinafter referred to as PT100 or JPt100) to:

- 16-bit signed binary data (stored as a value rounded off to 1 decimal place × 10)
- 32-bit signed binary data (stored as a value rounded off to 3 decimal places × 1000) and scaling values (ratios (%)).

The Q64RD-G is a module for connection of 3-wire or 4-wire type RTDs (2-wire application is available if terminals are short-circuited.) and converts temperature data [°C] input from Pt100, JPt100 or nickel RTD Ni100Ω (hereinafter referred to as Ni100Ω) to:

- 16-bit signed binary data (stored as a value rounded off to 1 decimal place × 10)
- 32-bit signed binary data (stored as a value rounded off to 3 decimal places × 1000) and scaling values (ratios (%)).

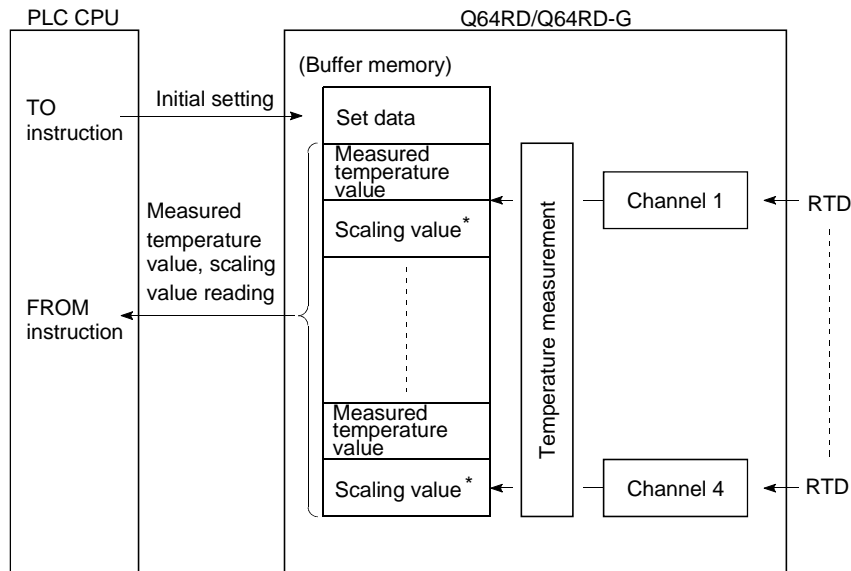

\*: Refer to Section 3.4.17 for details of the scaling values.

## 1.1 Features

1

- (1) **Channel isolation (Q64RD-G)**

The Q64RD-G is a channel-isolated module.
- (2) **Four-channel temperature measurement by one module**

The Q64RD and Q64RD-G are capable of measuring temperatures of 4 channels per module. Detected temperature values can be converted into scaling values (ratios (%)).
- (3) **Conversion enable/disable setting**

You can make a conversion enable/disable setting for each channel. Disabling unused channels for conversion reduces sampling time.  
It also prevents unnecessary disconnection detection on unused channels.
- (4) **Standard-compliant RTD is usable**
  - (a) **Platinum RTD compliant with JIS (Japanese Industrial Standards) is usable (Q64RD)**

Two types of JIS-compliant platinum RTDs (Pt100 and JPt100) can be used. The types can be selected for each channel on GX Developer.
  - (b) **Platinum RTD compliant with JIS or Nickel RTD compliant with DIN is usable (Q64RD-G)**

In addition to the above 2 types of JIS-compliant platinum RTDs, DIN-compliant nickel RTDs can be used.  
The types of RTD can be selected for each channel on GX Developer.
- (5) **Connection of 3-wire or 4-wire RTD is available for each channel**

For each channel, 3-wire or 4-wire RTD can be connected. By making the terminals short-circuited, 2-wire RTD can be used.
- (6) **Disconnection detection**

The disconnection of a platinum RTD or cable can be detected on each channel.
- (7) **Optimal processing selection is available**
  - (a) **Selectable options of Sampling processing, Time averaging processing and Count averaging processing (Q64RD)**

A desired conversion method can be selected for each channel.
  - (b) **Selectable options of Sampling processing, Time averaging processing and Count averaging processing, Moving average and Primary delay filter (Q64RD-G)**

A desired conversion method can be selected for each channel.
- (8) **Optimal range selection is available**
  - (a) **Ranges of -20 to 120°C, -180 to 600°C and -200 to 850°C can be selected (Q64RD)**

When Pt100 or JPt100 is used, a desired range can be selected for each channel.
  - (b) **Ranges of 0 to 200°C, -20 to 120°C, -180 to 600°C, -200 to 850°C, -60 to 180°C can be selected (Q64RD-G)**

When a platinum RTD, Pt100 or JPt100 is used, a range of 0 to 200°C, -20 to 120°C, -180 to 600°C or -200 to 850°C can be selected for each channel.  
When a nickel RTD, Ni100Ω is used, a range of -60 to 180°C can be selected for each channel.

**(9) Error compensation by offset/gain value setting**

Error compensation can be made by setting offset and gain values on each channel.

As the offset and gain values, you can make selection from user settings and factory settings.

**(10) Warning output**

If the temperature detected is outside the preset measurement range, an warning can be output on each channel.

**(11) Online Module Change**

The module can be changed without the system being stopped.

Also, by using the dedicated instructions (G.OGLOAD, G. OGSTOR) or writing to the buffer and turning on the corresponding Y signal, the offset/gain values can be re-set to the Q64RD/Q64RD-G replaced online and they can be transferred to the other Q64RD/Q64RD-G mounted in another slot. (Between the same models only)

**(12) Easy setting by utility package**

The utility package, GX Configurator-TI is available separately.

This utility package is not necessarily to be used. However, using this makes the initial setting and automatic refresh setting easy on screen, reduces sequence programs and enables easy setting and operation check.

**1.2 Functions Added for Function Version C**

The functions added for the function Version C Q64RD are listed below.

Item	Function overview	Reference section
Online module change	You can change the module without stopping the system. The PLC CPU of function version C or later is required.	Chapter 7
Mode switching that does not require PLC CPU to be reset	Using the mode switching setting (buffer memory addresses 158, 159: Un\G158, Un\G159) and operating condition setting request (Y9), the module is switched between the normal mode and offset/gain setting mode without the PLC CPU being reset.	Section 3.4.24
	Using the dedicated instruction (G.OFFGAN), the module is switched between the normal mode and offset/gain setting mode without the PLC CPU being reset.	Appendix 3.1
	Using GX Configurator-TI, the module is switched between the normal mode and offset/gain setting mode without the PLC CPU being reset.	Section 5.6.2

**POINT**

- (1) Refer to Appendix 2.1 for the function comparison between function versions.
- (2) Refer to Section 2.2 for the method of confirming the function version.

## 2 SYSTEM CONFIGURATION

## 2.1 Applicable Systems

This section describes the system configuration for the Q64RD/Q64RD-G.

## (1) Applicable module and number of modules

The following are the CPU module and network module (for remote I/O stations) for which the Q64RD/Q64RD-G can be installed and the number of modules that can be installed.

Applicable module	Number of modules	Remarks	
CPU module	Q00JCPU	Maximum 16	(* 1)
	Q00CPU Q01CPU	Maximum 24	
	Q02CPU Q02HCPU Q06HCPU Q12HCPU Q25HCPU	Maximum 64	Can be installed in Q mode only (* 1)
	Q12PHCPU Q25PHCPU	Maximum 64	(* 1)
Network module	QJ72LP25-25 QJ72BR15 QJ72LP25G QJ71LP25GE	Maximum 64	MELSECNET/H Remote I/O station (* 2)

\* 1 See User's Manual (Function Explanation, Program Fundamentals) for the CPU module to use.

\* 2 See Q Corresponding MELSECNET/H Network System Reference Manual (Remote I/O network).

## (2) Base Unit in which the conversion module can be installed

The Q64RD/Q64RD-G can be installed in any I/O slot (\*3) of the base unit. However, a power shortage may occur depending on the combination with other installed modules and the number of modules used, so always take into consideration the power supply capacity when installing modules.

\* 3 Limited to within the range of I/O points of the CPU module and network module (for remote I/O stations).

## (3) When using a multiple PLC system

First read the QCPU (Q mode) user's manual (Function Explanation, Program Fundamentals) if the Q64RD/Q64RD-G is used with a multiple PLC system.

## (a) Compatible Q64RD/Q64RD-G

Use a Q64RD/Q64RD-G of function version B or higher if using the module in a multiple PLC system.

## (b) Intelligent function module parameters

Write the intelligent function module parameters to only the control PLC of the Q64RD/Q64RD-G.

## (4) In the case of online module change

To make an online module change, use the module of function version C or later.

(5) Software packages for Q64RD

The following shows relation between the systems using the Q64RD and applicable software packages.

The GX Developer is necessary when using a Q64RD.

		Software Version	
		GX Developer	GX Configurator-TI *4
Q00J/Q00/Q01CPU	Single PLC system	Version 7 or later	Version 1.10L or later
	Multiple PLC system	Version 8 or later	
Q02/Q02H/Q06H/ Q12H/Q25HCPU	Single PLC system	Version 4 or later	Version 1.00A or later
	Multiple PLC system	Version 6 or later	
Q12PH/Q25PHCPU	Single PLC system	Version 7.10L or later	Version 1.13P or later
	Multiple PLC system		
If installed in a MELSECNET/H remote I/O station		Version 6 or later	Version 1.00A or later

\*4 The product of Version 1.14Q or earlier is not compatible with "normal mode - offset/gain setting mode switching" and "OMC refresh data". Use the product of Version 1.15R or later.

(6) Software packages for Q64RD-G

The following shows relation between the systems using the Q64RD-G and applicable software packages.

The GX Developer is necessary when using a Q64RD-G.

		Software Version	
		GX Developer	GX Configurator-TI
Q00J/Q00/Q01CPU	Single PLC system	Version 7 or later	Version 1.17T or later
	Multiple PLC system	Version 8 or later	
Q02/Q02H/Q06H/ Q12H/Q25HCPU	Single PLC system	Version 4 or later	
	Multiple PLC system	Version 6 or later	
Q12PH/Q25PHCPU	Single PLC system	Version 7.10L or later	
	Multiple PLC system		
If installed in a MELSECNET/H remote I/O station		Version 6 or later	

<b>POINT</b>
<p>(1) The Q64RD of function version A is not available.                  The Q64RD-G of function version A and B is not available.                  The products of function version C include the functions of version A and B.</p> <p>(2) Depending on the version of GX Configurator-TI, applicable system, CPU module and functions of Q64RD varies.</p>




2.2 How to Check the Function Version and Software Version

This section describes how to check the function version of the Q64RD/Q64RD-G and the GX Configuration-TI software version.

(1) How to check the function version of the Q64RD/Q64RD-G

- (a) To check the version using the "SERIAL column of the rating plate" located on the side of the module

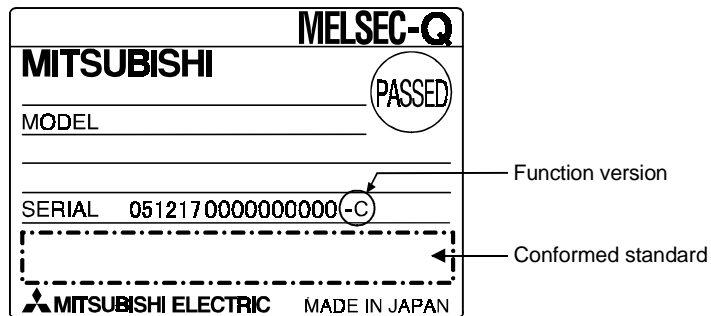


- (b) To check the version using the GX Developer  
See Section 8.2.10 of this manual.

(2) How to check the GX Configuration-TI software version

The GX Configuration-TI software version can be checked in GX Developer's "Product information" screen.

[Startup procedure]

GX Developer → "Help" → Product information

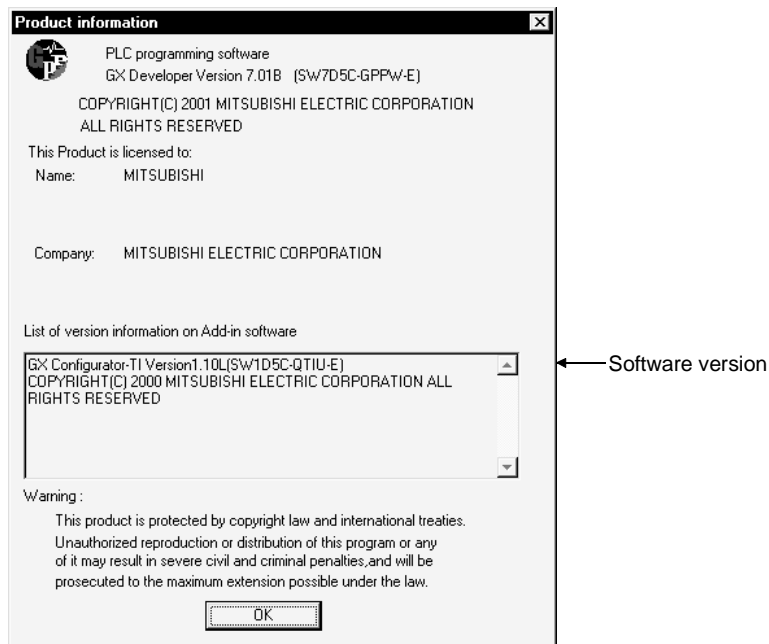

(In the case of GX Developer Version 7)

## 3 SPECIFICATIONS

## 3.1 Performance Specifications

The following are the performance specifications of the Q64RD/Q64RD-G.

## 3.1.1 Specifications of Q64RD

Item		Specifications													
Number of channels		4 channels													
Output	Temperature conversion value	16-bit, signed binary data (-2000 to 8500: Value to the first decimal place × 10 times) 32-bit, signed binary data (-200000 to 850000: Value to the third decimal place × 1000 times)													
	Scaling value	16-bit, signed binary													
Usable platinum RTD		Pt100(JIS C1604-1997, IEC 751 1983), JPt100(JIS C1604-1981)													
Measured temperature range	Pt100	-200 to 850°C													
	JPt100	-180 to 600°C													
Range changing	Pt100	-20 to 120°C / -200 to 850°C													
	JPt100	-20 to 120°C / -180 to 600°C													
Accuracy *1	Ambient temperature 0 to 55°C	± 0.25% (Accuracy relative to maximum value)													
	Ambient temperature 25±5°C	± 0.08% (Accuracy relative to maximum value)													
Resolution		0.025°C													
Conversion speed		40ms/channel *2													
Number of analog input points		4 channels/module													
Temperature detecting output current		1mA													
E <sup>2</sup> PROM write count		Max. 100 thousand times													
Isolation	<table border="1"> <thead> <tr> <th>Specific isolated area</th> <th>Isolation method</th> <th>Dielectric withstand voltage</th> <th>Isolation resistance</th> </tr> </thead> <tbody> <tr> <td>Between platinum temperature-measuring resistor input and PLC power supply</td> <td>Photocoupler isolation</td> <td>1780VrmsAC/ 3 cycles (Altitude 2000m)</td> <td>10MΩ or more using 500VDC isolation resistance tester</td> </tr> <tr> <td>Between platinum temperature-measuring resistor input channels</td> <td>No isolation</td> <td>-</td> <td></td> </tr> </tbody> </table>			Specific isolated area	Isolation method	Dielectric withstand voltage	Isolation resistance	Between platinum temperature-measuring resistor input and PLC power supply	Photocoupler isolation	1780VrmsAC/ 3 cycles (Altitude 2000m)	10MΩ or more using 500VDC isolation resistance tester	Between platinum temperature-measuring resistor input channels	No isolation	-	
	Specific isolated area	Isolation method	Dielectric withstand voltage	Isolation resistance											
	Between platinum temperature-measuring resistor input and PLC power supply	Photocoupler isolation	1780VrmsAC/ 3 cycles (Altitude 2000m)	10MΩ or more using 500VDC isolation resistance tester											
Between platinum temperature-measuring resistor input channels	No isolation	-													
Wire break detection	Yes (Each channel independent) *3														
Number of occupied points		16 points													
Connection terminals		18-point terminal block													
Applicable wire size		0.3 to 0.75mm <sup>2</sup>													
Applicable crimping terminals		1.25-3 R1.25-3 (Sleeved crimping terminals are unusable)													
Cables between Q64RD and platinum RTD		Refer to Section 3.1.3.													
Internal current consumption (5VDC)		0.60A													
Weight		0.17kg													
Outline dimensions		98(H) × 27.4(W) × 90(D)mm													

\*1: The selection ranges and accuracies have the following relationships.

Selection Range	Pt100 and JPt100 :	Pt100 :	JPt100 :
Ambient Temperature	-20 to 120°C	-200 to 850°C	-180 to 600°C
0 to 55°C	±0.3°C	±2.125°C	±1.5°C
25±5°C	±0.096°C	±0.68°C	±0.48°C

\*2: The conversion speed is a period from when a temperature is input and converted into a corresponding digital value until the value is stored into the buffer memory.

When two or more channels are used, the conversion speed is "40ms × number of conversion enabled channels".

\*3: At wire break detection, the temperature conversion value right before wire break occurrence is held.

3.1.2 Specifications of Q64RD-G

Item		Specifications										
Number of channels		4 channels										
Output	Measured temperature value	16-bit, signed binary data (-2000 to 8500: Value to the first decimal place × 10 times) 32-bit, signed binary data (-200000 to 850000: Value to the third decimal place × 1000 times)										
	Scaling value	16-bit, signed binary data										
Usable RTD		Pt100 (JIS C1604-1997, IEC 751 1983), JPt100 (JIS C1604-1981), Ni100Ω (DIN43760 1987)										
Measured temperature range	Pt100	-200 to 850°C										
	JPt100	-180 to 600°C										
	Ni100Ω	-60 to 180°C										
Range changing	Pt100	-20 to 120°C / 0 to -200°C / -200 to 850°C										
	JPt100	-20 to 120°C / 0 to -200°C / -180 to 600°C										
	Ni100Ω	-										
Accuracy *1 (Accuracy relative to maximum value of selection range)	Reference accuracy *2		Within ±0.04%									
	Temperature coefficient *3	Pt100/JPt100 (-20 to 120°C)	±70ppm/°C (±0.0070%/°C)									
		Pt100/JPt100 (0 to 200°C)	±65ppm/°C (±0.0065%/°C)									
		Pt100/JPt100 (-200 to 850°C)	±50ppm/°C (±0.0050%/°C)									
		Pt100/JPt100 (-60 to 180°C)	±70ppm/°C (±0.0070%/°C)									
Resolution		0.025°C										
Conversion speed		40ms/channel *4										
Number of analog input points		4 channels/module										
Temperature detecting output current		1mA										
E <sup>2</sup> PROM write count		Max. 100000 times										
Isolation		<table border="1"> <thead> <tr> <th>Specific isolated area</th> <th>Isolation method</th> <th>Dielectric withstand voltage</th> <th>Isolation resistance</th> </tr> </thead> <tbody> <tr> <td>Between temperature-measuring resistor input and PLC power supply</td> <td>Photocoupler isolation</td> <td rowspan="2">1780VrmsAC/3 cycles (Altitude 2000m)</td> <td rowspan="2">10MΩ or more using 500VDC isolation resistance tester</td> </tr> <tr> <td>Between temperature-measuring resistor input channels</td> <td>Transformer isolation</td> </tr> </tbody> </table>	Specific isolated area	Isolation method	Dielectric withstand voltage	Isolation resistance	Between temperature-measuring resistor input and PLC power supply	Photocoupler isolation	1780VrmsAC/3 cycles (Altitude 2000m)	10MΩ or more using 500VDC isolation resistance tester	Between temperature-measuring resistor input channels	Transformer isolation
Specific isolated area	Isolation method	Dielectric withstand voltage	Isolation resistance									
Between temperature-measuring resistor input and PLC power supply	Photocoupler isolation	1780VrmsAC/3 cycles (Altitude 2000m)	10MΩ or more using 500VDC isolation resistance tester									
Between temperature-measuring resistor input channels	Transformer isolation											
Wire break detection		Yes (Each channel independent) *5										
Number of occupied points		16 points										
Connection terminals		18-point terminal block										
Applicable wire size		0.3 to 0.75mm <sup>2</sup>										
Applicable crimping terminals		1.25-3 R1.25-3 (Sleeved crimping terminals are not usable.)										
Cables between Q64RD-G and RTD		Refer to Section 3.1.3.										
Internal current consumption (5V DC)		0.62A										
Weight		0.20kg										
Outline dimensions		98(H) × 27.4(W) × 112(D)mm										

\*1 The selection ranges and accuracies have the following relationships.

Ambient Temperature \ Selection Range	Pt100 and JPt100 :	Pt100 :	JPt100 :
	-20 to 120°C	-200 to 850°C	-180 to 600°C
0 to 55°C	±0.300°C	±1.615°C	±±1.140°C
25±5°C	±0.090°C	±0.553°C	±0.390°C

Ambient Temperature \ Selection Range	Pt100 and JPt100 :	Pt100 :
	0 to 200°C	-60 to 180°C
0 to 55°C	±0.470°C	±0.450°C
25±5°C	±0.145°C	±0.135°C

\*2 Accuracy in ambient temperature and conductor resistance when the offset/gain setting is set.

\*3 Accuracy per 1-degree temperature change

Example) Accuracy for the case of changing from 25 to 30°C

$$0.04\% \text{ (Reference accuracy)} + 0.0070\%/^{\circ}\text{C} \text{ (Temperature coefficient)} \times 5^{\circ}\text{C} \text{ (Temperature difference)} = 0.075\%$$

\*4 The conversion speed is a period from when a temperature is input and converted into a corresponding digital value until the value is stored into the buffer memory.

When two or more channels are used, the conversion speed is "40ms × number of conversion enabled channels".

\*5 At wire break detection, the temperature conversion value right before wire break occurrence is held.


3.1.3 Specifications for RTD Connection

This section explains the specifications for connection of the Q64RD/Q64RD-G and platinum temperature-measuring resistors.

(1) For 3-wire type


The conductor resistance value should satisfy the condition of  $1) + 2) \leq 2\Omega$  max.

In addition, the difference of the conductor resistance value between 1) and 2) should be  $10\Omega$  max.

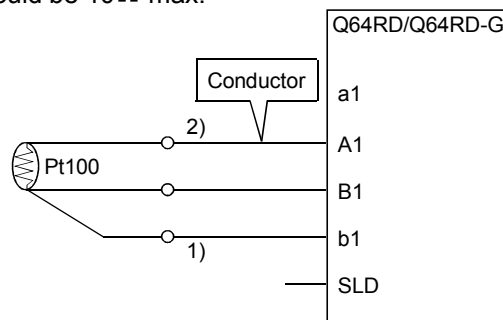

(2) For 4-wire type

The conductor resistance value should satisfy the condition of  $1) + 2) \leq 2\Omega$  max.

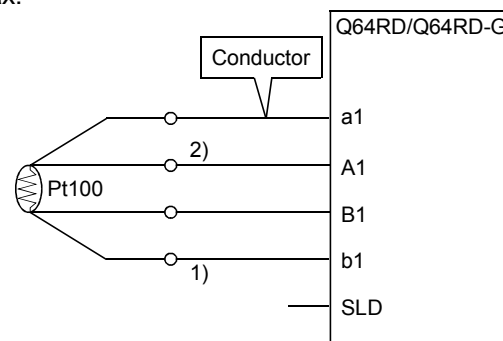

**POINT**

Conductor resistance values may be an error factor in the temperature measurement. The error arisen between the Q64RD/Q64RD-G and the temperature-measuring resistor (between the conductor resistance value 1) + 2) and measured temperature value) is Max.  $0.007^{\circ}\text{C} / 2\Omega$  (Q64RD) or Max.  $0.003^{\circ}\text{C} / 2\Omega$  (Q64RD-G). This error can be corrected by the offset/gain setting. When making offset/gain adjustment, set the conductor resistance value actually used.

## 3.2 Function List

The following table lists the Q64RD/Q64RD-G functions.

Item	Description	Refer To
Temperature conversion function	This function allows temperature data to be imported by connecting a temperature-measuring resistor. Temperature data are 16-bit signed binary (-2000 to 8500), 32-bit signed binary (-200000 to 850000) and stored into buffer memory.	Section 3.4.9, 3.4.18
Conversion enable/disable function	This function specifies whether temperature conversion is enabled or disabled on each channel. Setting temperature conversion enable/disable reduces the processing time of unused channels. In addition, it prevents unnecessary disconnection detection of unused channels.	Section 3.4.2, 3.4.4, 3.4.5
Disconnection detection function	This function detects the disconnection of the connected temperature-measuring resistor on each channel.	Section 3.4.16
Range changing function	This function changes the measured temperature range.	Section 4.5
Temperature-measuring resistor selection function	This function sets the type of the temperature-measuring resistor per channel.	Section 4.5
Warning output function	This function outputs a warning if a temperature falls outside the user-set temperature range.	Section 3.4.14, 3.4.15
Temperature conversion system	(1) Sampling processing Values input by each channel are successively converted into temperature values and output as digital values. (2) Averaging processing (a) Time averaging Temperature values converted by each channel are averaged in terms of time and the average is output as a digital value. (b) Count averaging Temperature values converted by each channel are averaged in terms of count and the average is output as a digital value. (c) Moving average (Q64RD-G only) Digital output values sampled at specified number of times are averaged. (3) Primary delay filter (Q64RD-G only) By a preset time constant, digital output values are smoothed.	Section 3.2.1
Scaling function	This function can convert a temperature conversion value into a preset range ratio (%) and import it into buffer memory.	Section 3.4.17, 3.4.19, 3.4.20
Offset/gain setting function	This function compensates for an error of a temperature conversion value.	Section 3.4.22, 4.6
Online module change	A module change is made without the system being stopped.	Chapter 7

## 3.2.1 Temperature conversion system

## (1) Sampling processing

A temperature input value is converted into a temperature one by one and its digital output value is stored into buffer memory.

Sampling processing time varies with the number of used channels (number of channels set to enable temperature conversion).

$$(\text{Processing time}) = (\text{number of used channels}) \times (40\text{ms})$$

[Example]

Sampling time is 120ms when three channels, channels 1, 2 and 4, are enabled for conversion.

$$\underline{3 \text{ channels} \times 40\text{ms} = 120\text{ms}}$$

## (2) Averaging processing

## (a) Time-specified averaging processing

When this option is specified for a channel, values input from the channel are converted into temperature values consecutively for the preset length of time.

Then, the total amount of values after eliminating the maximum and minimum values is averaged to be stored into the buffer memory.

The processing count within the preset time varies with the number of used channels (number of channels set to enable temperature conversion).

$$(\text{Processing count}) = \frac{(\text{preset time})}{(\text{number of used channels}) \times (40\text{ms})}$$

[Example]

The sampling count is 4.75 when four channels, channels 1, 2, 3 and 4, are enabled for conversion and the preset time is 760ms.

$$\underline{760\text{ms} \div (4 \text{ channels} \times 40\text{ms}) = 4.75}$$

Since the fractional portion of an indivisible value is dropped, the sampling count is 4 times.

## (b) Count-specified averaging processing

When this option is specified for a channel, values input from the channel are converted into temperature values for the preset number of times. Then, the total amount of values after eliminating the maximum and minimum values is averaged to be stored into the buffer memory.

The time taken to store a count-averaged value into buffer memory varies with the number of used channels (number of channels set to enable temperature conversion).

$$(\text{Processing time}) = (\text{preset count}) \times (\text{number of used channels}) \times (40\text{ms})$$

[Example]



An average value is output ever 320ms when two channels, channels 3 and 4, are enabled for conversion and the preset count is 4.

$$\underline{4 \text{ times} \times (2 \text{ channels} \times 40\text{ms}) = 320\text{ms}}$$

(c) Processing using moving average

Temperature conversion values are taken at every sampling interval for the specified number of times. The maximum and minimum values are eliminated and the other values are averaged and stored in the buffer memory. Since the calculation is done for each sampling period, the latest digital output value can be obtained.

Moving average processing in the case of 4-time setting

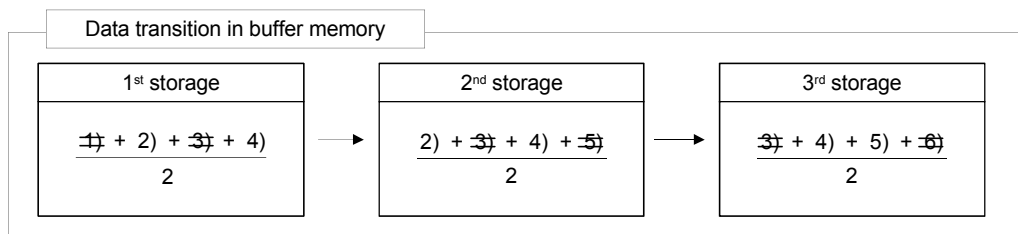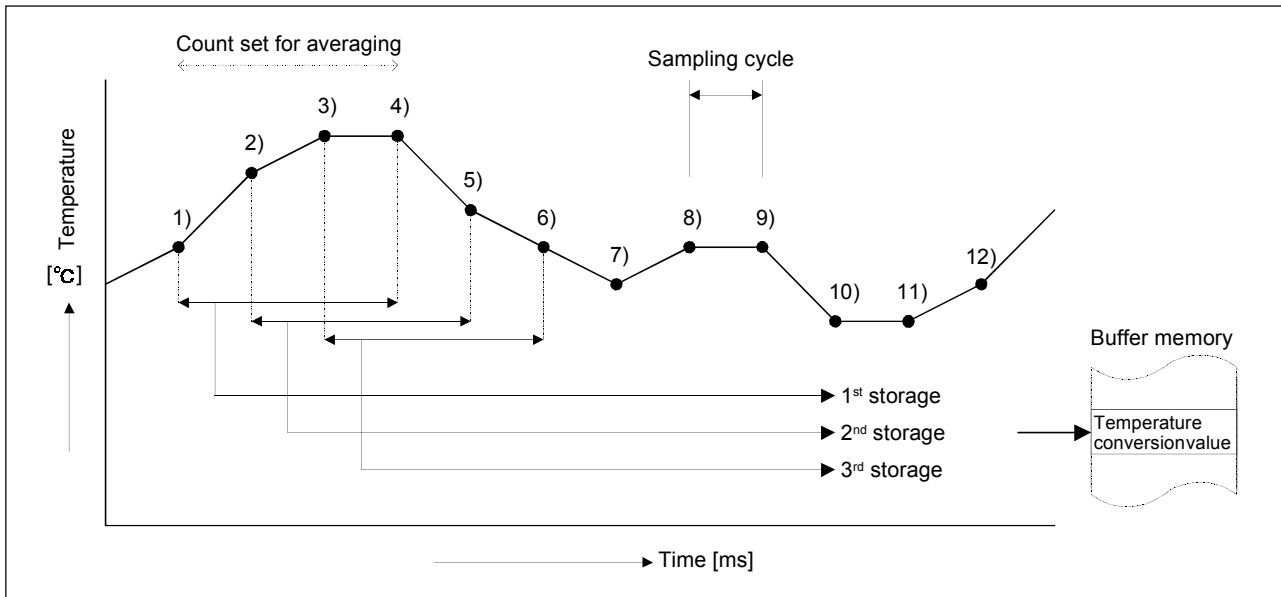



(3) Primary delay filter (Q64RD-G only)

By setting a time constant, excessive noise is eliminated and smoothed temperature value can be output. Depending the time constant, the degree of smoothness is changed.

The relational expression between the time constant and digital output value is shown below.

[In the case of n=1]

$$Y_n = 1$$

[In the case of n=2]

$$Y_n = X_{n-1} + \frac{\Delta t}{\Delta t + TA}(X_n - X_{n-1})$$

[In the case of n ≥ 3]

$$Y_n = Y_{n-1} + \frac{\Delta t}{\Delta t + TA}(X_n - Y_{n-1})$$

Y<sub>n</sub>: Current digital output value

Δt: A/D conversion time (0.04ms)

N: Sampling count

TA: Time constant (s)


Y<sub>n-1</sub>: Preceding digital output value

X<sub>n</sub>: Digital output value before smoothing

\* Conversion completion flag (buffer memory address10: Un\G10) turns on at n ≥ 2.

[Example] When the temperature input value is changed from 25.000 to 26.000°C  
In the time constant setting of 1000ms (1s), the digital output value is changed as shown below.

At 1000ms (1s) after the temperature input value is changed to 26.000°C, the digital output value reaches 63.2% of the value output in the case of selecting the sampling processing.

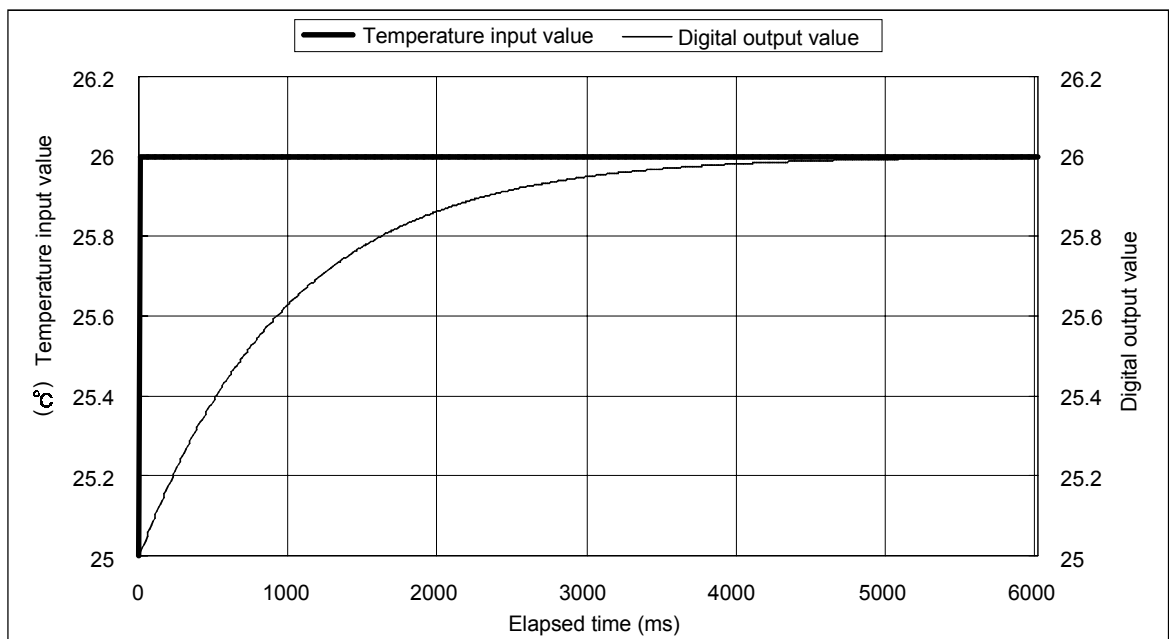

### 3.3 I/O Signals Transferred to/from PLC CPU

This section describes the I/O signal assignment and signal functions.

#### 3.3.1 I/O signal list

The following are the I/O signals of the Q64RD/Q64RD-G.

The I/O numbers (X/Y) given in this chapter and later assume that the first I/O number of the Q64RD/Q64RD-G is set to 0.

Input Signal (Signal Direction: PLC CPU ← Q64RD/Q64RD-G)		Output Signal (Signal Direction: PLC CPU → Q64RD/Q64RD-G)	
Device No.	Signal name	Device No.	Signal name
X0	Module ready	Y0	Reserved *
X1	CH1 Offset/Gain Setting Status Signal	Y1	CH1 Offset Setting Request
X2	CH2 Offset/Gain Setting Status Signal	Y2	CH1 Gain Setting Request
X3	CH3 Offset/Gain Setting Status Signal	Y3	CH2 Offset Setting Request
X4	CH4 Offset/Gain Setting Status Signal	Y4	CH2 Gain Setting Request
X5	Reserved *	Y5	CH3 Offset Setting Request
X6		Y6	CH3 Gain Setting Request
X7		Y7	CH4 Offset Setting Request
X8		Y8	CH4 Gain Setting Request
X9	Operating Condition Setting Completion Signal	Y9	Operating Condition Setting Request
XA	Offset/Gain Setting Mode Status Flag	YA	User Range Write Request
XB	Reserved *	YB	Reserved *
XC	Disconnection Detection Flag	YC	
XD	Warning Output Signal	YD	
XE	Conversion Completion Flag	YE	
XF	Error Flag	YF	Error Clear Request

#### POINT

The reserved signals marked \* are used by the system and are unavailable for the user. Should they be turned on/off in a sequence program, we cannot guarantee the functions of the Q64RD/Q64RDG.



3.3.2 I/O signal details


The following are details of the Q64RD/Q64RD-G I/O signals.

(1) Input signals

Device No.	Signal Name	Description
X0	Module Ready	<p>(1) If the module is in the normal mode at power-on or resetting of the PLC CPU, this signal turns on to start temperature conversion as soon as it gets ready.</p> <p>(2) When this signal (X0) is off in the normal mode, temperature conversion is not performed. In the offset/gain setting mode, temperature conversion is performed even if this signal (X0) is off.</p> <p>(3) This signal (X0) turns off when:</p> <ul style="list-style-type: none"> <li>• The module is in the offset/gain setting mode;</li> <li>• The Q64RD/Q64RD-G is in a watchdog timer error *1</li> </ul>
X1 X2 X3 X4	CH□ Offset/Gain Setting Status Signal	<p>(1) This signal is used as an interlock condition to turn on/off the CH□ Offset Setting Request (Y1, Y3, Y5, Y7)/CH□ Gain Setting Request (Y2, Y4, Y6, Y8) when offset/gain setting is made.</p> <p>(2) When the CH□ Offset Setting Request (Y1, Y3, Y5, Y7) or CH□ Gain Setting Request (Y2, Y4, Y6, Y8) is turned from ON to OFF in the offset/gain setting mode, this signal (X1 to 4) corresponding to the user-set, conversion-enabled channel turns on.</p> <p>CH□ Offset/Gain Setting Status Signal (X1 to 4)</p> <p>CH□ Offset Setting Request (Y1, Y3, Y5, Y7)</p> <p>CH□ Offset/Gain Setting Status Signal (X1 to 4)</p> <p>CH□ Gain Setting Request (Y2, Y4, Y6, Y8)</p>
X9	Operating Condition Setting Completion Signal	<p>(1) This signal is used as an interlock condition to turn on/off the Operating Condition Setting Request (Y9) when the "Conversion enable/disable setting", "CH□ time/count averaging setting (Q64RD)", "CH□ time/count/moving average/time constant setting (Q64RD-G)", "averaging processing specification", "Extended averaging processing specification", "Warning output enable/disable setting", "CH□ scaling range upper/lower limit value", "CH□ scaling width upper/lower limit value" or "CH□ warning output upper/lower limit value" is changed.</p> <p>(2) Conversion processing is not performed when this signal (X9) is off.</p> <p>(3) This signal (X9) turns off when:</p> <ul style="list-style-type: none"> <li>• The Module Ready (X0) is off in the normal mode; or</li> <li>• The Operating Condition Setting Request (Y9) is on.</li> </ul> <p>Operating Condition Setting Completion Signal (X9)</p> <p>Operating Condition Setting Request (Y9)</p> <p>Conversion Completion Flag (XE)</p>


\*1 Occurs if program operation is not completed within the intended time due to a hardware fault of the Q64RD/Q64RD-G. The RUN LED of the Q64RD/Q64RD-G goes off when a watchdog timer error occurs.

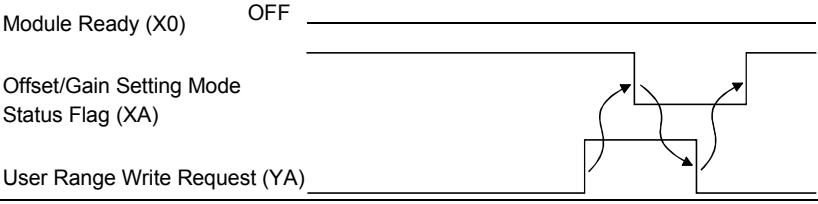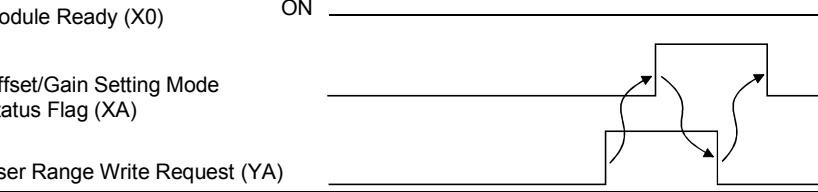Device No.	Signal Name	Description
XA	Offset/Gain Setting Mode Status Flag	<p>[In offset/gain setting mode]</p> <p>(1) This signal is used as an interlock condition to turn on/off the User Range Write Request (YA) when the value at adjusted according to the offset/gain setting is stored.</p> <p>(2) See Section 4.6 for the offset/gain settings.</p> 
		<p>[In normal mode]</p> <p>(1) This signal is used as an interlock condition to turn on/off the User Range Write Request (YA) when the user range is restored.</p> <p>(2) Refer to Chapter 7 for the user range restoration.</p> 
XC	Disconnection Detection Flag	<p>(1) This signal (XC) is turned on by the RTD input circuit of the conversion-enabled channel when any of the input signal lines including one of the RTD the thermocouple is disconnected. At the same time, the Conversion Completion Signal (XE) turns off, and the conversion update of the disconnection-detected channel stops but the conversion of the channel not disconnected continues.</p> <p>(2) When this signal (XC) has turned on, the temperature conversion value is held at the value immediately before disconnection detection, and the Conversion Completion Flag (XE) is turned off.</p> <p>(3) Remove the cause of disconnection and then turn on the Error Clear Request (YF) to turn off this signal (XC).</p> <p>(4) When disconnection is recovered, updating of the temperature conversion value is resumed regardless of whether this signal (XC) was reset or not, and after the first updating, the Conversion Completion Flag (XE) turns on again.</p>
XD	Warning Output Signal	<p>(1) This signal turns on when the measured temperature value has fallen out of the temperature range set in the warning output upper/lower limit values (buffer memory addresses 85 to 100: Un\G85 to 100) on any of the conversion-enabled channels.</p> <p>(2) This signal turns off automatically as soon as the measured temperature values returned to within the ranges on conversion-enabled all channel.</p>

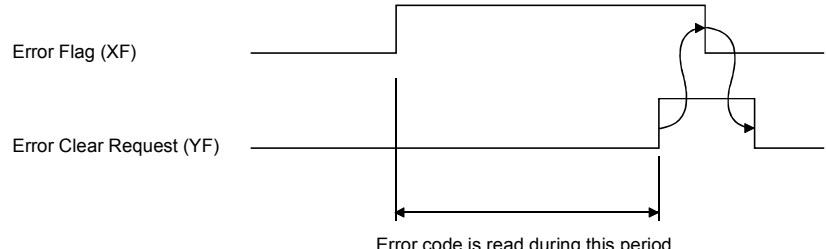Device No.	Signal Name	Description
XE	Conversion Completion Flag	<p>(1) This signal (XE) turns on when the temperature conversion values of all conversion-enabled channels are stored into buffer memory after power-on or hardware reset.</p> <p>(2) When averaging processing is performed, this signal also turns on when the temperature conversion values are stored into buffer memory after completion of averaging processing.</p> <p>(3) This signal (XE) varies as described below depending on whether the Operating Condition Setting Completion Signal (X9) has turned on or off.</p> <ul style="list-style-type: none"> <li>• When the Operating Condition Setting Completion Signal (X9) has turned on (stop → conversion)               <ol style="list-style-type: none"> <li>1) Temperature conversions of the enabled channels are started.</li> <li>2) After the temperature conversion values are stored into buffer memory, the conversion completion flags (buffer memory address 10: Un\G10) are turned on.</li> <li>3) This signal (XE) is turned on after the temperature conversion values of all conversion-enabled channels enabled for conversion are stored into buffer memory.</li> </ol> </li> <li>• When the Operating Condition Setting Completion Signal (X9) has turned off (conversion → stop)               <ol style="list-style-type: none"> <li>1) The conversion completion flags (buffer memory address 10: Un\G10) of all channels are turned off.</li> <li>2) This signal (XE) is turned off.                   <p style="margin-left: 20px;">Note that if conversion is stopped, the temperature conversion values stored in buffer memory are held at the data immediately before the stop.</p> </li> </ol> </li> </ul> <p>(4) This signal (XE) does not turn on when all channels are disabled for conversion.</p>
XF	Error Flag	<p>(1) This signal (XF) turns on when an error occurs.</p> <p>(2) To clear the error code, turn on the Error Clear Request (YF).</p> <div style="text-align: center;">  <p style="text-align: center;">Error code is read during this period.</p> </div>

## (2) Output signals

Device No.	Signal name	Description
Y1 Y3 Y5 Y7	CH□ Offset Setting Request	<p>(1) This signal is made valid in the offset/gain setting mode.</p> <p>(2) This signal corrects the temperature conversion value to be an offset temperature set value when it is on.</p> <p>(3) When this signal turns on while the Gain Setting Request on the same channel is on or they turn on simultaneously, an error will occur and the operation in (2) not performed.</p> <p>(4) For the on/off timing, refer to the field of the CH□ Offset/Gain Setting Status Signal (X1 to 4).</p>
Y2 Y4 Y6 Y8	CH□ Gain Setting Request	<p>(1) This signal is made valid in the offset/gain setting mode.</p> <p>(2) This signal corrects the temperature conversion value to be a gain temperature set value when it is on.</p> <p>(3) When this signal turns on while the Offset Setting Request on the same channel is on or they turn on simultaneously, an error will occur and the operation in (2) not performed.</p> <p>(4) For the on/off timing, refer to the field of the CH□ Offset/Gain Setting Status Signal (X1 to 4).</p>
Y9	Operating condition setting request	<p>(1) This signal is turned on when the "Conversion enable/disable setting", "CH□ time/count averaging setting (Q64RD)", "CH□ time/count/moving average/time constant setting (Q64RD-G)", "Averaging processing selection", "Warning output enable/disable setting", "CH□ scaling range upper/lower limit value", "CH□ scaling width upper/lower limit value" or "CH□ warning output upper/lower limit value" is made valid.</p> <p>(2) When this signal turns on, the Disconnection Detection Flag (XC) and Warning Output Signal (XD) turn off.</p> <p>(3) For the on/off timing, refer to the field of the Operating Condition Setting Completion Signal (X9).</p>
YA	User Range Write Request	<p>[In offset/gain setting mode]</p> <p>(1) This turns on when the value adjusted based on the offset/gain settings is stored in the E<sup>2</sup>PROM.</p> <p>(2) See the XA column for ON/OFF timing. See Section 4.6 for offset/gain settings.</p> <p>[In normal mode]</p> <p>(1) This signal turns on when the user range is restored.</p> <p>(2) Refer to the field of XA for the ON/OFF timing. Refer to Chapter 7 for user range restoration.</p>
YF	Error Clear Request	<p>(1) This signal is turned on when the Error Flag (XF) and Disconnection Detection Flag (XC) are cleared. However, the set value error of the intelligent function module switch setting cannot be cleared. Correct the set value.</p> <p>(2) For the on/off timing, refer to the field of the Error Flag (XF).</p>

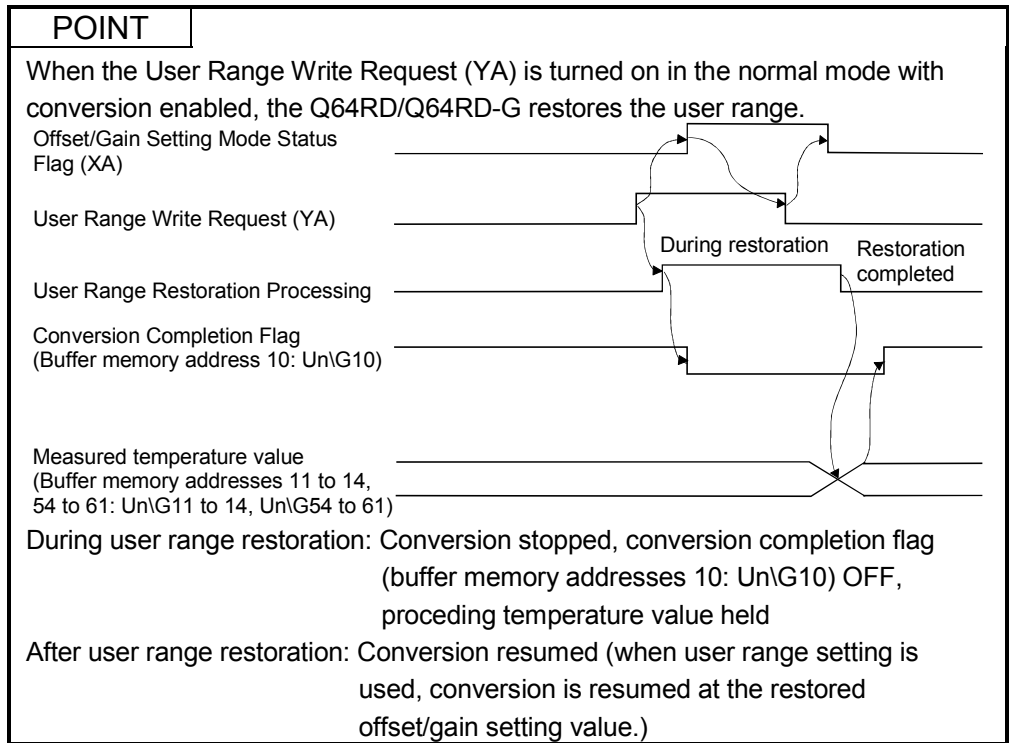

## 3.4 Buffer Memory

## 3.4.1 Buffer memory assignment (Q64RD)

This section describes the assignment of the Q64RD buffer memory.



Addresses		Description	RW * 1	Addresses		Description	RW * 1
Hex.	Dec.			Hex.	Dec.		
01 H	0	Conversion enable/disable setting	R/W * 3	3E H	62	CH1 scaling range lower limit value (L) (H)	R/W * 3
02 H	1	CH1 time/count averaging setting	R/W * 3	3F H	63		
03 H	2	CH2 time/count averaging setting	R/W * 3	40 H	64	CH1 scaling range upper limit value (L) (H)	R/W * 3
04 H	3	CH3 time/count averaging setting	R/W * 3	41 H	65		
05 H	4	CH4 time/count averaging setting	R/W * 3	42 H	66	CH2 scaling range lower limit value (L) (H)	R/W * 3
06 H	5	Reserved * 2	—	43 H	67		
to	to			44 H	68	CH2 scaling range upper limit value (L) (H)	R/W * 3
08 H	8			45 H	69		
09 H	9	Averaging processing setting	R/W * 3	46 H	70	CH3 scaling range lower limit value (L) (H)	R/W * 3
0A H	10	Conversion completion flag	R	47 H	71		
0B H	11	CH1 measured temperature value (16bit)	R	48 H	72	CH3 scaling range upper limit value (L) (H)	R/W * 3
0C H	12	CH2 measured temperature value (16bit)	R	49 H	73		
0D H	13	CH3 measured temperature value (16bit)	R	4A H	74	CH4 scaling range lower limit value (L) (H)	R/W * 3
0E H	14	CH4 measured temperature value (16bit)	R	4B H	75		
0F H	15	Reserved * 2	—	4C H	76	CH4 scaling range upper limit value (L) (H)	R/W * 3
to	to			4D H	77		
12 H	18			4E H	78	CH1 scaling width lower limit value	R/W * 3
13 H	19	Error code	R	4F H	79	CH1 scaling width upper limit value	R/W * 3
14 H	20	Setting range	R	50 H	80	CH2 scaling width lower limit value	R/W * 3
15 H	21	Reserved * 2	—	51 H	81	CH2 scaling width upper limit value	R/W * 3
to	to			52 H	82	CH3 scaling width lower limit value	R/W * 3
2E H	46			53 H	83	CH3 scaling width upper limit value	R/W * 3
2F H	47	Warning output enable/disable setting	R/W * 3	54 H	84	CH4 scaling width lower limit value	R/W * 3
30 H	48	Warning output flag	R	55 H	85	CH4 scaling width upper limit value	R/W * 3
31 H	49	Disconnection detection flag	R	56 H	86	CH1 warning output lower lower limit value (L) (H)	R/W * 3
32 H	50	CH1 scaling value	R	57 H	87		
33 H	51	CH2 scaling value	R	58 H	88	CH1 warning output lower upper limit value (L) (H)	R/W * 3
34 H	52	CH3 scaling value	R	59 H	89		
35 H	53	CH4 scaling value	R	5A H	90	CH1 warning output upper lower limit value (L) (H)	R/W * 3
36 H	54	CH1 measured temperature value (32bit)	R	5B H	91		
37 H	55			5C H	92	CH1 warning output upper upper limit value (L) (H)	R/W * 3
38 H	56	CH2 measured temperature value (32bit)	R	5D H	93		
39 H	57			5E H	94	CH2 warning output lower lower limit value (L) (H)	R/W * 3
3A H	58	CH3 measured temperature value (32bit)	R	5F H	95		
3B H	59			60 H	96	CH2 warning output lower upper limit value (L) (H)	R/W * 3
3C H	60	CH4 measured temperature value (32bit)	R	61 H	97		
3D H	61						



Addresses		Description	R/W * 1	Addresses		Description	R/W		
Hex.	Dec.			Hex.	Dec.				
62H	98	CH2 warning output upper lower limit value	(L) (H)	R/W * 3	9EH	158	Mode switching setting	R/W	
63H	99				9FH	159			
64H	100	CH2 warning output upper upper limit value	(L) (H)	R/W * 3	A0H	160	3-wire type CH1 Factory default offset value	R/W * 4	
65H	101				A1H	161			3-wire type CH1 Factory default offset value
66H	102	CH3 warning output lower lower limit value	(L) (H)	R/W * 3	A2H	162	3-wire type CH1 Factory default gain value	R/W * 4	
67H	103				A3H	163			3-wire type CH1 Factory default gain value
68H	104	CH3 warning output lower upper limit value	(L) (H)	R/W * 3	A4H	164	3-wire type CH1 User range setting offset value	R/W * 4	
69H	105				A5H	165			3-wire type CH1 User range setting offset value
6AH	106	CH3 warning output upper lower limit value	(L) (H)	R/W * 3	A6H	166	3-wire type CH1 User range settings gain value	R/W * 4	
6BH	107				A7H	167			3-wire type CH1 User range settings gain value
6CH	108	CH3 warning output upper upper limit value	(L) (H)	R/W * 3	A8H	168	3-wire type CH1 User range settings offset resistance value	(L) (H)	R/W * 4
6DH	109				A9H	169			
6EH	110	CH4 warning output lower lower limit value	(L) (H)	R/W * 3	AAH	170	3-wire type CH1 User range settings gain resistance value	(L) (H)	R/W * 4
6FH	111				ABH	171			
70H	112	CH4 warning output lower upper limit value	(L) (H)	R/W * 3	ACH	172	4-wire type CH1 Factory default offset value	R/W * 4	
71H	113				ADH	173			4-wire type CH1 Factory default offset value
72H	114	CH4 warning output upper lower limit value	(L) (H)	R/W * 3	AEH	174	4-wire type CH1 Factory default gain value	R/W * 4	
73H	115				AFH	175			4-wire type CH1 Factory default gain value
74H	116	CH4 warning output upper upper limit value	(L) (H)	R/W * 3	B0H	176	4-wire type CH1 User range setting offset value	R/W * 4	
75H	117				B1H	177			4-wire type CH1 User range setting offset value
76H	118	CH1 offset temperature set value	(L) (H)	R/W * 3	B2H	178	4-wire type CH1 User range settings gain value	R/W * 4	
77H	119				B3H	179			4-wire type CH1 User range settings gain value
78H	120	CH1 gain temperature set value	(L) (H)	R/W * 3	B4H	180	4-wire type CH1 User range settings offset resistance value	(L) (H)	R/W * 4
79H	121				B5H	181			
7AH	122	CH2 offset temperature set value	(L) (H)	R/W * 3	B6H	182	4-wire type CH1 User range settings gain resistance value	(L) (H)	R/W * 4
7BH	123				B7H	183			
7CH	124	CH2 gain temperature set value	(L) (H)	R/W * 3	B8H	184	3-wire type CH2 Factory default offset value	R/W * 4	
7DH	125				B9H	185			3-wire type CH2 Factory default offset value
7EH	126	CH3 offset temperature set value	(L) (H)	R/W * 3	BAH	186	3-wire type CH2 Factory default gain value	R/W * 4	
7FH	127				BBH	187			3-wire type CH2 Factory default gain value
81H	128	CH3 gain temperature set value	(L) (H)	R/W * 3	BCH	188	3-wire type CH2 User range setting offset value	R/W * 4	
82H	129				BDH	189			3-wire type CH2 User range setting offset value
83H	130	CH4 offset temperature set value	(L) (H)	R/W * 3	BEH	190	3-wire type CH2 User range settings gain value	R/W * 4	
84H	131				BFH	191			3-wire type CH2 User range settings gain value
85H	132	CH4 gain temperature set value	(L) (H)	R/W * 3	C0H	192	3-wire type CH2 User range settings offset resistance value	(L) (H)	R/W * 4
86H	133				C1H	193			
87H	134	Reserved * 2	—	—	C2H	194	3-wire type CH2 User range settings gain resistance value	(L) (H)	R/W * 4
To	To				C3H	195			
9DH	157								

Addresses		Description	RW * 1	Addresses		Description	RW * 1
Hex.	Dec.			Hex.	Dec.		
C4H	196	4-wire type CH2 Factory default offset value	R/W	E2H	226	4-wire type CH3 User range settings gain value	R/W * 4
C5H	197	4-wire type CH2 Factory default offset value	R/W	E3H	227	4-wire type CH3 User range settings gain value	R/W * 4
C6H	198	4-wire type CH2 Factory default gain value	R/W	E4H	228	4-wire type CH3 User range settings offset resistance value	R/W * 4
C7H	199	4-wire type CH2 Factory default gain value	R/W	E5H	229	(L) (H)	R/W * 4
C8H	200	4-wire type CH2 User range setting offset value	R/W	E6H	230	4-wire type CH3 User range settings gain resistance value	R/W * 4
C9H	201	4-wire type CH2 User range setting offset value	R/W	E7H	231	(L) (H)	R/W * 4
CAH	202	4-wire type CH2 User range settings gain value	R/W	E8H	232	3-wire type CH4 Factory default offset value	R/W * 4
CBH	203	4-wire type CH2 User range settings gain value	R/W	E9H	233	3-wire type CH4 Factory default offset value	R/W * 4
CCH	204	4-wire type CH2 User range settings offset resistance value	R/W	EAH	234	3-wire type CH4 Factory default gain value	R/W * 4
CDH	205	(L) (H)		EBH	235	3-wire type CH4 Factory default gain value	R/W * 4
CEH	206	4-wire type CH2 User range settings gain resistance value	R/W	ECH	236	3-wire type CH4 User range setting offset value	R/W * 4
CFH	207	(L) (H)		EDH	237	3-wire type CH4 User range setting offset value	R/W * 4
D0H	208	3-wire type CH3 Factory default offset value	R/W	EEH	238	3-wire type CH4 User range settings gain value	R/W * 4
D1H	209	3-wire type CH3 Factory default offset value	R/W	EFH	239	3-wire type CH4 User range settings gain value	R/W * 4
D2H	210	3-wire type CH3 Factory default gain value	R/W	F0H	240	3-wire type CH4 User range settings offset resistance value	R/W * 4
D3H	211	3-wire type CH3 Factory default gain value	R/W	F1H	241	(L) (H)	
D4H	212	3-wire type CH3 User range settings offset value	R/W	F2H	242	3-wire type CH4 User range settings gain resistance value	R/W * 4
D5H	213	3-wire type CH3 User range settings offset value	R/W	F3H	243	(L) (H)	
D6H	214	3-wire type CH3 User range settings gain value	R/W	F4H	244	4-wire type CH4 Factory default offset value	R/W * 4
D7H	215	3-wire type CH3 User range settings gain value	R/W	F5H	245	4-wire type CH4 Factory default offset value	R/W * 4
D8H	216	3-wire type CH3 User range settings offset resistance value	R/W	F6H	246	4-wire type CH4 Factory default gain value	R/W * 4
D9H	217	(L) (H)		F7H	247	4-wire type CH4 Factory default gain value	R/W * 4
DAH	218	3-wire type CH3 User range settings gain resistance value	R/W	F8H	248	4-wire type CH4 User range setting offset value	R/W * 4
DBH	219	(L) (H)		F9H	249	4-wire type CH4 User range setting offset value	R/W * 4
DCH	220	4-wire type CH3 Factory default offset value	R/W	FAH	250	4-wire type CH4 User range settings gain value	R/W * 4
DDH	221	4-wire type CH3 Factory default offset value	R/W	FBH	251	4-wire type CH4 User range settings gain value	R/W * 4
DEH	222	4-wire type CH3 Factory default gain value	R/W	FCH	252	4-wire type CH4 User range settings offset resistance value	R/W * 4
DFH	223	4-wire type CH3 Factory default gain value	R/W	FDH	253	(L) (H)	
E0H	224	4-wire type CH3 User range setting offset value	R/W	FEH	254	4-wire type CH4 User range settings gain resistance value	R/W * 4
E1H	225	4-wire type CH3 User range setting offset value	R/W	FFH	255	(L) (H)	

- \*1 Indicates whether read/write is enabled or disabled from sequence program.  
R : Read enabled    W : Write enabled
- \*2 Reserved addresses are used by the system and are unavailable for the user.  
Should data be written to any of those addresses using a sequence program, we cannot guarantee the functions of the Q64RD.
- \*3 Data must be written to buffer memory under the interlock conditions (buffer memory write conditions) of the following I/O signals.

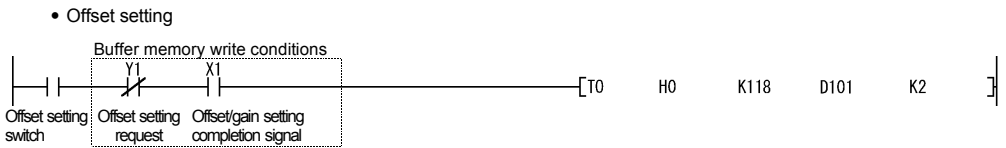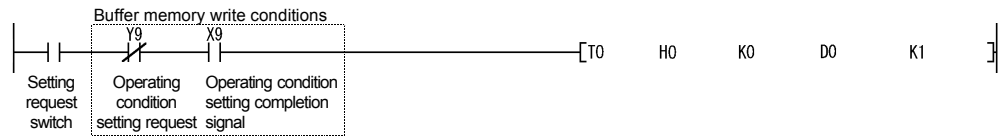

- \*4 This area is related with the user range save/restore function and allows users to re-set the offset/gain values easily in the case of online module change.

## 3.4.2 Buffer memory assignment (Q64RD-G)

This section describes the assignment of the Q64RD-G buffer memory.

Addresses		Description	RW * 1	Addresses		Description	RW * 1
Hex.	Dec.			Hex.	Dec.		
01H	0	Conversion enable/disable setting	R/W * 3	42H	66	CH2 scaling range lower limit value (L) (H)	R/W * 3
02H	1	CH1 Time/count/moving average/time constant setting	R/W * 3	43H	67		
03H	2	CH2 Time/count/moving average/time constant setting	R/W * 3	44H	68	CH2 scaling range upper limit value (L) (H)	R/W * 3
04H	3	CH3 Time/count/moving average/time constant setting	R/W * 3	45H	69		
05H	4	CH4 Time/count/moving average/time constant setting	R/W * 3	46H	70	CH3 scaling range lower limit value (L) (H)	R/W * 3
06H	5	Reserved * 2	—	47H	71		
to	to			48H	72	CH3 scaling range upper limit value (L) (H)	R/W * 3
08H	8			49H	73		
09H	9	Averaging processing specification	R/W * 3	4AH	74	CH4 scaling range lower limit value (L) (H)	R/W * 3
0AH	10	Conversion completion flag	R	4BH	75		
0BH	11	CH1 Measured temperature value (16bit)	R	4CH	76	CH4 scaling range upper limit value (L) (H)	R/W * 3
0CH	12	CH2 Measured temperature value (16bit)	R	4DH	77		
0DH	13	CH3 Measured temperature value (16bit)	R	4EH	78	CH1 scaling width lower limit value	R/W * 3
0EH	14	CH4 Measured temperature value (16bit)	R	4FH	79	CH1 scaling width upper limit value	
0FH	15	Reserved * 2	—	50H	80	CH2 scaling width lower limit value	R/W * 3
to	to			51H	81	CH2 scaling width upper limit value	R/W * 3
12H	18			52H	82	CH3 scaling width lower limit value	R/W * 3
13H	19	Error code	R	53H	83	CH3 scaling width upper limit value	R/W * 3
14H	20	Setting range 1	R	54H	84	CH4 scaling width lower limit value	R/W * 3
15H	21	Setting range 2	R	55H	85	CH4 scaling width upper limit value	R/W * 3
16H	22	Reserved * 2	—	56H	86	CH1 warning output lower lower limit value (L) (H)	R/W * 3
to	to			57H	87		
2EH	46			58H	88	CH1 warning output lower upper limit value (L) (H)	R/W * 3
2FH	47	Warning output enable/disable setting	R/W * 3	59H	89		
30H	48	Warning output flag	R	5AH	90	CH1 warning output upper lower limit value (L) (H)	R/W * 3
31H	49	Disconnection detection flag	R	5BH	91		
32H	50	CH1 scaling value	R	5CH	92	CH1 warning output upper upper limit value (L) (H)	R/W * 3
33H	51	CH2 scaling value	R	5DH	93		
34H	52	CH3 scaling value	R	5EH	94	CH2 warning output lower lower limit value (L) (H)	R/W * 3
35H	53	CH4 scaling value	R	5FH	95		
36H	54	CH1 Measured temperature value (32bit) (L) (H)	R	60H	96	CH2 warning output lower upper limit value (L) (H)	R/W * 3
37H	55			61H	97		
38H	56	CH2 Measured temperature value (32bit) (L) (H)	R	62H	98	CH2 warning output upper lower limit value (L) (H)	R/W * 3
39H	57			63H	99		
3AH	58	CH3 Measured temperature value (32bit) (L) (H)	R	64H	100	CH2 warning output upper upper limit value (L) (H)	R/W * 3
3BH	59			65H	101		
3CH	60	CH4 Measured temperature value (32bit) (L) (H)	R	66H	102	CH3 warning output lower lower limit value (L) (H)	R/W * 3
3DH	61			67H	103		
3EH	62	CH1 scaling range lower limit value (L) (H)	R/W * 3	68H	104	CH3 warning output lower upper limit value (L) (H)	R/W * 3
3FH	63			69H	105		
40H	64	CH1 scaling range upper limit value (L) (H)	R/W * 3				
41H	65						

Addresses		Description	R/W * 1	Addresses		Description	R/W * 1
Hex.	Dec.			Hex.	Dec.		
6AH	106	CH3 warning output upper lower limit value (L) (H)	R/W * 3	A0H	160	3-wire type CH1 Factory default offset value (L) * 4 (H)	R/W
6BH	107			A1H	161		
6CH	108	CH3 warning output upper upper limit value (L) (H)	R/W * 3	A2H	162	3-wire type CH1 Factory default gain value (L) * 4 (H)	R/W
6DH	109			A3H	163		
6EH	110	CH4 warning output lower lower limit value (L) (H)	R/W * 3	A4H	164	3-wire type CH1 User range settings offset value (L) * 4 (H)	R/W
6FH	111			A5H	165		
70H	112	CH4 warning output lower upper limit value (L) (H)	R/W * 3	A6H	166	3-wire type CH1 User range settings gain value (L) * 4 (H)	R/W
71H	113			A7H	167		
72H	114	CH4 warning output upper lower limit value (L) (H)	R/W * 3	A8H	168	3-wire type CH1 User range settings offset resistance value (L) * 4 (H)	R/W
73H	115			A9H	169		
74H	116	CH4 warning output upper upper limit value (L) (H)	R/W * 3	AAH	170	3-wire type CH1 User range settings gain resistance value (L) * 4 (H)	R/W
75H	117			ABH	171		
76H	118	CH1 offset temperature set value (L) (H)	R/W * 3	ACH	172	4-wire type CH1 Factory default offset value (L) * 4 (H)	R/W
77H	119			ADH	173		
78H	120	CH1 gain temperature set value (L) (H)	R/W * 3	A0H	160	3-wire type CH2 Factory default offset value (L) * 4 (H)	R/W
79H	121			A1H	161		
7AH	122	CH2 offset temperature set value (L) (H)	R/W * 3	A2H	162	3-wire type CH2 Factory default gain value (L) * 4 (H)	R/W
7BH	123			A3H	163		
7CH	124	CH2 gain temperature set value (L) (H)	R/W * 3	A4H	164	3-wire type CH2 User range settings offset value (L) * 4 (H)	R/W
7DH	125			A5H	165		
7EH	126	CH3 offset temperature set value (L) (H)	R/W * 3	A6H	166	3-wire type CH2 User range settings gain value (L) * 4 (H)	R/W
7FH	127			A7H	167		
80H	128	CH3 gain temperature set value (L) (H)	R/W * 3	A8H	168	3-wire type CH2 User range settings offset resistance value (L) * 4 (H)	R/W
81H	129			A9H	169		
82H	130	CH4 offset temperature set value (L) (H)	R/W * 3	AAH	170	3-wire type CH2 User range settings gain resistance value (L) * 4 (H)	R/W
83H	131			ABH	171		
84H	132	CH4 gain temperature set value (L) (H)	R/W * 3	ACH	172	4-wire type CH2 Factory default offset value (L) * 4 (H)	R/W
85H	133			ADH	173		
86H	134	Extended averaging processing specification	R/W * 3	A0H	160	3-wire type CH2 User range settings offset value (L) * 4 (H)	R/W
87H	135	Reserved * 2	—	A1H	161		
To	To			CAH	202	4-wire type CH2 User range settings gain value (L) * 4 (H)	R/W
9DH	157			CBH	203		
9EH	158			Mode switching setting	R/W	CCH	204
9FH	159	CDH	205				
A0H	160	3-wire type CH1 Factory default offset value (L) * 4 (H)	R/W	CEH	206	4-wire type CH2 User range settings gain resistance value (L) * 4 (H)	R/W
A1H	161			CFH	207		
A2H	162	3-wire type CH1 Factory default gain value (L) * 4 (H)	R/W	D0H	208	3-wire type CH3 Factory default offset value (L) * 4 (H)	R/W
A3H	163			D1H	209		
A4H	164	3-wire type CH1 User range settings offset value (L) * 4 (H)	R/W	D2H	210	3-wire type CH3 Factory default gain value (L) * 4 (H)	R/W
A5H	165			D3H	211		
A6H	166	3-wire type CH1 User range settings gain value (L) * 4 (H)	R/W	D4H	212	3-wire type CH3 User range settings offset value (L) * 4 (H)	R/W
A7H	167			D5H	213		
A8H	168	3-wire type CH1 User range settings offset resistance value (L) * 4 (H)	R/W	D6H	214	3-wire type CH3 User range settings gain value (L) * 4 (H)	R/W
A9H	169			D7H	215		
AAH	170	3-wire type CH1 User range settings gain resistance value (L) * 4 (H)	R/W	D8H	216	3-wire type CH3 User range settings offset resistance value (L) * 4 (H)	R/W
ABH	171			D9H	217		

Addresses		Description	R/W * 1	Addresses		Description	R/W * 1
Hex.	Dec.			Hex.	Dec.		
DAH	218	3-wire type CH3 User range settings gain resistance value (L) * 4 (H)	R/W	EEH	238	3-wire type CH4 User range settings gain value (L) * 4 (H)	R/W
DBH	219			EFH	239		
DCH	220	4-wire type CH3 Factory default offset value (L) * 4 (H)	R/W	F0H	240	3-wire type CH4 User range settings offset resistance value (L) * 4 (H)	R/W
DDH	221			F1H	241		
DEH	222	4-wire type CH3 Factory default gain value (L) * 4 (H)	R/W	F2H	242	3-wire type CH4 User range settings gain resistance value (L) * 4 (H)	R/W
DFH	223			F3H	243		
E0H	224	4-wire type CH3 User range settings offset value (L) * 4 (H)	R/W	F4H	244	4-wire type CH4 Factory default offset value (L) * 4 (H)	R/W
E1H	225			F5H	245		
E2H	226	4-wire type CH3 User range settings gain value (L) * 4 (H)	R/W	F6H	246	4-wire type CH4 Factory default gain value (L) * 4 (H)	R/W
E3H	227			F7H	247		
E4H	228	4-wire type CH3 User range settings offset resistance value (L) * 4 (H)	R/W	F8H	248	4-wire type CH4 User range settings offset value (L) * 4 (H)	R/W
E5H	229			F9H	249		
E6H	230	4-wire type CH3 User range settings gain resistance value (L) * 4 (H)	R/W	FAH	250	4-wire type CH4 User range settings gain value (L) * 4 (H)	R/W
E7H	231			FBH	251		
E8H	232	3-wire type CH4 Factory default offset value (L) * 4 (H)	R/W	FCH	252	4-wire type CH4 User range settings offset resistance value (L) * 4 (H)	R/W
E9H	233			FDH	253		
EAH	234	3-wire type CH4 Factory default gain value (L) * 4 (H)	R/W	FEH	254	4-wire type CH4 User range settings gain resistance value (L) * 4 (H)	R/W
EBH	235			FFH	255		
ECH	236	3-wire type CH4 User range settings offset value (L) * 4 (H)	R/W				
EDH	237						

\*1 Indicates whether read/write is enabled or disabled from sequence program.  
 R : Read enabled    W : Write enabled


\*2 Reserved addresses are used by the system and are unavailable for the user.  
 Should data be written to any of those addresses using a sequence program, we cannot guarantee the functions of the Q64RD-G.

\*3 Data must be written to buffer memory under the interlock conditions (buffer memory write conditions) of the following I/O signals.


- Operating condition setting



- Offset setting



- Gain setting



\*4 This area is related with the user range save/restore function and allows users to re-set the offset/gain values easily in the case of online module change.

3.4.3 Conversion enable/disable setting (Un\G0)

- (1) You can make setting to enable/disable temperature conversion on each channel.
- (2) Specifying unused channels as "conversion disabled" prevents unnecessary disconnection detection and also reduces sampling time.
- (3) The Operating condition setting request (Y9) must be turned on/off to make the conversion enable/disable setting valid.
- (4) At power-on or reset, the conversion enable/disable setting is set to 000FH (all channels disabled).

b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
0	0	0	0	0	0	0	0	0	0	0	0	CH4	CH3	CH2	CH1

0: Conversion enabled  
1: Conversion disabled

[Example]

b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
0	0	0	0	0	0	0	0	0	0	0	0	1	1	0	0

Channels 1 and 2 are conversion enabled.

3.4.4 CH□ time/count averaging setting (Q64RD) (Un\G1 to 4)

- (1) Set the averaging time or averaging count for each channel specified for averaging processing (buffer memory address 9: Un\G9).
- (2) Setting can be made within the following ranges.  
Time averaging processing: 160 to 5000ms  
Count averaging processing: 4 to 62500 times  
Setting any value outside the range will result in an error and operation will be performed under the previous setting.
- (3) This setting will be invalid if sampling is specified for Averaging processing specification (buffer memory address 9: Un\G9).
- (4) At power-on or reset, the CH□ time/count averaging setting is set to 0000H (averaging time 0/averaging count 0).
- (5) The Operating Condition Setting Request (Y9) must be turned on/off to make this setting valid.
- (6) Refer to Section 3.4.6 for details of sampling processing/time averaging processing/count averaging processing.

3.4.5 CH□ time/count/moving average/time constant setting (Q64RD-G) (Un\G1 to 4)

- (1) For each channel for which Averaging processing specification (buffer memory address 9: Un\G9) and Extended averaging processing specification (buffer memory address 134: Un\G134) is made, set the averaging time, averaging count, the number for moving average or time constant for primary delay filter.
- (2) Allowable setting range is as follows:


Processing method	Set value
Time averaging	160 to 5000 (ms)
Count averaging	4 to 62500 (times)
Moving average	4 to 60 (times)
Primary delay filter	40 to 5000 (ms)

Setting any value outside the above range will result in an error and the operation will be performed under the previous setting.

- (3) This setting will be invalid if sampling is specified for Averaging processing specification (buffer memory address 9: Un\G9) or Extended averaging processing specification (buffer memory address 134: Un\G134).
- (4) At power-on or reset, this is preset to 0000H. Change the setting according to the processing method.
- (5) The Operating Condition Setting Request (Y9) must be turned on/off to make this setting valid.
- (6) Refer to Section 3.4.7 and 3.4.23 for further details.

3.4.6 Averaging processing specification (Q64RD) (Un\G9)

- (1) To select sampling or averaging processing, write values to the buffer memory address 9 (Un\G9).
- (2) When you selected averaging processing, choose time averaging or count averaging.
- (3) This setting defaults to all-channel sampling processing.

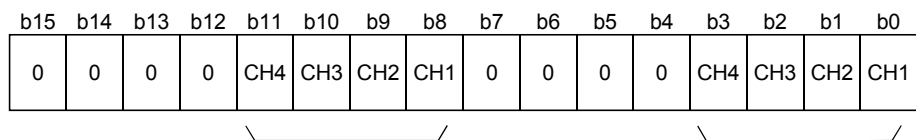


Designation of averaging-processed channels 1: Averaging processing 0: Sampling processing	Designation of time/count 1: Time averaging 0: Count averaging
--	--

- (4) The Operating Condition Setting Request (Y9) must be turned on/off to make this setting valid.

Example


To specify count averaging for channels 1 time averaging for channels 2 and sampling processing for other channels, store 0302H (770) into the buffer memory address 9 (Un\G9).

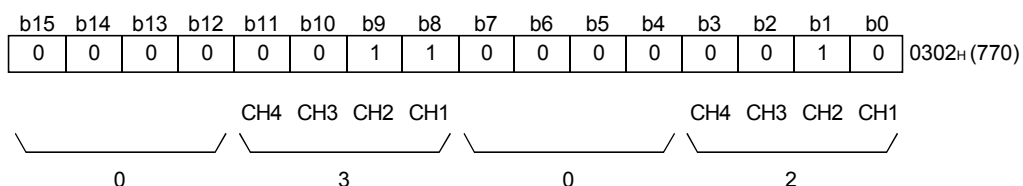



3.4.7 Averaging processing specification (Q64RD-G) (Un\G9)

- (1) To select sampling or averaging processing, write values to the buffer memory address 9 (Un\G9).
- (2) When you selected averaging processing, choose time averaging or count averaging.
- (3) This setting defaults to all-channel sampling processing.

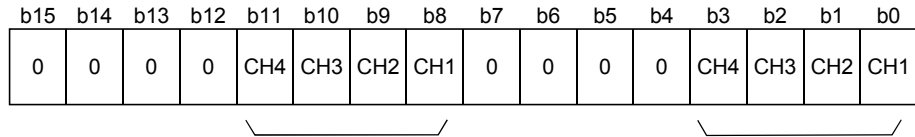


Designation of averaging-processed channels 1: Averaging processing 0: Sampling processing	Designation of time/count 1: Time averaging 0: Count averaging
--	--

- (4) The Operating condition setting request (Y9) must be turned on/off to make this setting valid.

Example

To specify count averaging for channels 1 time averaging for channels 2 and sampling processing for other channels, store 0302H (770) into the buffer memory address 9 (Un\G9).

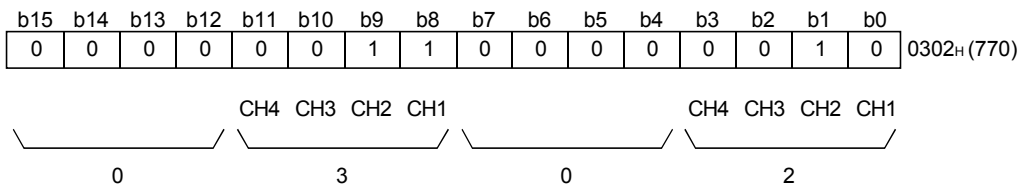

**POINT**

- (1) When the existing system is reused by replacing the Q64RD with Q64RD-G, the setting is compatible within the setting range of Averaging processing specification (buffer memory address 9: Un\G9) and existing programs can be used. However, when setting the moving average or primary delay filter, make setting in the Extended averaging processing specification area (buffer memory address 134: Un\G134).
- (2) When using a new Q64RD-G, use Extended averaging processing specification (buffer memory address 134: Un\G134) for the averaging processing specification. In this case, it is not required to use Averaging processing specification (buffer memory address 9: Un\G9).
- (3) The relation between Averaging processing specification (buffer memory address 9: Un\G9) and Extended averaging processing specification (buffer memory address 134: Un\G134) is as follows:
  - When 1H to 4H (other than 0) is written into Extended averaging processing specification (buffer memory address 134: Un\G134), the value of this area becomes valid.  
(The setting of Extended averaging processing specification (buffer memory address 134: Un\G134) acts on Averaging processing specification (buffer memory address 9: Un\G9).)
  - It becomes valid at the ON/OFF timing of the Operating Condition Setting Request (Yn9).
- (4) Refer to Section 3.4.23 for Extended averaging processing specification (buffer memory address 134: Un\G134).
- (5) When using the utility package, note that the initial setting using Averaging processing specification is not available. Make the initial setting using Extended averaging processing specification.

3.4.8 Conversion completion flag (Un\G10)

- (1) You can check whether the channels specified for conversion enable succeeded in normal temperature conversion.
- (2) You can make check on each channel using the conversion completion flag.
- (3) The conversion completion flag is cleared when the Operating Condition Setting Request (Y9) is turned from ON to OFF.
- (4) When disconnection occurs, the conversion completion flag of the corresponding channel is cleared.
- (5) The Conversion Completion Flag (XE) turns on when conversions of all channels set for conversion enable are completed.
  - When Conversion enable/disable setting is turned from 1 (disable) to 0 (enable)  
After the temperature conversion value is stored into buffer memory, the conversion completion flag of the corresponding channel is turned to 1.
  - When Conversion enable/disable setting is turned from 0 (enable) to 1 (disable)  
The conversion completion flag of the corresponding channel is turned to 0.
  - When disconnection is detected  
The conversion completion flag of the corresponding channel is turned to 0.

b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
0	0	0	0	0	0	0	0	0	0	0	0	CH.4	CH.3	CH.2	CH.1

1: Conversion completed  
0: Under conversion or unused

3.4.9 CH□ measured temperature value (16bit) (Un\G11 to 14)

- (1) The "RTD value" input from the platinum temperature-measuring resistor is converted into a "temperature value" to detect a temperature.
- (2) The value of the measured temperature to the first decimal place is multiplied by 10 and the result is stored into buffer memory in 16-bit signed binary. (All digits to the right of the second decimal place is rounded down.)
- (3) A negative measured temperature value is displayed as two's complement.
- (4) At power-on or reset, all channels are set to 0.

[Example 1] At the measured temperature value of 123.025°C ..... 1230 is stored.

b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
0	0	0	0	0	1	0	0	1	1	0	0	1	1	1	0

[Example 2] At the measured temperature value of -123.025°C ..... -1230 is stored.

b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
1	1	1	1	1	0	1	1	0	0	1	1	0	0	1	0

3.4.10 Error code (Un\G19)

- (1) When the Q64RD/Q64RD-G has detected an error of a set value or operation procedure, the corresponding error code is stored.
- (2) The error code is stored as a 16-bit binary value.
- (3) When an error occurs, the "ERROR/ERR. LED" of the Q64RD/Q64RD-G is lit.
- (4) The following are chief checks made.


Timing	Description
At start	<ul style="list-style-type: none"> <li>• Check on the intelligent function module switch settings of GX Developer</li> </ul>
When Operating condition setting request (Y9) has turned from ON to OFF	<ul style="list-style-type: none"> <li>• Check on Averaging processing selection</li> <li>• Check on averaging time and averaging count</li> <li>• Check on warning output upper/upper limit values</li> </ul>
When Offset Setting Request (Y1, Y3, Y5, Y7) or Gain Setting Request (Y2, Y4, Y6, Y8) is turned on	<ul style="list-style-type: none"> <li>• Check on offset/gain setting</li> <li>• Check on CH□ offset temperature set value/CH□ gain temperature set value</li> <li>• Check whether Offset Setting Request (Y1, Y3, Y5, Y7) and Gain Setting Request (Y2, Y4, Y6, Y8) are not turned on at the same time.</li> </ul>
When User Range Write Request (YA) has turned from ON to OFF *	<ul style="list-style-type: none"> <li>• Check whether the same data was written consecutively or not.</li> <li>• Check whether the OMC refresh data has been set or not.</li> </ul>
When G.OGSTOR instruction is executed in sequence program *	<ul style="list-style-type: none"> <li>• Check whether the same data was written consecutively or not.</li> <li>• Check whether a different model has been mounted or not by an online module change.</li> </ul>

\* Supported by the module of function version C or later.

- (5) When two or more errors occurred, the error code of the error found first is stored and latter errors are not stored. However, you can confirm the latter errors in the error history of the detailed module information of GX Developer.
- (6) Giving the Error Clear Request (YF) clears the error code and turns off the lit " ERROR/ERR. LED ".
- (7) Clearing the error stores 0.

3.4.11 Setting range(Q64RD) (Un\G20)


- (1) The settings of "Measurement range setting", "Offset/gain setting" and "Wiring type setting" are stored.
- (2) Use the intelligent function module switches of GX Developer to make settings of the "Measurement range setting", "Offset/gain setting" and "Wiring type setting". Refer to Section 4.5 for details of the setting method.

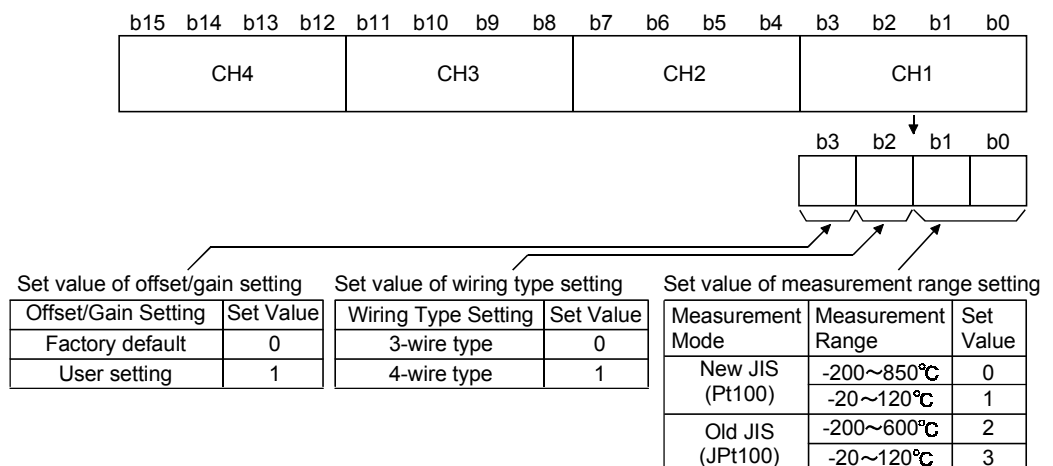

3.4.12 Setting range 1 (Q64RD-G) (Un\G20)

- (1) The setting of "Measurement range setting" is stored.
- (2) Use the intelligent function module switches of GX Developer to make setting of "Measurement range setting".

Refer to Section 4.5 for details of the setting method.

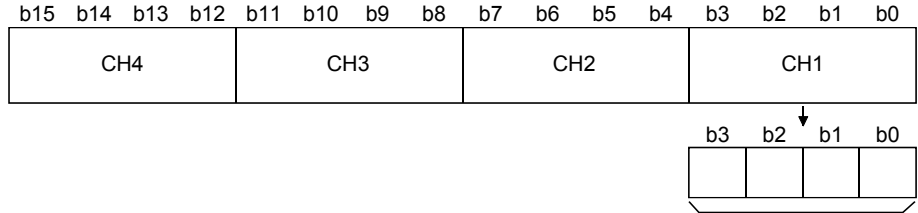


Set value of measurement range setting

Measurement Mode	Measurement Range	Set Value
New JIS (Pt100)	-200 to 850°C	0
	-20 to 120°C	1
	0 to 200°C	4
Old JIS (JPt100)	-180 to 600°C	2
	-20 to 120°C	3
	0 to 200°C	5
Ni100Ω	-60 to 180°C	8

3.4.13 Setting range 2 (Q64RD-G) (Un\G21)

- (1) The settings of "Offset/gain setting" and "Wiring type setting" are stored.
- (2) Use the intelligent function module switches of GX Developer to make setting of "Offset/gain setting" and "Wiring type setting".

Refer to Section 4.5 for details of the setting method.

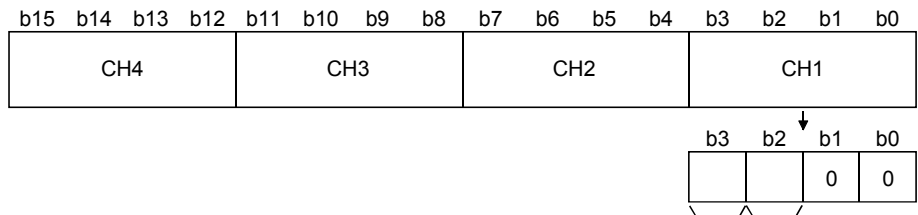

Set value of offset/gain setting

Offset/Gain Setting	Set Value
Factory default	0
User setting	1

Set value of wiring type setting

Wiring Type Setting	Set Value
3-wire type	0
4-wire type	1

3.4.14 Warning output enable/disable setting (Un\G47)

- (1) This area is used to set whether a warning will be output or not per channel.
- (2) The Operating Condition Setting Request (Y9) must be turned on/off to make the Warning output enable/disable setting valid.
- (3) At power-on or reset, this is set to 000FH (all channels disabled).

b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
0	0	0	0	0	0	0	0	0	0	0	0	CH.4	CH.3	CH.2	CH.1

0: Warning output enable  
1: Warning output disable

[Example]

b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
0	0	0	0	0	0	0	0	0	0	0	0	1	1	0	0

Channels 1 and 2 are warning output enabled.

3.4.15 Warning output flag (Un\G48)

- (1) When a temperature detected is outside the temperature range set for the CH□ warning output upper/lower limit value (buffer memory addresses 86 to 117: Un\G86 to 117), the warning output flag of the corresponding channel turns to 1.
- (2) You can check whether the warning given is the upper or lower limit value warning on each channel.
- (3) When the temperature conversion value returned to within the measurement range, the flag is automatically reset.
- (4) If a warning is detected on any of the channels enabled for conversion, the Warning Output Signal (XD) turns on.
- (5) The warning output flag is cleared when the Operating Condition Setting Request (Y9) is turned on.

Also, only for the Q64RD-G, "ALM LED" turns OFF from ON.

b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
0	0	0	0	0	0	0	0	CH4 upper limit value	CH4 lower limit value	CH3 upper limit value	CH3 lower limit value	CH2 upper limit value	CH2 lower limit value	CH1 upper limit value	CH1 lower limit value

0: Normal  
1: Out-of-range

**POINT**  
Refer to Section 3.4.21 for details of the warning output.




3.4.16 Disconnection detection flag (Un\G49)

- (1) The disconnection detection flag of the corresponding channel turns to 1 when the disconnection of the RTD or wire break is detected.
- (2) Disconnection detection available for conversion-enabled channels only.
- (3) Disconnection is detected on each channel.
- (4) The disconnection detection flag is cleared when the Operating Condition Setting Request (Y9) is turned on.
- (5) If disconnection is detected on any of conversion-enabled channels, the Disconnection Detection Flag (XC) also turns on.  
At the same time, the Conversion Completion Signal (XE) turns off, and the conversion update of the disconnection-detected channel stops but the conversion of the channel not disconnected continues.  
For the Q64RD-G, "ALM LED" flashes.

b15	b14	b13	b12	b11	b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
0	0	0	0	0	0	0	0	0	0	0	0	CH4	CH3	CH2	CH1

0: Normal  
1: Disconnection

- (6) The relationships between disconnection detection and conversion enable/disable are indicated below.

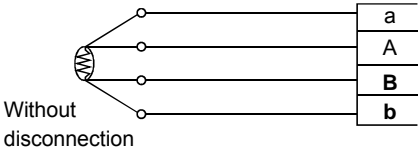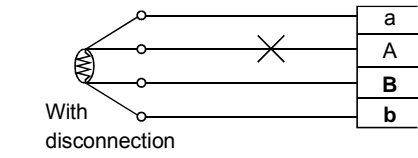Connection Status	Conversion Enable/Disable Setting	Disconnection Detection Flag
 <p>Without disconnection</p>	Conversion enable	OFF
	Conversion disable	
 <p>With disconnection</p>	Conversion enable	ON
	Conversion disable	OFF
 <p>Without disconnection</p>	Conversion enable	ON
	Conversion disable	OFF

POINT
<ul style="list-style-type: none"> <li>Any channel where no RTD is connected must be specified as "conversion disable". Not doing so will turn on the disconnection detection flag.</li> <li>The temperature conversion value of the channel whose disconnection detection turned on is held at the value immediately before disconnection detection and the conversion completion flag (buffer memory address 10: Un\G10) of the corresponding channel turns off.</li> <li>Refer to Section 4.4 for the RTD wiring.</li> <li>Refer to Section 8.2.7 for the troubleshooting of disconnection detection.</li> </ul>

### 3.4.17 CH□ scaling value (Un\G50 to 53)

- The measured temperature value within the scaling range set for the CH□ scaling range upper/lower limit values (buffer memory address 62 to 77: Un\G62 to 77) is scaled to the scaling width set for the CH□ scaling width upper/lower limit values (buffer memory address 78 to 85: Un\G78 to 85) and the result is stored.
- The following is how to calculate the scaling value.

<p>Scaling value =</p> $\frac{\text{Measured Temperature value} - \text{Scaling range lower limit value}}{\text{Scaling range upper limit value} - \text{Scaling range lower limit value}} \times (\text{Scaling width upper limit value} - \text{Scaling width lower limit value}) + \text{Scaling width lower limit value}$
---

[Example]  
 To scale a temperature to a percent  
 When the CH1 measured temperature value of 360°C measured temperature value = 360000 (32bit) ) is scaled at the following settings:  
 Scaling range: -100 to 500°C (lower limit value = -100000, upper limit value = 500000)  
 Scaling width: 0 to 100% (lower limit value = 0, upper limit value = 100)

<p>Scaling value=</p> $(100-0) \times \frac{360000 - (-100000)}{500000 - (-100000)} + 0 = 76.666666 \dots$ <p style="text-align: right;">Fractional portion is rounded off.</p> <p style="text-align: center;">=77[%]</p> <p style="text-align: right;">Stored into buffer memory address 50.</p>
---

POINT
<ol style="list-style-type: none"> <li>If the upper limit value is less than the lower limit value in the settings of the CH□ scaling range upper/lower limit values (buffer memory address 62 to 77: Un\G62 to 77) or CH□ scaling width upper/lower limit values (buffer memory address 78 to 85: Un\G78 to 85), it will not result in an error and the scaling value will be output using the above calculation expression to make calculation.</li> <li>If the temperature measured is outside the range set by the upper and lower limit values of the scaling range, the value set as the upper or lower limit value of the scaling width is stored into the buffer memory.</li> </ol>

## 3.4.18 CH□ measured temperature value (32 bit) (Un\G54 to 61)

- (1) The "temperature-measuring resistance value" input from the RTD is converted into a "temperature value" to detect a temperature.
- (2) The value of the measured temperature to the third decimal place is multiplied by 1000 and the result is stored into buffer memory in 32-bit signed binary. (All digits to the right of the fourth decimal place are rounded down.)
- (3) A negative measured temperature value is displayed as two's complement.
- (4) At power-on or reset, all channels are set to 0.

[Example 1] At the measured temperature value of 123.025 ..... 123025 is stored.

b31																								b0									
b24b23	b16b15											b8 b7																					
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	0	0	0	0	0	0	1	0	0	1	0	0	0	1

[Example 2] At the measured temperature value of -123.025 ..... -123025 is stored.

b31																								b0								
b24b23	b16b15											b8 b7																				
1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	0	1	0	0	1	1	1	1	1	0	1	1	0	1	1	1	1

## 3.4.19 CH□ scaling range upper/lower limit values (Un\G62 to 77)

- (1) Set the scaling range (0.001°C increments) of the measured temperature on each channel.
- (2) 0 is set at power-on or reset.
- (3) Allowable scaling range is -2147483648 to 2147483647.
- (4) Scaling will not be made if the upper limit value and lower limit value are equal.
- (5) The Operating Condition Setting Request (Y9) must be turned on/off to make the setting valid.


## 3.4.20 CH□ scaling width upper/lower limit values (Un\G78 to 85)

- (1) Set the scaling with on each channel.
- (2) 0 is set at power-on or reset.
- (3) Allowable scaling range is -32768 to 32767.
- (4) Set the upper and lower limit values to 0 when scaling will not be made.
- (5) The Operating Condition Setting Request (Y9) must be turned on/off to make the setting valid.



3.4.21 CH□ warning output upper/lower limit values (Un\G86 to 101)

- (1) Set the range (0.1°C increments) on each channel.
- (2) The warning output range region can be set based on 4 kind of the warning output values.: upper upper value, upper lower value, lower upper value and lower lower value.
- (3) If the detected temperature value rises above the upper upper limit value or falls below the lower lower limit value to fall within the warning output range region, the flag (buffer memory address 48: Un\G48) and signal (XD) give the warnings.
- (4) When the temperature value falls below the warning output upper lower limit value or rises above the warning output lower upper limit value to return to within the temperature range, "0" is stored into the warning output flag (buffer memory address 48: Un\G48) bit position corresponding to the channel number. The Warning Output Signal (XD) turns off only when all channels return to within the allowable temperature range.

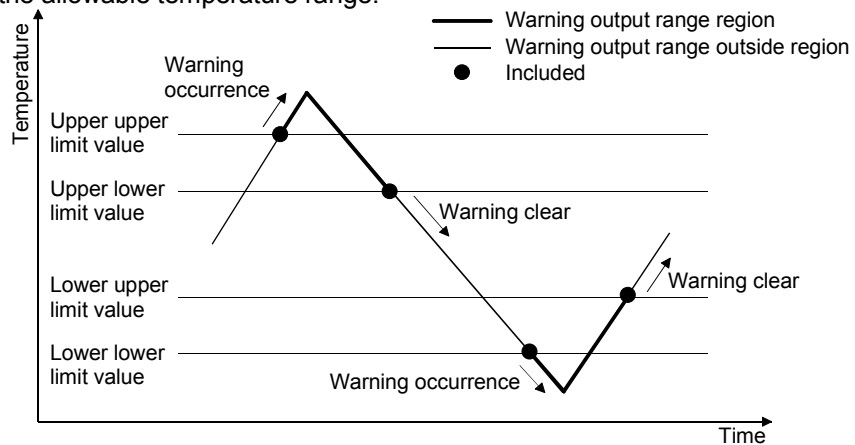

- (5) At power-on or reset, the minimum and maximum values of the measured temperature range of the setting range set as the measurement range (set using GX Developer) are stored. The upper upper limit value is set to be equal to the upper lower limit value, and the lower upper limit value equal to the lower lower limit value.


Setting		Settings at Power-On or Reset				Allowable Temperature Range
Setting mode	Setting range	Lower lower limit value	Lower Upper limit value	Upper upper limit value	Upper lower limit value	
Pt 100 (New JIS)	0	-200000		850000		-200000 to 850000
	1	-20000		120000		-20000 to 120000
	4	0		200000		0 to 200000
JPt.100 (Old JIS)	2	-180000		600000		-180000 to 600000
	3	-20000		120000		-20000 to 120000
	5	0		200000		0 to 200000
Ni100Ω	8	-60000		180000		-60000 to 180000

\* Setting range 0 to 3 can be used for the Q64RD/Q64RD-G. Setting range 4, 5 and 8 is allowed for the Q64RD-G only.

- (6) If an out-of-range value is set or the condition of lower lower limit value ≤ lower upper limit value < upper lower limit value ≤ upper upper limit value is not satisfied, an error occurs and the corresponding error code is stored into the error code area (buffer memory address 19: Un\G19), and the Error Flag (XF) turns on.
- (7) If the lower upper limit value is equal to the upper lower limit value, no error will occur and the warning output is made invalid.
- (8) The Operating Condition Setting Request (Y9) must be turned on/off to make the setting valid.

3.4.22 CH□ offset/gain temperature set value (Un\G118 to 133)


- (1) Offset/gain setting (error compensation) is a function designed to compensate for the value at any two points (offset value/gain value) within the operating range when the proper temperature conversion value is not available at a system start or when the measurement range type is changed.
- (2) When the Offset Setting Request/Gain Setting Request (Y1 to 8) is turned on in the offset/gain setting mode, the measured temperature value is corrected using the set value written to this area. (Setting in 0.001°C increments.)  
 [Example] To set to 0.3°C ..... Store 300.
- (3) Error compensation is made by reading the measured temperature values of the buffer memory using a sequence program and monitoring the values on the peripheral device.
- (4) The following are the relationships between the measured temperature value and the offset value/gain value relative to the input temperature.

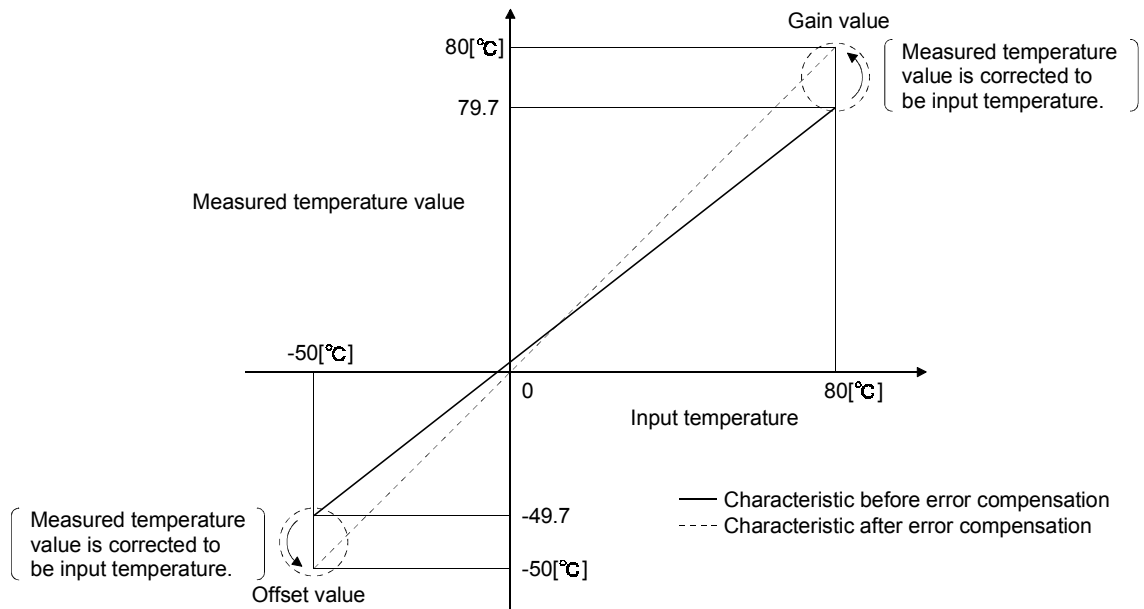

POINT			
<ul style="list-style-type: none"> <li>High accuracy is ensured for the offset and gain values when the minimum and maximum temperatures within the operating range are used to make error compensation.</li> <li>Make offset/gain value setting while simultaneously reading the measured temperature value.</li> <li>Always set the offset and gain values so that they will satisfy the following conditions. An error will occur if the conditions are not satisfied.                      Condition 1: Within temperature input range                      Condition 2: Gain value - offset value &gt; 0.1[°C]</li> <li>By giving the user range write request, the offset and gain values are stored into the E<sup>2</sup>PROM of the Q64RD/Q64RD-G and will not be erased at power-off.</li> <li>Error compensation may also be made using general resistor or the like instead of inputting a temperature directly to the temperature-measuring resistor.</li> </ul> <div style="text-align: center; margin-top: 10px;"> <table style="margin: auto; border: 1px solid black;"> <tr> <td style="border: 1px solid black; padding: 2px 10px;">Value of general resistor</td> <td style="padding: 0 5px;">=</td> <td style="border: 1px solid black; padding: 2px 10px;">Temperature-measuring resistance value of platinum RTD</td> </tr> </table> </div>	Value of general resistor	=	Temperature-measuring resistance value of platinum RTD
Value of general resistor	=	Temperature-measuring resistance value of platinum RTD	

3.4.23 Extended averaging processing specification (Q64RD-G) (Un\G134)

- (1) When selecting sampling processing, averaging processing (time/count/moving average) or primary delay filter, write the setting values to the buffer memory address 134 (Un\134).
- (2) Sampling processing is set to all channels as a default.
- (3) When an out-of-range value is set, sampling processing is performed.

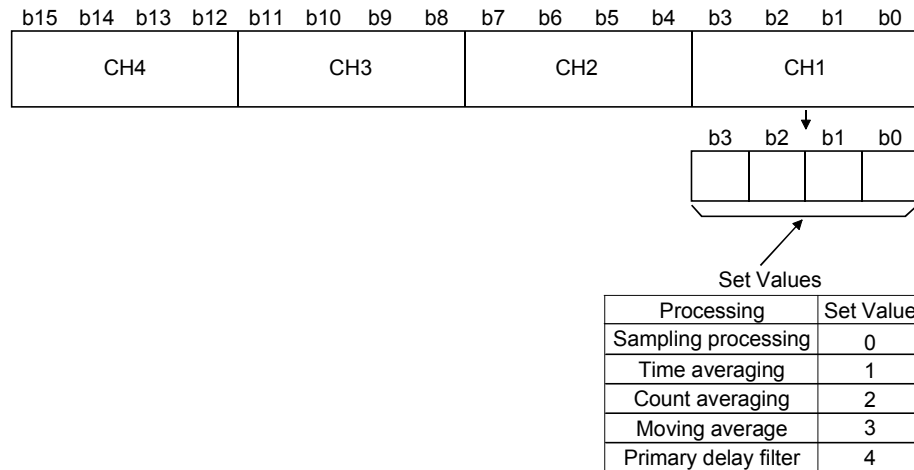

- (4) The Operating Condition Setting Request (Y9) must be turn on/off to make this setting valid.

POINT
<p>(1) When using a new Q64RD-G, use Extended averaging processing specification (buffer memory address 134: Un\G134) for the averaging processing specification. In this case, it is not required to use Averaging processing specification (buffer memory address 9: Un\G9).</p> <p>(2) When the existing system is reused by replacing the Q64RD with Q64RD-G, the setting is compatible within the setting range of Averaging processing specification (buffer memory address 9: Un\G9) and existing programs can be used. However, when setting the moving average or primary delay filter, make setting in the Extended averaging processing specification area (buffer memory address 134: Un\G134).</p> <p>(3) The relation between Averaging processing specification (buffer memory address 9: Un\G9) and Extended averaging processing specification (buffer memory address 134: Un\G134) is as follows:</p> <ul style="list-style-type: none"> <li>• When 1H to 4H (other than 0) is written into Extended averaging processing specification (buffer memory address 134: Un\G134), the value of this area becomes valid. (The setting of Extended averaging processing specification (buffer memory address 134: Un\G134) acts on Averaging processing specification (buffer memory address 9: Un\G9).)</li> <li>• It becomes valid at the ON/OFF timing of the Operating Condition Setting Request (Yn9).</li> </ul> <p>(4) Refer to Section 3.4.7 for Averaging processing specification (buffer memory address 9: Un\G9).</p> <p>(5) When using the utility package, note that the initial setting using Averaging processing specification is not available. Make the initial setting using Extended averaging processing specification.</p>

## 3.4.24 Mode switching setting (Un\G158 to 159)

- (1) Set the values of the mode to which you want to switch.
- (2) After setting the values, turning the operating condition setting request (Y9) from OFF to ON switches the mode.
- (3) When mode switching is performed, this area is cleared to zero and the operating condition setting completion signal (X9) turns OFF.  
After confirming that the this signal (X9) has turned OFF, turn OFF the operating condition setting request (Y9).

Mode to be switched to	Set values	
	Buffer memory address 158	Buffer memory address 159
Normal mode	0964H	4144H
Offset/gain setting mode	4144H	0964H

**POINT**

If the values written are other than the above, mode switching is not performed and only the operating condition is changed.

## 3.4.25 Factory default offset/gain value/user range settings offset/gain value/user range settings offset/gain resistance value (Un\G160 to 255)

- (1) This area is related with the user range save/restore function and allows users to re-set the offset/gain values easily in the case of online module change.
- (2) When the offset/gain values of the user range setting are restored, the used data are stored.  
The data are stored (saved) when:
  - Initial setting is written by the utility;
  - The operating condition is set (Y9 turns from OFF to ON\*1); or
  - The offset/gain values are written in the offset/gain setting mode (YA turns from OFF to ON).

\*1: The data are not saved when set values have been written to the mode switching setting area (buffer memory addresses 158, 159: Un\G158, Un\G159).
- (3) When restoring the offset/gain values of the user range setting, set the data saved here into the corresponding area of the module where the data will be restored.
- (4) In the Q64RD, two areas are provided for each of the factory default offset/gain value/User range settings offset/gain value. (For example, the buffer memory addresses for the 3-wire type CH1 Factory default offset value are 160 and 161.)  
When saving the offset/gain values for Online Module Change, the same value is stored into these two areas.  
When restoring the offset/gain values, be sure to set the same value to both of them.  
In the Q64RD-G, one data value for each of the factory default offset/gain value/User range settings offset/gain value is split into two (the first and second halves) and stored separately. (For example, the buffer memory addresses for the 3-wire type CH1 Factory default offset value are 160 and 161.)  
When saving the offset/gain values for Online Module Change, the first and second halves of one data value are stored into two areas.  
When restoring the offset/gain values, be sure to set the first and second halves of one data value to each of the areas.

- (5) Buffer memory saving recording procedure for online module change
- 1) Turn the Operating condition setting request (Y9) from OFF to ON.
  - 2) Compare the factory default offset/gain value/user range settings offset/gain value/user range settings offset/gain resistance value (buffer memory addresses 160 to 255: Un\G160 to Un\G255) with the values in the range reference table. Refer to Section 7.4 for the range reference table.
  - 3) If the values are proper, record the factory default offset/gain value/user range settings offset/gain input value/user range settings offset/gain resistance value.
- (6) Refer to Chapter 7 for details of online module change.

<b>POINT</b>
--------------

This area is not used for the offset/gain setting. For the offset/gain setting, refer to Section 4.6.
--

## 4 SETUP AND PROCEDURES BEFORE OPERATION

### 4.1 Handling Precautions


- (1) Do not drop the module or subject it to heavy impact.
- (2) Do not remove the PCB of the module from its case. Doing so may cause the module to fail.
- (3) Be careful not to let foreign particles such as swarf or wire chips enter the module. They may cause a fire, mechanical failure or malfunction.
- (4) The top surface of the module is covered with a protective film to prevent foreign objects such as wire burrs from entering the module during wiring. Do not remove this film until the wiring is complete. Before operating the system, be sure to remove the film to provide adequate ventilation.
- (5) Tighten the terminal screws using torque within the following ranges. Loose screws may cause short circuits, mechanical failures or malfunctions.

Screw location	Clamping torque range
Module mounting screws (M3 screws)	36 to 48 N · cm
Terminal block screws (M3 screws)	42 to 58 N · cm
Terminal block mounting screws (M3.5 screws)	66 to 89 N · cm

- (6) To mount the module on the base unit, fully insert the module fixing latch into the fixing hole in the base unit and press the module using the hole as a fulcrum. Improper installation may result in a module malfunction, or may cause the module to fall off.



4.2 Setup and Procedures before Operation

4

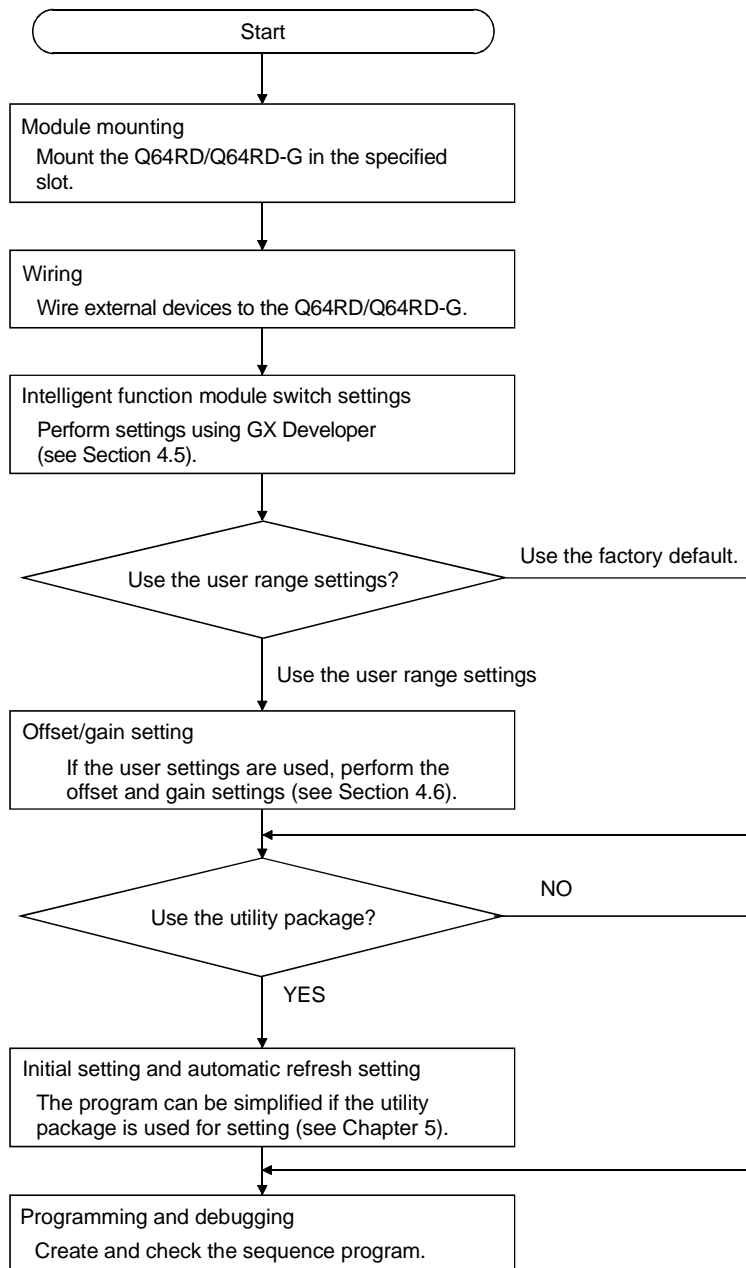

4.3 Part Names and Settings

This section explains the names of the Q64RD/Q64RD-G parts.

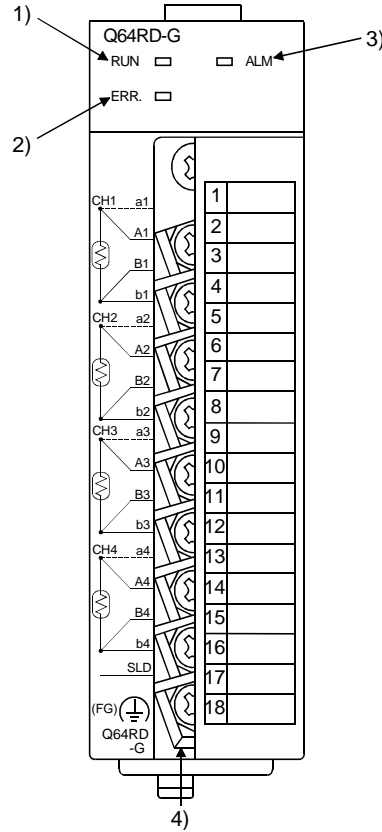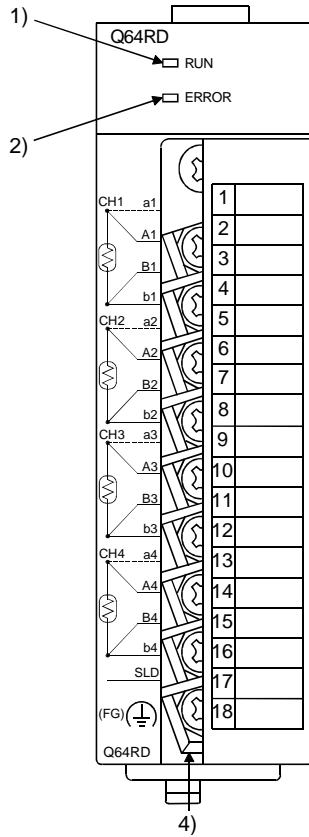

Terminal Block Layout		
Terminal number	Signal name	
1	CH1	a1
2		A1
3		B1
4		b1
5	CH2	a2
6		A2
7		B2
8		b2
9	CH3	a3
10		A3
11		B3
12		b3
13	CH4	a4
14		A4
15		B4
16		b4
17	SLD	
18	FG	

Number	Name and Appearance	Description
1)	RUN LED	Indicates the Q64RD/Q64RD-G operation status. ON : Normally operating Flicker : Offset/gain setting mode OFF : 5V power-off, watchdog timer error occurrence or status available for module replacement during online module replacement
2)	ERROR LED ERR. LED	Indicates the Q64RD/Q64RD-G error status. ON : Error occurrence Flicker : Switch setting error In intelligent function module switch setting of GX Developer, other than 0 was set to Switch 5. OFF : Normally operating
3)	ALM LED (Q64RD-G only)	Indicates the Q64RD/Q64RD-G alarm status. ON : Alarm occurrence Flicker : Input signal fault occurrence OFF : Normally operating
4)	Terminal block	Used for wiring of the temperature-measuring resistor, etc.

\* Check the error code for details.



## 4.4 Wiring

The wiring precautions and examples of module connection are provided below.

### 4.4.1 Wiring Instructions


In order to optimize the functions of the Q64RD/Q64RD-G and ensure system reliability, external wiring that is protected from noise is required.

Please observe the following precautions for external wiring:

- (1) Use separate cables for the AC control circuit and the external input signals of the Q64RD/Q64RD-G to avoid the influence of the AC side surges and inductions.
- (2) Do not run the module cables near, or bundle them with, the main circuit and high-voltage cables and the load cables from other than the PLC.  
Not doing so will make the module more susceptible to noises, surges and inductions.
- (3) Earth the shielded of the shielded cable to FG of the PLC. However, depending on the external noise conditions, external earthing on the RTD side may be recommended.
- (4) Insulation-sleeved crimping terminals cannot be used with the terminal block.  
It is recommended to fit mark tubes or insulation tubes to the wire connection parts of the crimping terminals.


4.4.2 External Wiring

(1) For 4-wire type

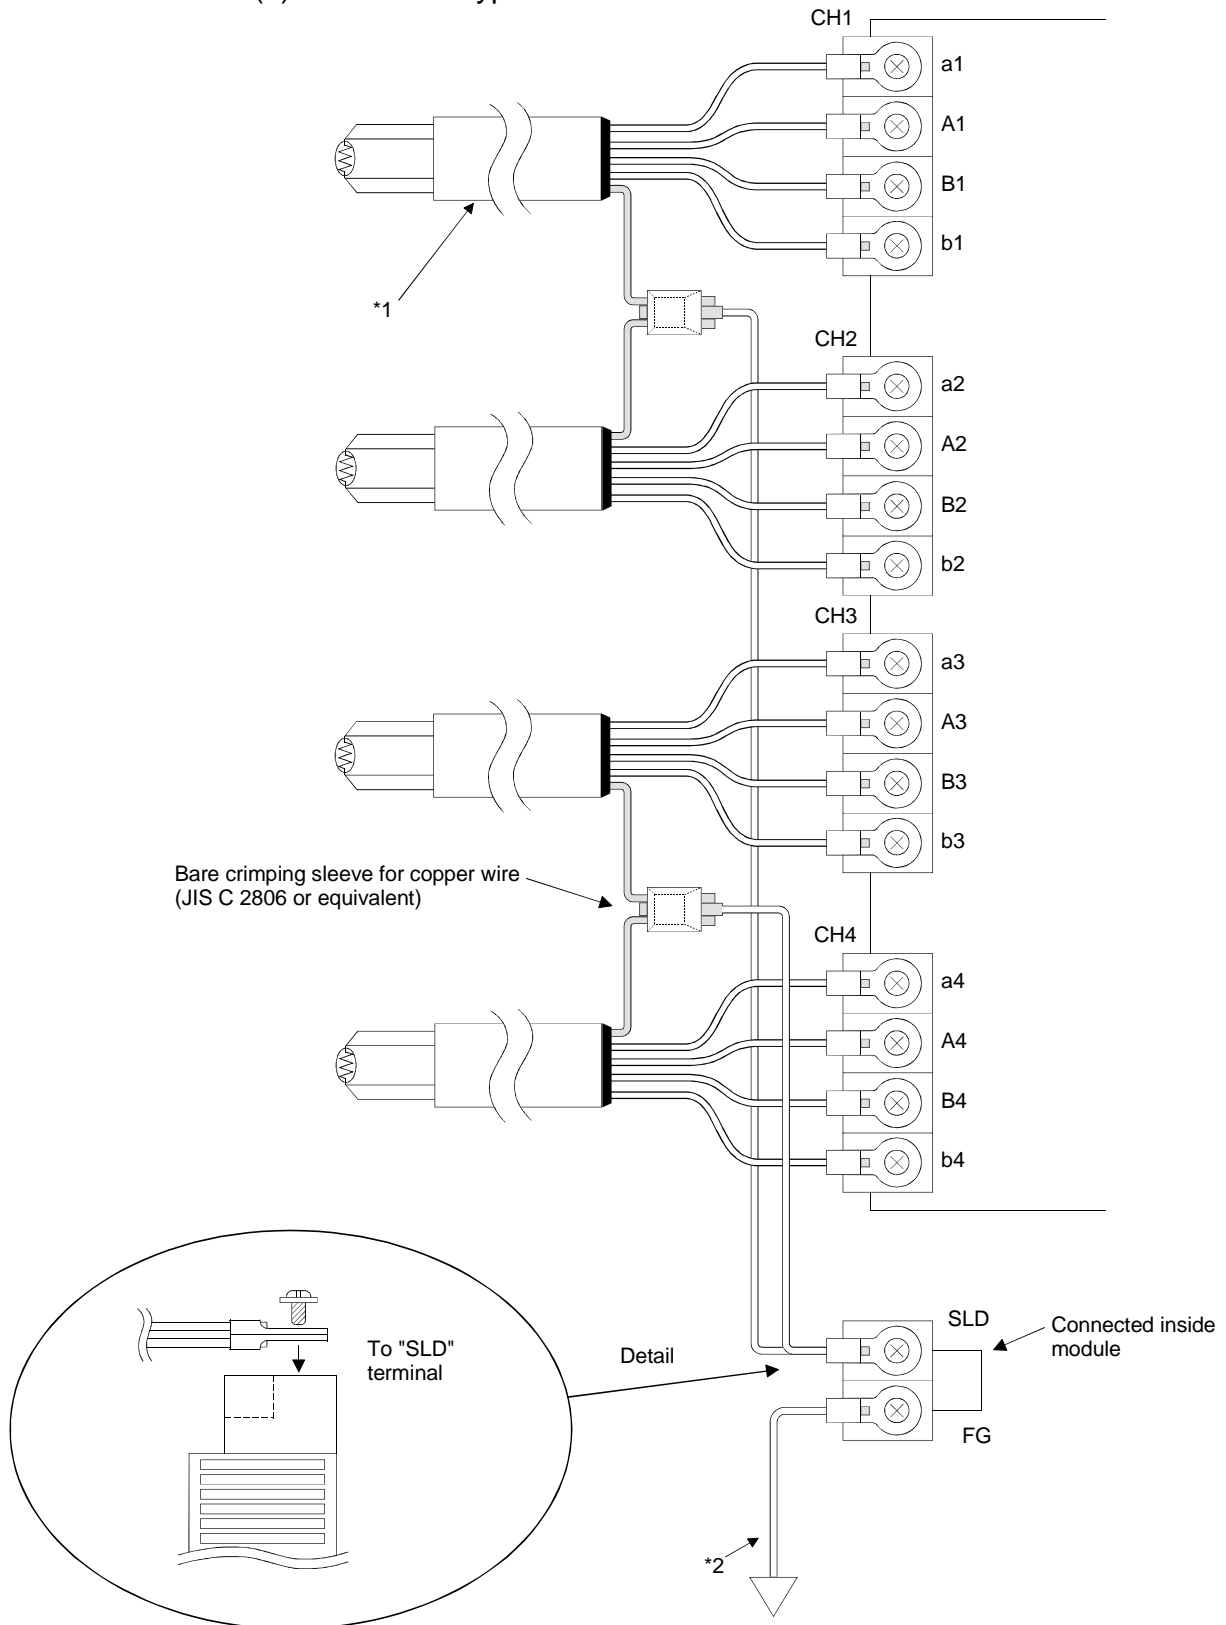


\*1 Use the conducting cable with shield and make the wiring length as short as possible.  
 \*2 Ground it to the ground terminal on the control panel.

(2) For 3-wire type

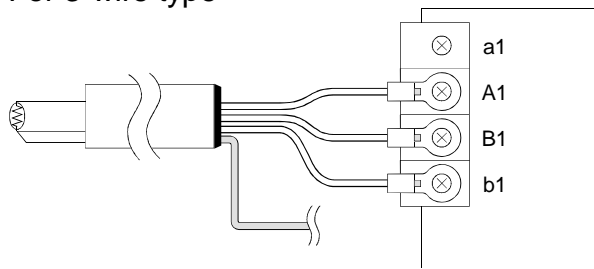


(3) For 2-wire type

When 4 conductor type is selected in switch 3 of intelligent function module switch setting

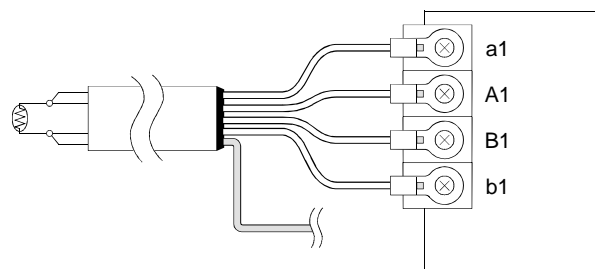

When 3 conductor type is selected in switch 3 of intelligent function module switch setting




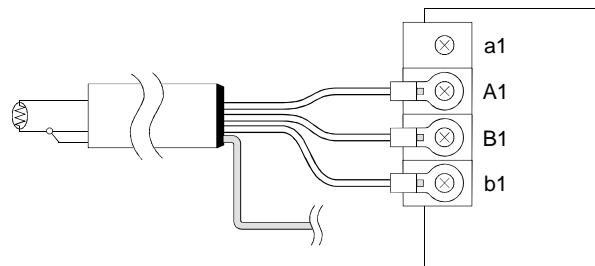


4.5 Switch Setting for Intelligent Function Module

The settings for the intelligent function module are performed using the I/O assignment settings for GX Developer.

(1) Setting item

The intelligent function module switches consist of switches 1 to 5 and are set using 16 bit data. When the intelligent function module switches are not set, the default value for switches 1 to 5 is 0.


		Setting Item																						
Switch 1	<p>Measurement range setting</p> 	<table border="1"> <thead> <tr> <th>Measurement mode</th> <th>Measurement range</th> <th>Set value *1</th> </tr> </thead> <tbody> <tr> <td rowspan="3">New JIS (Pt 100)</td> <td>-200 to 850°C</td> <td>0</td> </tr> <tr> <td>-20 to 120°C</td> <td>1</td> </tr> <tr> <td>0 to 200°C</td> <td>4</td> </tr> <tr> <td rowspan="3">Old JIS (JPt100)</td> <td>-180 to 600°C</td> <td>2</td> </tr> <tr> <td>-20 to 120°C</td> <td>3</td> </tr> <tr> <td>0 to 200°C</td> <td>5</td> </tr> <tr> <td>Ni100Ω</td> <td>-60 to 180°C</td> <td>8</td> </tr> </tbody> </table>	Measurement mode	Measurement range	Set value *1	New JIS (Pt 100)	-200 to 850°C	0	-20 to 120°C	1	0 to 200°C	4	Old JIS (JPt100)	-180 to 600°C	2	-20 to 120°C	3	0 to 200°C	5	Ni100Ω	-60 to 180°C	8		
Measurement mode	Measurement range	Set value *1																						
New JIS (Pt 100)	-200 to 850°C	0																						
	-20 to 120°C	1																						
	0 to 200°C	4																						
Old JIS (JPt100)	-180 to 600°C	2																						
	-20 to 120°C	3																						
	0 to 200°C	5																						
Ni100Ω	-60 to 180°C	8																						
Switch 2	<p>Offset/gain setting</p> 	<table border="1"> <thead> <tr> <th>Offset/gain setting</th> <th>Set value *1</th> </tr> </thead> <tbody> <tr> <td>Factory default</td> <td>0</td> </tr> <tr> <td>User range setting</td> <td>1</td> </tr> </tbody> </table>	Offset/gain setting	Set value *1	Factory default	0	User range setting	1																
Offset/gain setting	Set value *1																							
Factory default	0																							
User range setting	1																							
Switch 3	<p>Wiring type setting</p> 	<table border="1"> <thead> <tr> <th>Wiring type setting</th> <th>Set value *1</th> </tr> </thead> <tbody> <tr> <td>3-wire type</td> <td>0</td> </tr> <tr> <td>4-wire type</td> <td>1</td> </tr> </tbody> </table>	Wiring type setting	Set value *1	3-wire type	0	4-wire type	1																
Wiring type setting	Set value *1																							
3-wire type	0																							
4-wire type	1																							
Switch 4	 <p>0H : Normal mode (temperature conversion processing) 1 to FH *2: Offset/gain setting mode</p>																							
Switch 5		0: Fixed *1																						

\*1 The setting range 0 to 3 is available for the Q64RD/Q64RD-G. Setting of 4, 5 and 8 is available for the Q64RD-G only. Setting other than these setting values will output an error. For details, check the error code.

\*2 The same operation is activated with any value within the setting range. For the range of 1 to FH, for example, set 1.

(2) Operating procedure

Start the settings with GX Developer assignment setting screen.

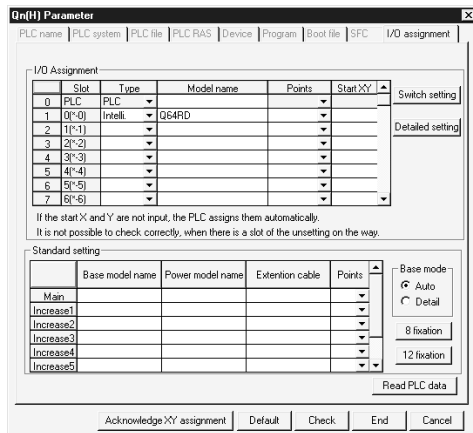

(a) I/O assignment setting screen

Set the following for the slot in which the Q64RD is mounted.

The type setting is required; set other items as needed.

Type : Select "Intelli."


Model name : Enter the module model name.

Points : Select 16 points.

Start XY : Enter the start I/O number for the Q64RD/Q64RD-G.

Detail setting: Specify the control PLC for the Q64RD/Q64RD-G.

It is unnecessary to set the "Error time output mode" or "H/W error time PLC operation mode" since these settings are invalid for the Q64RD/Q64RD-G.

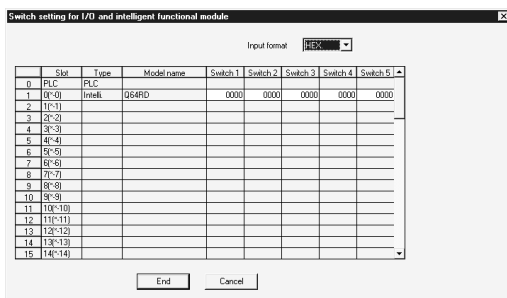

(b) Switch setting for intelligent function module screen


Click on [Switch setting] on the I/O assignment setting screen to display the screen shown at left, then set switches 1 to 5.

The switches can easily be set if values are entered in hexadecimal. Change the entry format to hexadecimal and then enter the values.

#### 4.6 Offset/Gain Setting

Perform offset/gain settings in the procedure given in Section 4.6 (1).  
When the industrial shipment setting is used, offset/gain setting is not necessary.  
If the utility package is installed, perform the offset/gain settings according to the procedure described in Section 5.6.2 or Section 5.6.3

(1) Offset/gain setting

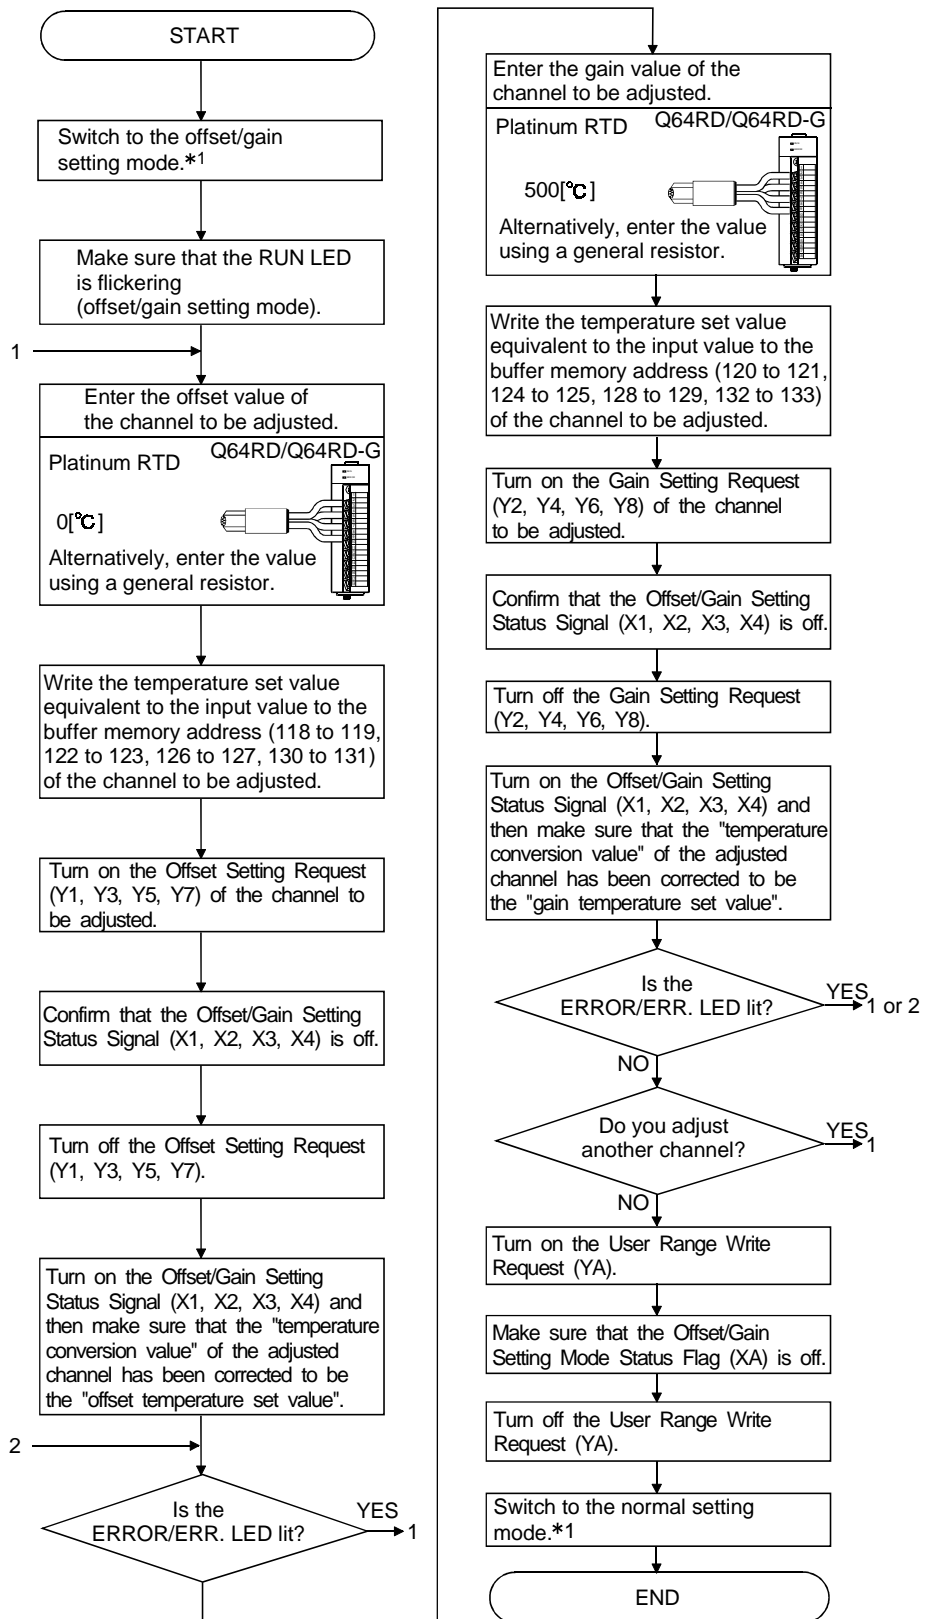

- \*1 The mode switching (normal mode to offset/gain setting mode to normal mode) method is given below.
- Dedicated instruction (G.OFFGAN) Refer to Section 4.6 (2), (a)
  - Setting made to mode switching setting (buffer memory addresses 158, 159: Un\G158, Un\G159) and turning the Operating condition setting request (Y9) from OFF to ON Refer to Section 4.6 (2), (b)
  - Intelligent function module switch setting Refer to Section 4.5, Section 4.6 (2), (c)  
(After intelligent function module switch setting, reset the PLC CPU or switch power OFF, then ON.)

POINT
<ul style="list-style-type: none"> <li>• Check the offset and gain values in the actual operating status.</li> <li>• By turning ON the user range write request (YA), the offset and gain values are stored into the E<sup>2</sup>PROM and will not be erased at power-off.</li> <li>• Make offset/gain setting within the measured temperature range. If setting is made outside the measured temperature range, the resolution and accuracy may not fall within the ranges of the performance specifications.</li> <li>• Offset/gain setting may be made for two or more channels simultaneously.</li> <li>• Do not set the offset and gain values simultaneously. Specifying them at the same time will cause an error, lighting up the ERROR/ERR. LED.</li> <li>• If an error occurs during offset/gain setting, setting can be continued on another channel or the like. However, since the error remains occurring, turn on the Error Clear Request (YF) when you want to clear the error.</li> <li>• At the time of offset/gain setting, turn ON the user range write request (YA) to write the values to the E<sup>2</sup>PROM. Data can be written to the E<sup>2</sup>PROM up to 100 thousand times. To prevent accidental write to the E<sup>2</sup>PROM, an error will occur and the error code (buffer memory address 19: Un\G19) will be stored if write is performed 26 consecutive times.</li> <li>• If an error (error code: 40□*<sup>1</sup>) occurs during offset/gain setting, re-set the correct offset/gain value. The offset/gain value of the channel where the error has occurred is not written to the Q64RD. (*1: □ indicates the corresponding channel number.)</li> <li>• Module Ready (X0) turns from OFF to ON when the offset/gain setting mode switches to the normal mode by the dedicated instruction (G.OFFGAN) or the setting of the mode switching setting (buffer memory addresses 158, 159: Un\G158, Un\G159). Note that initial setting processing will be executed if there is a sequence program that makes initial setting when Module ready (X0) turns ON. Also, the error is cleared when the mode is switched.</li> <li>• The areas of Factory default offset/gain value/User range settings offset/gain value/User range settings offset/gain resistance value (buffer memory address 160 to 255: Un\G160 to 255) are related with the user range save/restore function and allows users to re-set the offset/gain values easily in the case of online module change. These area are not used for the offset/gain setting.</li> </ul>




(2) Program examples

The program in the dotted area of (a) is common to (a), (b) and (c).  
 In this example, the I/O numbers of the Q64RD/Q64RD-G are X/Y0 to X/YF.

- Offset request ..... M0
- Gain request ..... M1
- Write request ..... M2
- Mode switching ..... M3
- Offset/gain temperature set value ..... D0, D1
- Dedicated instruction (G.OFFGAN) setting storage device ..... D10


(a) When switching the mode using the dedicated instruction (G.OFFGAN)

The following program example switches to the offset/gain setting mode with the dedicated instruction (G.OFFGAN) and writes the offset/gain values of CH. 1 to the Q64RD/Q64RD-G.

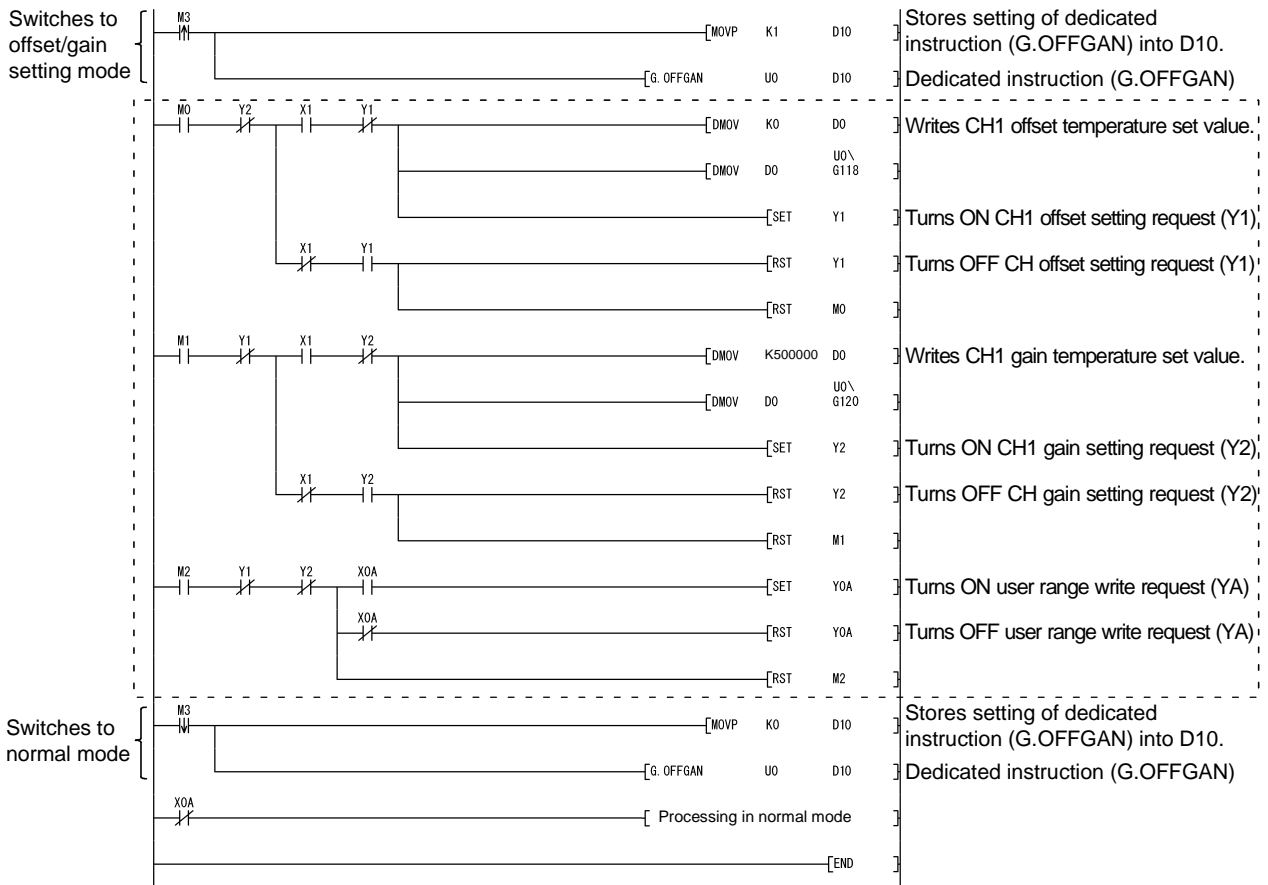

\* The program in the dotted area is a common program.

- (b) When switching the mode using the setting of the mode switching setting (buffer memory addresses 158, 159: Un\G158, Un\G159) and operating condition setting request (Y9)

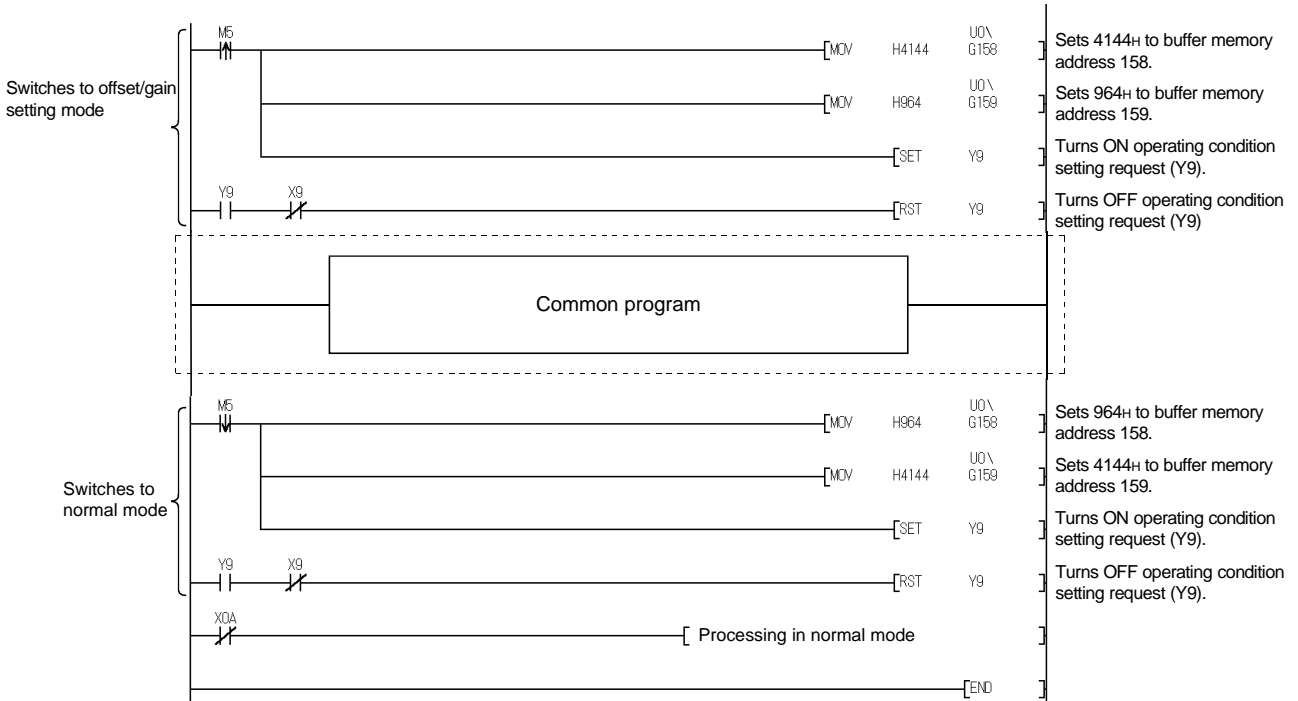

- (c) When switching the mode by making intelligent function module switch setting, other than the common program is not required.

## 5 UTILITY PACKAGE (GX Configurator-TI)

### 5.1 Utility Package Functions

Table 5.1 shows a list of the utility package functions.

Table 5.1 Utility Package (GX Configurator-TI) Function List

Function	Description	Reference section
Initial setting * 1	<p>(1) Make the initial setting for the following items on each channel.</p> <ul style="list-style-type: none"> <li>• Conversion Enable/Disable Setting</li> <li>• Sampling/Averaging Processing Selection (Q64RD)</li> <li>• Extended Averaging Processing Selection (Q64RD-G)</li> <li>• Time/Count Averaging Selection (Q64RD)</li> <li>• Time/Count Averaging Setting (Q64RD)</li> <li>• Time/Count/Moving Average/Time Constant Setting (Q64RD-G)</li> <li>• Warning Output Enable/Disable Setting</li> <li>• Setting Range (Q64RD)</li> <li>• Setting Range 1 (Q64RD-G)</li> <li>• Warning Output Lower Lower Limit Value</li> <li>• Warning Output Lower Upper Limit Value</li> <li>• Warning Output Upper Lower Limit Value</li> <li>• Warning Output Upper Upper Limit Value</li> <li>• Scaling Range Lower Limit Value</li> <li>• Scaling Range Upper Limit Value</li> <li>• Scaling Width Lower Limit Value</li> <li>• Scaling Width Upper Limit Value</li> </ul> <p>(2) The data set in the initial setting are stored as parameters in the PLC CPU, and automatically written into the Q64RD/Q64RD-G when the PLC CPU is changed into the RUN status.</p>	Section 5.4
Automatic refresh * 1	<p>(1) Make the refresh setting for the following items on each channel.</p> <ul style="list-style-type: none"> <li>• Conversion Completion Flag</li> <li>• CH <input type="checkbox"/> Measured Temperature Value (16bit)</li> <li>• Error Code</li> <li>• Setting Range (Q64RD)</li> <li>• Setting Range 1 (Q64RD-G)</li> <li>• Setting Range 2 (Q64RD-G)</li> <li>• Warning Output Flag</li> <li>• Disconnection Detection Flag</li> <li>• CH <input type="checkbox"/> Scaling Value</li> <li>• CH <input type="checkbox"/> Measured Temperature Value (32bit)</li> </ul> <p>(2) The data in the Q64RD/Q64RD-G buffer memory set in the automatic refresh setting are read or written to set devices automatically when the END instruction of the PLC CPU is executed.</p>	Section 5.5
Monitor/test	<p>Monitors and tests the buffer memory and I/O signals for the Q64RD/Q64RD-G.</p> <ul style="list-style-type: none"> <li>• Module Ready</li> <li>• Operating Condition Setting Completion Signal</li> <li>• Operating Condition Setting Request</li> <li>• Offset/gain Setting Mode Status Flag</li> <li>• Disconnection Detection Signal</li> <li>• Warning Output Signal</li> <li>• Conversion Completion Flag</li> <li>• Error Flag</li> <li>• Error Clear Request</li> <li>• Averaging Processing Selection (Q64RD-G)</li> <li>• Extended Averaging Processing Selection (Q64RD-G)</li> </ul> <p>(1) CH <input type="checkbox"/> Monitor/Test</p> <ul style="list-style-type: none"> <li>• Conversion Enable/Disable Setting</li> <li>• Sampling/Averaging Processing Selection (Q64RD)</li> <li>• Extended Averaging Processing Selection (Q64RD-G)</li> <li>• Time/Count Averaging Selection (Q64RD)</li> <li>• Time/Count Averaging Setting (Q64RD)</li> <li>• Time/Count/Moving Average/Time Constant Setting (Q64RD-G)</li> <li>• Conversion Completion Flag</li> <li>• Measured Temperature Value (16bit)</li> <li>• Measured Temperature Value (32bit)</li> <li>• Error Code</li> <li>• Setting Range (Q64RD)</li> <li>• Setting Range - Wire Connection (Q64RD)</li> <li>• Setting Range 1 (Q64RD-G)</li> <li>• Setting Range 2 - Wire Connection (Q64RD-G)</li> <li>• Warning Output Enable/Disable Setting</li> <li>• Warning Output Flag Lower Limit Value</li> <li>• Warning Output Flag Upper Limit Value</li> <li>• Warning Output Lower Lower Limit Value</li> <li>• Warning Output Lower Upper Limit Value</li> <li>• Warning Output Upper Lower Limit Value</li> <li>• Warning Output Upper Upper Limit Value</li> <li>• Disconnection Detection Flag</li> <li>• Scaling Value</li> <li>• Scaling Range Lower Limit Value</li> <li>• Scaling Range Upper Limit Value</li> <li>• Scaling Width Lower Limit Value</li> <li>• Scaling Width Upper Limit Value</li> </ul>	Section 5.6

Function	Description	Reference section	
Monitor/test	<p>(2) Offset/Gain Setting</p> <ul style="list-style-type: none"> <li>• Mode Switching Setting</li> <li>• Mode Switching Setting Status</li> <li>• CH□ Setting Range</li> <li>• CH□ Offset Temperature Setting Value</li> <li>• CH□ Offset Setting Request</li> <li>• CH□ Gain Temperature Setting Value</li> </ul> <p>(3) XY Monitor/Test</p> <ul style="list-style-type: none"> <li>• Xn0: Module Ready</li> <li>• Xn1: CH1 Offset/Gain Setting Status Signal</li> <li>• Xn2: CH2 Offset/Gain Setting Status Signal</li> <li>• Xn3: CH3 Offset/Gain Setting Status Signal</li> <li>• Xn4: CH4 Offset/Gain Setting Status Signal</li> <li>• Xn9: Operating Condition Setting Completion Signal</li> <li>• XnA: Offset/gain Setting Mode Status Flag</li> <li>• XnC: Disconnection Detection Flag</li> <li>• XnD: Warning Output Signal</li> <li>• XnE: Conversion Completion Flag</li> <li>• XnF: Error Flag</li> </ul> <p>(4) OMC Refresh Data</p> <ul style="list-style-type: none"> <li>• 3/4-wire type CH□ Factory default offset/gain input value</li> <li>• 3/4-wire type CH□ User range settings offset/gain value</li> </ul>	<ul style="list-style-type: none"> <li>• CH□ Gain Setting Request</li> <li>• CH□ Measured Temperature Value (16bit)</li> <li>• CH□ Measured Temperature Value (32bit)</li> <li>• User Range Write Request</li> <li>• Offset/gain Setting Mode Status Flag</li> </ul> <ul style="list-style-type: none"> <li>• Yn1: CH1 Offset Setting Request</li> <li>• Yn2: CH1 Gain Setting Request</li> <li>• Yn3: CH2 Offset Setting Request</li> <li>• Yn4: CH2 Gain Setting Request</li> <li>• Yn5: CH3 Offset Setting Request</li> <li>• Yn6: CH3 Gain Setting Request</li> <li>• Yn7: CH4 Offset Setting Request</li> <li>• Yn8: CH4 Gain Setting Request</li> <li>• Yn9: Operating Condition Setting Request</li> <li>• YnA: User Range Write Request</li> <li>• YnF: Error Clear Request</li> </ul> <ul style="list-style-type: none"> <li>• 3/4-wire type CH□ User range settings offset/gain resistance value</li> <li>• OMC refresh data read request</li> <li>• OMC refresh data write request</li> </ul>	Section 5.6

<b>POINT</b>
* 1 For the initial setting and automatic refresh setting, memory capacity of Max. 76 bytes per module is required for the Intelligent function module parameters.

## 5.2 Installing and Uninstalling the Utility Package

See "Method of installing the MELSOFT Series" attached with the utility package regarding the install and uninstall operation for the utility package.

### 5.2.1 Precautions for use

The following provides the precautions for using the GX Configurator-TI:

(1) **Important safety information**

Since GX Configurator-TI is add-in software for GX Developer, read "Safety Precautions" and the basic operating procedures in GX Developer's operating manual.

(2) **About installation**

The GX Configurator-TI is an add-in package for GX Developer Version 4 or later. Therefore, install GX Configurator-TI into the personal computer where the GX Developer Version 4 or later product has already been installed.

(3) **About display-screen errors while using the intelligent function module utility**

The screen may not be properly displayed while the intelligent function module utility is being used, due to a lack of system resources. If this occurs, close the intelligent function module utility first and then GX Developer (program, comments, etc.) and other applications. Next, restart GX Developer and the intelligent function module utility.

(4) **To start the intelligent function module utility**

(a) In GX Developer, select "QCPU (Q mode)" for the PLC series and specify the project.

If other than "QCPU (Q mode)" is selected for the PLC series, or if the project is not specified, the intelligent function module utility will not start.

(b) Multiple intelligent function module utilities can be started.

However, the [Open file]/[Save file] intelligent function module's parameter operations can only be performed by a single intelligent function module utility. Other intelligent function module utilities can perform the [Monitor/test] operation only.

(5) **How to switch screens when two or more intelligent function module utilities are started**

When two or more intelligent function module utility screens cannot be displayed side by side, use the task bar to change the intelligent function module utility screen so that it is displayed on top of other screens.



(6) About the number of parameters that can be set in GX Configurator-TI

The number of parameters that can be set by the GX Configurator for an intelligent function module installed in the CPU module and in a remote I/O station of the MELSECNET/H network system is limited.

Intelligent function module installation object	Maximum number of parameter settings	
	Initial setting	Automatic refresh setting
Q00J/Q00/Q01CPU	512	256
Q02/Q02H/Q06H/Q12H/Q25HCPU	512	256
Q12PH/Q25PHCPU	512	256
MELSECNET/H remote I/O station	512	256


For example, if multiple intelligent function modules are installed in a remote I/O station, set the GX Configurator so that the number of parameter settings of all the intelligent function modules does not exceed the maximum number of parameter settings.

The total number of parameter settings is calculated separately for the initial setting and for the automatic refresh setting.

The number of parameter settings that can be set for one module in the GX Configurator-TI is as shown below.

Object Module	Initial setting	Automatic refresh setting
Q64RD	5 (Fixed)	17 (Maximum number of settings)
Q64RD-G	4 (Fixed)	18 (Maximum number of settings)

Example) Counting the number of parameter settings in the automatic refresh setting

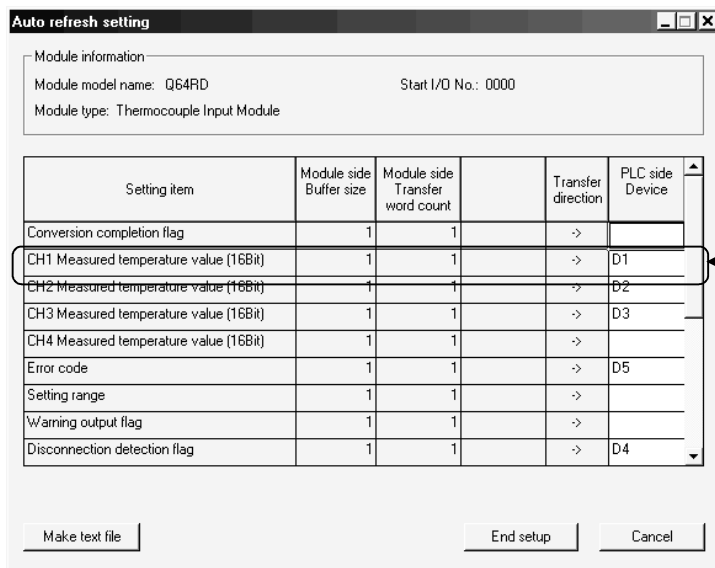

This one line is counted as one setting. Note that a line with a blank column is not counted. Add up all the setting items on this screen and add the value to the number of other intelligent function modules.

## 5.2.2 Operating environment

This section explains operating environment of the personal computer where the GX Configurator- TI is used.

Item	Peripheral devices
Installation (Add-in) destination *1	Add-in to GX Developer Version 4 (English version) or later *2
Computer main unit	Personal computer on which Windows® operates.
CPU	Refer to the following table "Used operating system and performance required for personal computer".
Required memory	
Hard disk	For installation 65 MB or more
free space	For operation 10 MB or more
Display	800 × 600 dot or more resolution *3
Operating system	Microsoft® Windows® 95 Operating System (English version) Microsoft® Windows® 98 Operating System (English version) Microsoft® Windows® Millennium Edition Operating System (English version) Microsoft® Windows NT® Workstation Operating System Version 4.0 (English version) Microsoft® Windows® 2000 Professional Operating System (English version) Microsoft® Windows® XP Professional Operating System (English version) Microsoft® Windows® XP Home Edition Operating System (English version)

\*1: Install the GX Configurator-TI in GX Developer Version 4 or later in the same language.

GX Developer (English version) and GX Configurator- TI (Japanese version) cannot be used in combination, and GX Developer (Japanese version) and GX Configurator- TI (English version) cannot be used in configuration.

\*2: GX Configurator- TI cannot be used as an add-in with GX Developer Version 3 or earlier versions.

\*3: Setting fonts Size of Windows® for "Large Fonts" may cause the text to extend off screen. Therefore, choose "Small Fonts".

Used operating system and performance required for personal computer

Operating system		Performance Required for Personal Computer	
		CPU	Required memory
Windows® 95		Pentium® 133MHz or more	32MB or more
Windows® 98		Pentium® 133MHz or more	32MB or more
Windows® Me		Pentium® 150MHz or more	32MB or more
Windows NT® Workstation 4.0		Pentium® 133MHz or more	32MB or more
Windows® 2000 Professional		Pentium® 133MHz or more	64MB or more
Windows® XP Professional	"XP compatibility mode" and "Fast User Switching" are not supported.	Pentium® 300MHz or more	128MB or more
Windows® XP Home Edition		Pentium® 300MHz or more	128MB or more

## 5.3 Explanation of Utility Package Operation

### 5.3.1 How to perform common utility package operations

#### (1) Available control keys

Special keys that can be used during operation of the utility package and their applications are shown in the table below.


Name of key	Application
Esc	Cancels a newly entered value when entering data in a cell. Closes the window.
Tab	Moves between controls in the window.
Ctrl	Used in conjunction with the mouse when multiple cells are selected in the selection test.
Delete	Deletes the character where the cursor is positioned. When a cell is selected, clears all of the setting contents.
Back Space	Deletes the character where the cursor is positioned.
↑ ↓ ← →	Moves the cursor.
Page Up	Moves the cursor one page up.
Page Down	Moves the cursor one page down.
Enter	Confirms the value entered in the cell.

#### (2) Data to be created with the utility package

The data and files shown below that are created with the utility package are also processed using GX Developer operation. Figure 5.1 shows which operation processes which data or file.

#### <Intelligent function module parameters>

- (a) This data is created with the automatic refresh setting, and stored in the intelligent function module parameter file of the project to be created using GX Developer.

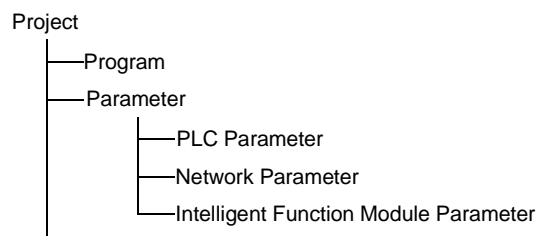



(b) Steps 1) to 3) shown in Figure 5.1 are performed using the following operations.

- 1) Operating from GX Developer.  
[Project] → [Open existing project] / [Save project] / [Save project as]
- 2) Operating from the utility parameter setting module selection screen.  
[File] → [Open file] / [Save file]
- 3) Operating from GX Developer.  
[Online] → [Read from PLC] / [Write to PLC] → "Intelligent function module parameters"  
Or, operate from the utility parameter setting module selection screen.  
[Online] → [Read from PLC] / [Write to PLC]

<Text file>

(a) A text file is created by performing the initial setting or automatic refresh setting, or selecting text file creation in the monitor/test screen. The text files can be utilized to create user documents.


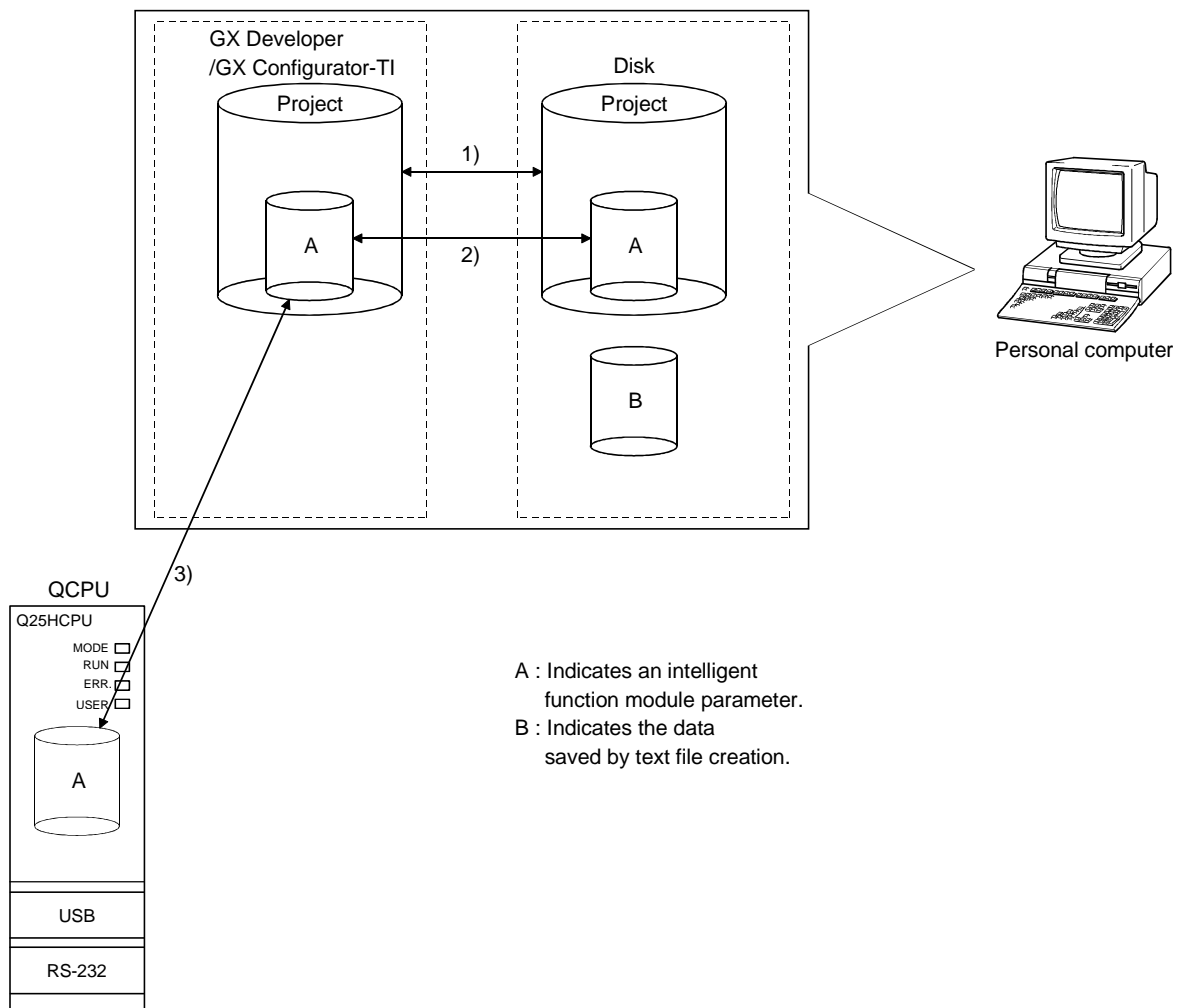


Figure 5.1 Correlation chart for data created using the utility package


5.3.2 Operation overview

GX Developer screen

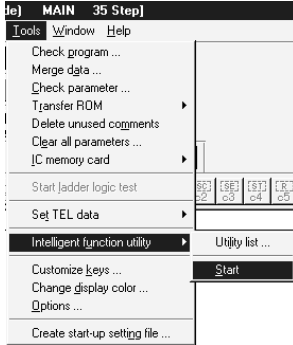

[Tools] – [Intelligent function utility] – [Start]

Intelligent function module parameter setting module select screen

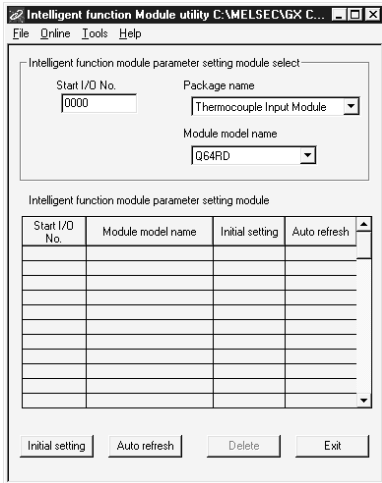

Enter "Start I/O No.", then select "Package name" and "Module model name".


See Section 5.3.3

Initial setting


Auto refresh

Initial setting screen

Automatic refresh settings screen

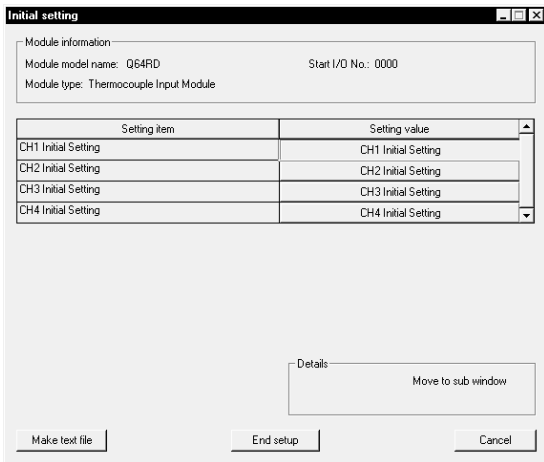

See Section 5.4

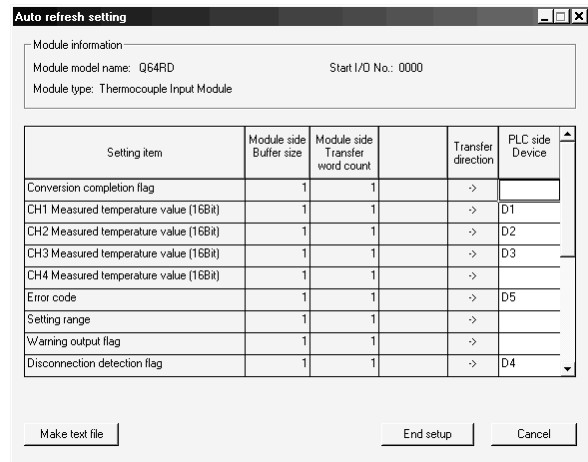

See Section 5.5

1) [Online] – [Monitor/test]

Select monitor/test module screen

Start I/O No.	Module model name
0000	Q64RD

Enter "Start I/O No.", then select "Package name" and "Module model name".

Monitor/test screen

Setting item	Current value	Setting value
Module ready	Ready	
Operating condition setting completion signal	Completed	
Operating condition setting request	OFF	OFF
Offset/gain setting mode status flag	Normal mode	
User range write request	OFF	OFF
Disconnection detection signal	Not detected	
Warning output signal	Normal	
Conversion completion flag	Not completed	
Error flag	Normal	
Error clear request	OFF	OFF
CH1 Monitor/test		CH1 Monitor/test

See Section 5.6


## 5.3.3 Starting the intelligent function module utility

**[Purpose of setting]**

Start the intelligent function module utility from GX Developer, and display the module selection screen for the intelligent function module utility parameter setting. The screens for performing initial setting, automatic refresh setting and monitor/test module selection (selecting the module for which monitoring/testing is to be performed) can be started from this screen.

**[Startup procedure]**

[Tools] → [Intelligent function utility] → [Start]

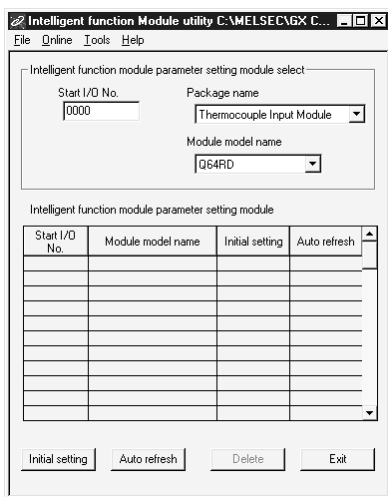**[Setting screen]****[Explanation of items]****(1) How to start each screen****(a) Starting initial setting**

"Start I/O No.\*" → "Package name" → "Module model name" →

**Initial setting**

**(b) Starting automatic refresh setting**

"Start I/O No.\*" → "Package name" → "Module model name" →

**Auto refresh**

**(c) Monitor/test module selection screen**

**Online** → **Monitor/test**

\* Enter the start I/O numbers in hexadecimal.

**(2) Explanation of screen command buttons**

**Delete**


Deletes the initial setting and automatic refresh setting for the selected module.

**Exit**

Ends the Intelligent function module utility.

## (3) Menu bar

## (a) File items

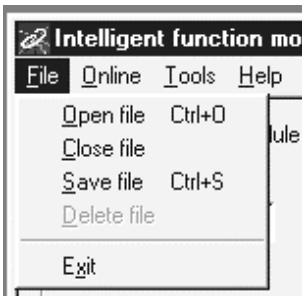

With file operation, the intelligent function module parameters for the project opened by GX Developer can be processed.

[Open file] : Reads the parameter file.


[Close file] : Closes the parameter file. If revisions were made, the dialog box asking whether to save the file appears.

[Save file] : Saves the parameter file.

[Delete file] : Deletes the parameter file.

[Exit] : Ends the intelligent function module utility.

## (b) Online items

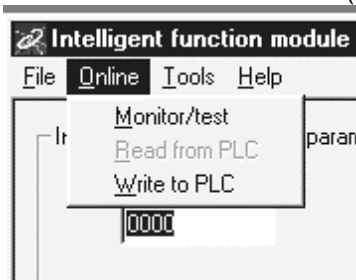

[Monitor/test] : Starts the monitor/test module selection screen.

[Read from PLC] : Reads the intelligent function module parameters from the CPU module.

[Write to PLC] : Writes the intelligent function module parameters to the CPU module.

## POINT

## (1) Saving the intelligent function module parameter files

Since files cannot be saved using the GX Developer project save operation, save the files using the module selection screen for intelligent function module parameter setting described above.

## (2) Reading from and writing to PLC operations for the intelligent function module parameters using GX Developer

(a) After the intelligent function module parameters are saved in a file, they can be read from and written into the PLC.

(b) Set the target PLC CPU using GX Developer [Online] → [Transfer setup].

(c) When the Q64RD/Q64RD-G is installed to the remote I/O station, use "Read from PLC" and "Write to PLC".

## (3) Checking for the required utility

Start I/O No. is displayed in the Intelligent function module utility setting screen, but a "\*" may be displayed for the model name.

This means that either the required utility is not installed or that the utility cannot be started from the GX Developer.

Check for the required utility in [Tools] - [Intelligent function utility] - [Utility list...] in GX Developer, and set it.

## 5.4 Initial Setting

## [Purpose of setting]

Make initial setting for operating the Q64RD/Q64RD-G on each channel.


Refer to Section 5.1 for the initial setting parameter types.

This initial setting makes sequence program setting unnecessary.

## [Startup procedure]

"Start I/O No.\*" → "Package name" → "Module model name" →

## [Setting screen]

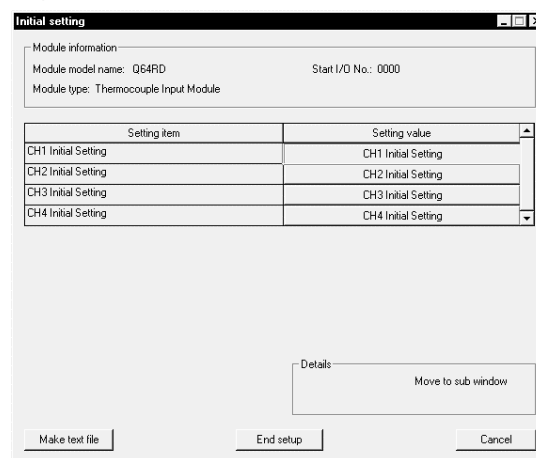

## [Explanation of items]

## (1) Setting contents

Set whether temperature conversion is enabled or disabled and the temperature conversion method for each channel.

## (2) Explanation of command buttons

- |   |   |
|---|---|
| <input type="button" value="Make text file"/> | Outputs the screen display in text file format.   |
| <input type="button" value="End setup"/>      | Confirms the setting data and ends the operation. |
| <input type="button" value="Cancel"/>         | Cancel the setting data and ends the operation.   |

**POINT**

Initial settings are stored in the intelligent function module parameters. After being written to the CPU module, the initial setting is made effective by either (1) or (2).

(1) Cycle the RUN/STOP switch of the CPU module: STOP → RUN → STOP → RUN.

(2) With the RUN/STOP switch set to RUN, turn off and then on the power or reset the CPU module.

When using a sequencer program to write the initial settings, when the CPU is switched from STOP to RUN the initial settings will be written, So ensures that programming is carried out to re-execute the initial settings.

## 5.5 Automatic Refresh Settings

## [Purpose of setting]

Sets the buffer memory for the Q64RD/Q64RD-G to be automatically refreshed.

## [Startup procedure]

"Start I/O No.\*" → "Package name" → "Module model name" →

## [Setting screen]

Setting item	Module side Buffer size	Module side Transfer word count	Transfer direction	PLC side Device
Conversion completion flag	1	1	->	
CH1 Measured temperature value (16Bit)	1	1	->	D1
CH2 Measured temperature value (16Bit)	1	1	->	D2
CH3 Measured temperature value (16Bit)	1	1	->	D3
CH4 Measured temperature value (16Bit)	1	1	->	
Error code	1	1	->	D5
Setting range	1	1	->	
Warning output flag	1	1	->	
Disconnection detection flag	1	1	->	D4

## [Explanation of items]

## (1) Contents of the screen display

- Model side Buffer size** : Displays the size of the buffer memory for the setting item that can be transferred (fixed at one word).
- Model side Transfer word count** : Displays the number of words to transfer the CPU device from the head device (fixed at one word).
- Transfer direction** : " $\leftarrow$ " indicates that data is written from the device to the buffer memory.  
" $\rightarrow$ " indicates that data is read from the buffer memory to the device.
- PLC side Device** : Enter the device at the CPU module to be automatically refreshed.  
The devices that can be used are X, Y, M, L, B, T, C, ST, D, W, R, ZR. When using bit devices, K, Y, M, L or B, set a number that can be divided by 16 points (examples: X10, Y120, M16).  
Also, buffer memory data is stored in 16 point blocks starting from the device number that was set. For example, if X10 is set, data will be stored from X10 to X1F.

## (2) Explanation of command buttons

A file containing the screen contents is created in text file format.

Confirms the setting data and ends the operation.

Cancels the setting data and ends the operation.

**POINT**

The automatic refresh settings are stored in the intelligent function module parameters. After the automatic refresh settings are written to the CPU module, they are validated by performing STOP → RUN → STOP → RUN operations for the CPU module, turning the power OFF and then ON, or resetting the CPU module. The automatic refresh settings cannot be changed from the sequencer program. However, it is possible to add a process similar to automatic refresh by using the FROM/TO instructions of the sequence program.



## 5.6 Monitor/Test

### 5.6.1 Monitor/test screen

#### [Purpose of setting]

Buffer memory monitoring/testing, I/O signals monitoring/testing, offset/gain settings (see Section 5.6.2, 5.6.3), OMC refresh data (see Section 5.6.4) are started from this screen.

#### [Startup procedure]


Monitor/test module selection screen → "Start I/O No.\*" → "Package name" → "Module model name" → **Monitor/test**

\* Enter the start I/O numbers in hexadecimal.

The screen can also be started from the GX Developer Version6 or later system monitor.



See GX Developer's operating manual for details.

#### [Setting screen]

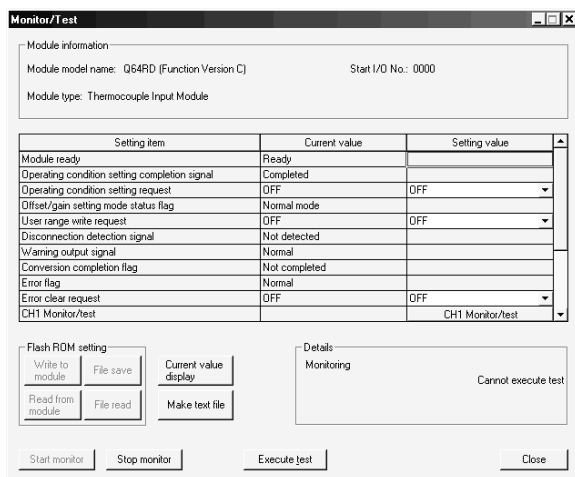

CH  Monitor/Test

Offset/Gain Setting

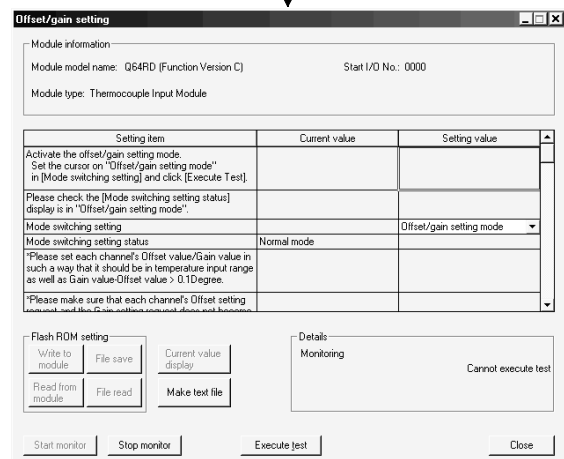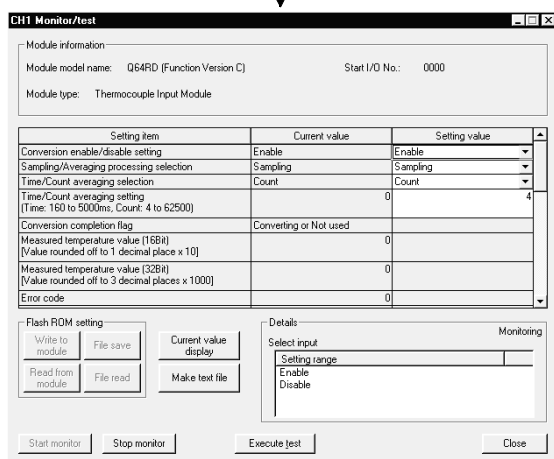

1)

X/Y Monitor/Test

OMC refresh

**X/Y Monitor/test**

Module information  
 Module model name: Q64RD (Function Version C) Start I/O No.: 0000  
 Module type: Thermocouple Input Module

Setting item	Current value	Setting value
X00:Module ready	Ready	
X01:CH1 Offset/gain setting status signal	Not set	
X02:CH2 Offset/gain setting status signal	Not set	
X03:CH3 Offset/gain setting status signal	Not set	
X04:CH4 Offset/gain setting status signal	Not set	
X09:Operating condition setting completion signal	Completed	
X0A:Offset/gain setting mode status flag	Normal mode	
X0C:Disconnection detection signal	Not detected	
X0D:Warning output signal	Normal	
X0E:Conversion completion flag	Not completed	
X0F:Error flag	Normal	

Flash ROM setting  
 Write to module File save Current value display  
 Read from module File read Make text file

Details  
 Monitoring Cannot execute test

Start monitor Stop monitor Execute test Close

**OMC (Online Module Change) refresh data**

Module information  
 Module model name: Q64RD (Function Version C) Start I/O No.: 0000  
 Module type: Thermocouple Input Module

Setting item	Current value	Setting value
3-wire CH1 Factory default offset value	0000	0000
3-wire CH1 Factory default offset value	0000	0000
3-wire CH1 Factory default gain value	0000	0000
3-wire CH1 Factory default gain value	0000	0000
3-wire CH1 User range settings: offset value	0000	0000
3-wire CH1 User range settings: offset value	0000	0000
3-wire CH1 User range settings: gain value	0000	0000
3-wire CH1 User range settings: gain value	0000	0000
3-wire CH1 User range settings: resistance offset value	00000000	00000000
3-wire CH1 User range settings: resistance gain value	00000000	00000000
4-wire CH1 Factory default offset value	0000	0000

Flash ROM setting  
 Write to module File save Current value display  
 Read from module File read Make text file

Details  
 Hexadecimal input Monitoring  
 Setting range 0000 - FFFF

Start monitor Stop monitor Execute test Close

## [Explanation of items]

## (1) Contents of screen display

- Setting item : The I/O signal or buffer memory names are displayed.  
 Current value : The I/O signal status or current value of buffer memory are monitored.  
 Setting value : Select or enter the data to be written during test operation.

## (2) Explanation of the command buttons

Current value display	The current value of the selected item is displayed. (This is used to check text that cannot be displayed in the current value field. However, in this utility package, all items can be displayed in the display fields).
Make text file	Creates a file consisting of the screen contents in text file format.
Start monitor /	Selects whether or not the current value fields are monitored.
Stop monitor	
Execute test	Performs a test of the selected item. To select more than one item, select multiple items while holding down the <span style="border: 1px solid black; padding: 0 2px;">Ctrl</span> key.
Close	Closes the screen currently displayed and returns to the previously displayed screen.

**REMARK**

The following describes an example where sampling processing for the selection test operation is changed to a 10-time averaging processing setting when the Q64RD id used.

- (1) Set averaging processing in the setting value field for CH□ Sampling /Averaging processing selection.
- (2) Set number of times in the setting value field for CH□ Time/count selection.
- (3) Click the setting value field for CH□ Time/count averaging setting to select.
- (4) After entering the count, press the Enter key.

At this point, nothing has been written to the Q64RD.

- (5) Select the setting value fields that were specified in steps 1 to 4 while holding down the Ctrl key.
- (6) Click Execute test to execute write operation.

Once writing has been completed, the value that was written will be displayed in the present value field.

### 5.6.2 Offset/gain setting operation (Function version C or later)

Perform the offset/gain setting operation in the following sequence.

(1) Switch to the offset/gain setting screen

Display the offset/gain setting screen using the operation described in Section 5.6.1.

(2) Switch to the offset/gain setting mode

Set "Offset/gain setting mode" in the Setting (value) field of Mode switching setting and click the  button to perform write.

On completion of write, the indication in the Current value field of Mode switching setting status changes to "Offset/gain setting mode".

(3) Adjustment of the offset and gain values

(a) Set the offset value

Enter the desired value into the Setting (value) field for CH□ Offset Temperature Setting Value, and click the  button.

(b) Determine the offset value

Select "Request" from the Setting (value) field for CH□ Offset Setting Request, and click the  button. After making sure that the offset/gain setting status signal (X1, X2, X3, X4) has turned off, select "OFF" from the Setting (value) field for CH□ Offset Setting Request, and click the  button.

(c) Set the gain value

Enter the desired value into the Setting (value) field for CH□ Gain Temperature Setting Value, and click the  button.

(d) Determine the gain value

Select "Request" from the Setting (value) field for CH□ Gain Setting Request, and click the  button. After making sure that the offset/gain setting status signal (X1, X2, X3, X4) has turned off, select "OFF" from the Setting (value) field for CH□ Gain Setting Request, and click the  button.

(e) To set the offset/gain for more than one channel, repeat steps (a) to (d).

(4) Write the offset/gain setting values to the module

Write the offset/gain settings to the module after completing the settings for all channels using the user range setting. Note that if settings are written while offset/gain settings are incomplete, the status at that point will be written to the module.

(a) Write to the Q64RD/Q64RD-G

Select "Request" from the Setting (value) field for User Range Write Request, and click the  button.

(b) Confirm execution of write and exit

After confirming that the indication of the Current value field for Offset/gain Setting Mode Status Flag changes from "Completed" to "Writing", select "OFF" from the Setting (value) field for User Range Write Request, and click the  button.

(c) Error handling

Confirm that the ERROR LED on the Q64RD (ERR. LED on the Q64RD-G) is off. If the ERROR LED (ERR. LED) is lit, click on , check the error code on the monitor screen, and then perform the offset/gain settings again.

(5) Switch to the normal mode

Set "Normal mode" in the Setting (value) field of Mode switching setting and click the  button to perform write.

On completion of write, the indication in the Current value field of Mode switching setting status changes to " Normal mode".

### 5.6.3 Offset/gain setting operation (Function version B)

Perform the offset/gain setting operation in the following sequence.

(1) Switch to the offset/gain setting mode

Change switch 4 for intelligent function module switch setting to the offset/gain setting mode and switch 2 to the user setting. (Refer to Section 4.5)

(2) Switch to the offset/gain setting screen

Display the offset/gain setting screen using the operation described in Section 5.6.1.

(3) Adjustment of the offset and gain values

(a) Set the offset value

Enter the desired value into the Setting (value) field for CH□ Offset Temperature Setting Value, and click the  button.

(b) Determine the offset value

Select "Request" from the Setting (value) field for CH□ Offset Setting Request, and click the  button. After making sure that the offset/gain setting status signal (X1, X2, X3, X4) has turned off, select "OFF" from the Setting (value) field for CH□ Offset Setting Request, and click the  button.

(c) Set the gain value

Enter the desired value into the Setting (value) field for CH□ Gain Temperature Setting Value, and click the  button.

(d) Determine the gain value

Select "Request" from the Setting (value) field for CH□ Gain Setting Request, and click the  button. After making sure that the offset/gain setting status signal (X1, X2, X3, X4) has turned off, select "OFF" from the Setting (value) field for CH□ Gain Setting Request, and click the  button.

(e) To set the offset/gain for more than one channel, repeat steps (a) to (d).

(4) Write the offset/gain setting values to the module

Write the offset/gain settings to the module after completing the settings for all channels using the user range setting. Note that if settings are written while offset/gain settings are incomplete, the status at that point will be written to the module.

(a) Write to the Q64RD

Select "Request" from the Setting (value) field for User Range Write Request, and click the  button.

(b) Confirm execution of write and exit

After confirming that the indication of the Current value field for Offset/gain Setting Mode Status Flag changes from "Completed" to " Writing ", select "OFF" from the Setting (value) field for User Range Write Request, and click the  button.

## (c) Error handling

Confirm that the ERROR LED for the Q64RD is off. If the ERROR LED is lit, click on  , check the error code on the monitor screen, and then perform the offset/gain settings again.

## 5.6.4 OMC (Online Module Change) refresh data

Perform the following steps to save/restore the user range.

## (1) Switch to the OMC refresh data screen

Perform the operation in Section 5.6.1 to display the OMC refresh data screen.

Setting item	Current value	Setting value
3-wire CH1 Factory default offset value	0000	0000
3-wire CH1 Factory default offset value	0000	0000
3-wire CH1 Factory default gain value	0000	0000
3-wire CH1 Factory default gain value	0000	0000
3-wire CH1 User range settings offset value	0000	0000
3-wire CH1 User range settings offset value	0000	0000
3-wire CH1 User range settings gain value	0000	0000
3-wire CH1 User range settings gain value	0000	0000
3-wire CH1 User range settings resistance offset value	00000000	00000000
3-wire CH1 User range settings resistance gain value	00000000	00000000
4-wire CH1 Factory default offset value	0000	0000

## (2) User range saving

- (a) Change the Setting value field of OMC refresh data read request to "Request", and click the  button.

When read is completed, the values are displayed in the Current value fields of 3/4-wire type CH□ Factory default offset/gain value/3/4-wire type CH□ User range settings offset/gain value/3/4-wire type CH□ User range settings offset/gain resistance value.

- (b) Compare the values with those in the range reference table, and record them if they are correct.  
Refer to Section 7.4 for the range reference table.

## (3) User range restoration

- (a) Set the recorded values in the Setting value fields of 3/4-wire type CH□ Factory default offset/gain value/3/4-wire type CH□ User range settings offset/gain value/3/4-wire type CH□ User range settings offset/gain resistance value.

- (b) Select all the Setting value fields of 3/4-wire type CH  Factory default offset/gain value/3/4-wire type CH  User range settings offset/gain value/3/4-wire type CH  User range settings offset/gain resistance value, and click the  button.

When write is completed, the set values are displayed in the Current value fields of 3/4-wire type CH  Factory default offset/gain value/3/4-wire type CH  User range settings offset/gain value/3/4-wire type CH  User range settings offset/gain resistance value.

- (c) Change the Setting value field of OMC refresh data write request to "Request", and click the  button.

Make sure that the indication in the Current value field of OMC refresh data write request changes from "Request" to "OFF" on completion of write.

## 6 PROGRAMMING

This chapter describes Q64RD/Q64RD-G programs.

When diverting any of the program examples introduced in this chapter to the actual system, fully verify that there are no problems in the controllability of the target system.

### 6.1 Programs Used in Normal System Configuration

System configuration used to describe programs

#### (1) System configuration

Power supply module	QnCPU	Q64RD	QX41	QY41		
		X/Y0 to X/YF	X10 to X2F	Y30 to Y4F		

#### (2) Program conditions

This program reads the digital values of temperature conversions made on CH1 to CH3 of the Q64RD.

Sampling processing is performed on CH1, and Averaging processing is executed every 500 counts on CH2 and in a cycle of 1000ms on CH3. If a write error occurs, the corresponding error is displayed in BCD.

##### (a) Initial settings

- Temperature conversion enabled channel.....CH1 to CH3
- Sampling channel.....CH1
- Count-specified averaging channel .....CH2
- Time-specified averaging channel.....CH3

##### (b) Devices used by user

- Measured temperature value read command signal  
(Turned on when user wants to read measured temperature value) .....X10
- Disconnection detection reset signal .....X11
- Error reset signal  
(Turned on when user wants to make error reset) .....X12
- Error code display(3-digits BCD) .....Y40 to Y4B
- Conversion flag .....M0 to M2
- Measured temperature value (16-bit) .....D1 to D3  
(D11 to D13)
- Disconnection detection flag .....D4, M10
- Error code storage .....D5

**POINT**

Refer to Section 3.3 for the I/O signals (X0 to XF, Y0 to YF).




6.1.1 Program example used when utility package is used

(1) Operation of utility package


(a) Initial setting (refer to Section 5.4)

Set Sampling processing for CH1, averaging processing of every 500 counts for CH2 and averaging processing in a cycle of 1000ms for CH3.

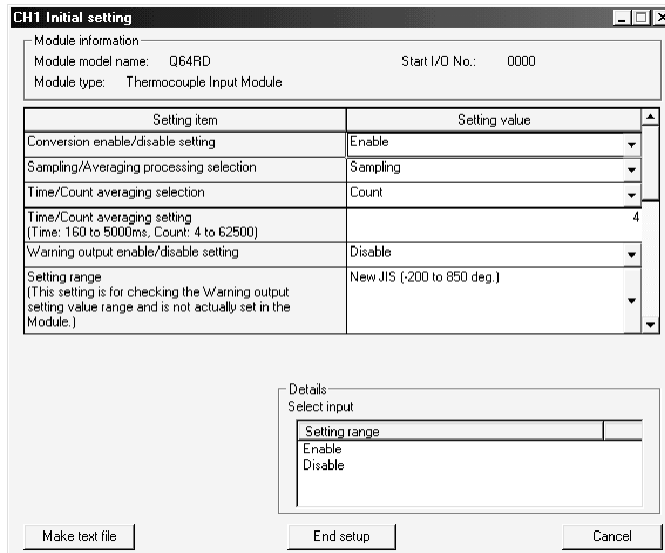

(b) Automatic refresh settings (refer to Section 5.5)


Set the CH1 to CH3 measured temperature values and error codes.

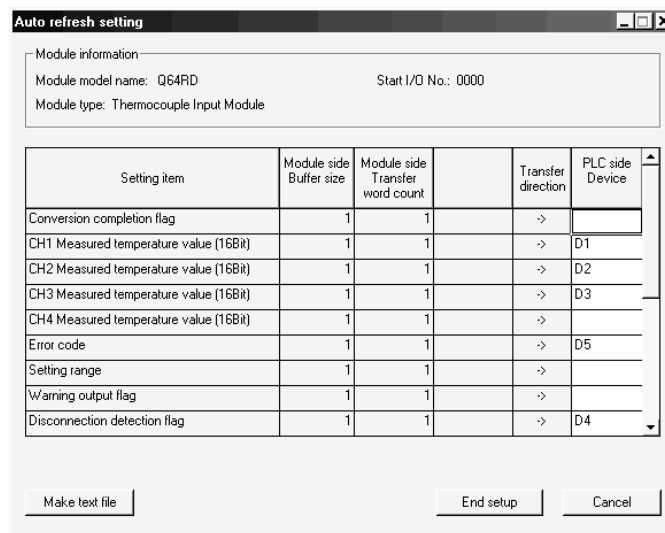


(c) Write of intelligent function module parameters (refer to Section 5.3.3)

Write the intelligent function module parameters to the CPU module. Perform this operation on the parameter setting unit selection screen.

(2) Program example

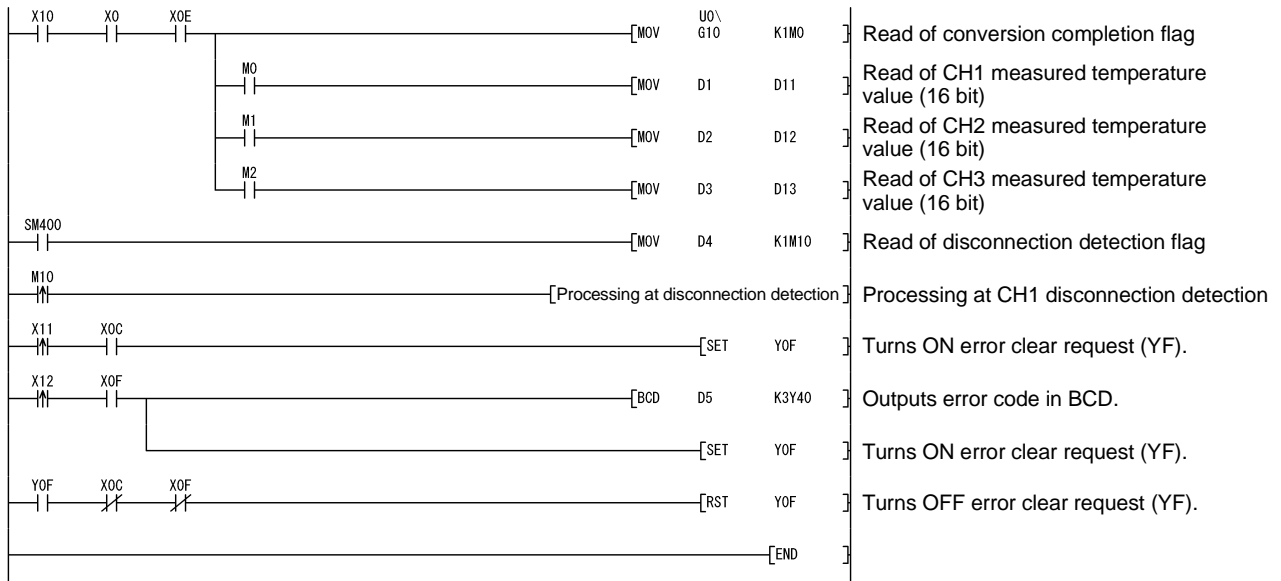


6.1.2 Program example used when utility package is not used

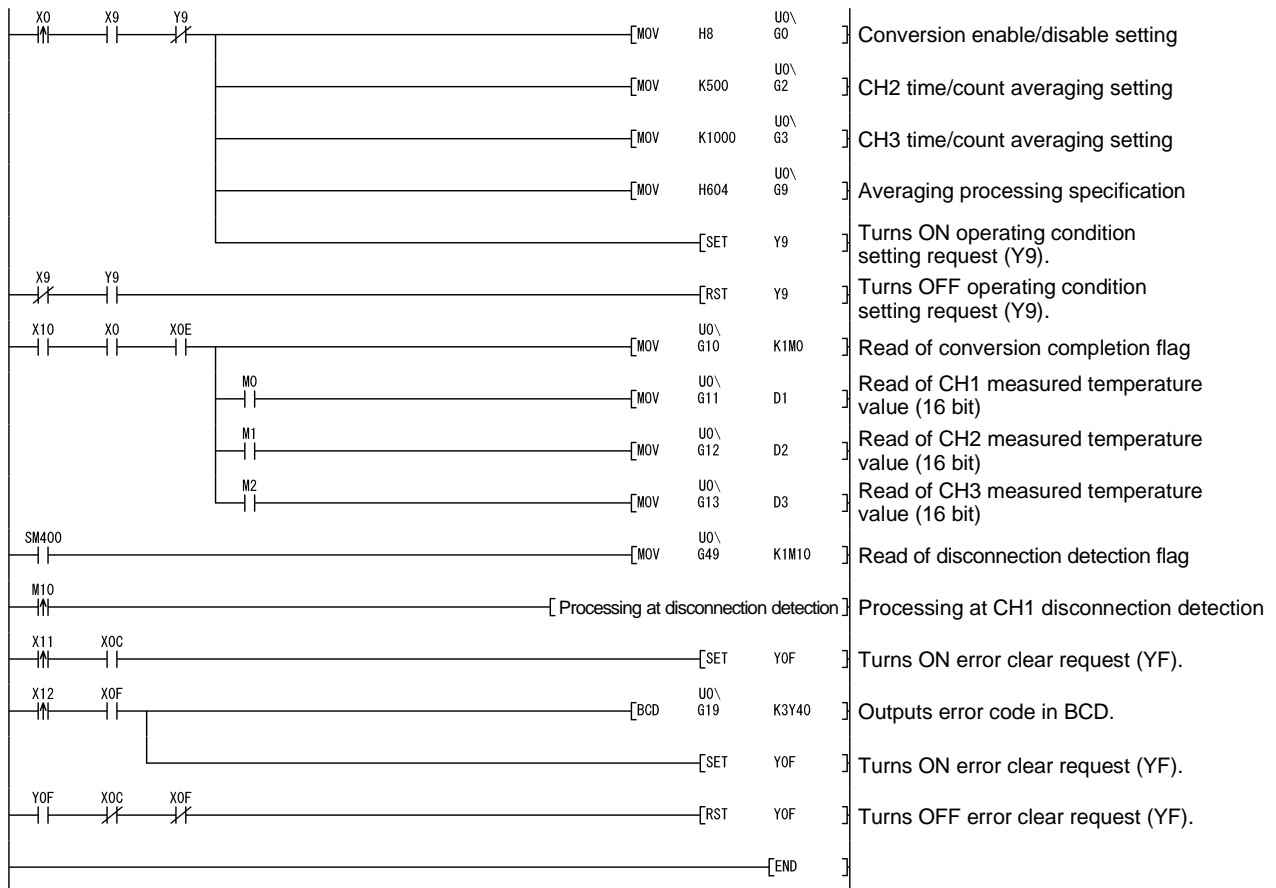

6.2 Programs Used on Remote I/O Network

System configuration used to describe programs

(1) System configuration

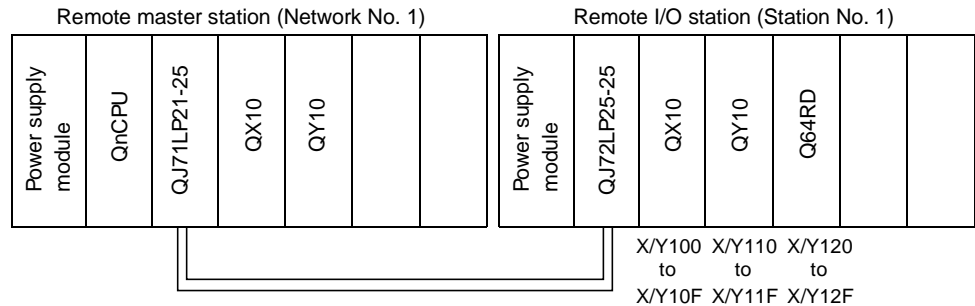

(2) Program conditions

This program is written for the CPU on the remote master station to read the digital values of temperature conversions made on CH1 to CH3 of the Q64RD. Sampling processing is performed on CH1, and Averaging processing is executed every 500 counts on CH2 and in a cycle of 1000ms on CH3. If a write error occurs, the corresponding error is displayed in BCD.

(3) Initial settings

- Temperature conversion enabled channel .....CH1 to CH3
- Sampling channel .....CH1
- Count-specified averaging channel .....CH2
- Time-specified averaging channel .....CH3
- CH2 averaging count .....500 times
- CH3 averaging time .....1000ms (1s)

(4) Devices used by user

- Initial setting request signal .....X20
- Measured temperature value read command signal  
(Turned on when user wants to read measured value) .....X21
- Disconnection detection reset signal .....X22
- Error reset signal  
(Turned on when user wants to make error reset) .....X23
- Error code display (3-digits BCD) .....Y30 to Y3B
- Conversion completion flag .....D10
- CH1 to 3 temperature value (16-bit) .....D1 to D3  
(W1 to W3)
- Disconnection detection flag .....W4, M20
- Error code storage .....W5

POINT

Refer to Section 3.3 for the I/O signals (X120 to X12F, Y120 to Y12F).

6.2.1 Program example used when utility package is used

(1) Operation of GX Developer

(a) Setting of CPU parameters

- Network type :MNET/H (remote master)
- First I/O No. :0000H
- Network No. :1
- Total number of (slave) stations :1
- Mode :Online
- Network range assignment :

StationNo.	M station -> R station						M station <- R station					
	Points	Start	End	Points	Start	End	Points	Start	End	Points	Start	End
1	256	0100	01FF	256	0000	00FF	256	0100	01FF	256	0000	00FF

StationNo.	M station -> R station			M station <- R station			M station -> R station			M station <- R station		
	Points	Start	End	Points	Start	End	Points	Start	End	Points	Start	End
1							160	0100	019F	160	0000	009F

• Refresh parameters:

Assignment method

Points/Start

Start/End

Transient transmission error history status

Overwrite  Hold

	Link side					PLC side			
	Dev. name	Points	Start	End		Dev. name	Points	Start	End
Transfer SB	SB	512	0000	01FF	↔	SB	512	0000	01FF
Transfer SW	SW	512	0000	01FF	↔	SW	512	0000	01FF
Random cyclic	LB				↔				
Random cyclic	LW				↔				
Transfer1	LB	8192	0000	1FFF	↔	B	8192	0000	1FFF
Transfer2	LW	8192	0000	1FFF	↔	W	8192	0000	1FFF
Transfer3	LX	512	0000	01FF	↔	X	512	0000	01FF
Transfer4	LY	512	0000	01FF	↔	Y	512	0000	01FF
Transfer5					↔				
Transfer6					↔				

(2) Operation of utility package

Perform operation on the remote I/O station side.

(a) Initial setting (refer to Section 5.4)

Set Sampling processing for CH1, averaging processing of every 500 counts for CH2 and averaging processing in a cycle of 1000ms for CH3.

**CH1 Initial setting**

Module information

Module model name: 064RD Start I/O No.: 0020

Module type: Thermocouple Input Module

Setting item	Setting value
Conversion enable/disable setting	Enable
Sampling/Averaging processing selection	Sampling
Time/Count averaging selection	Count
Time/Count averaging setting (Time: 160 to 5000ms, Count: 4 to 62500)	4
Warning output enable/disable setting	Disable
Setting range (This setting is for checking the Warning output setting value range and is not actually set in the Module.)	New JIS (-200 to 850 deg)

Details


Select input

Setting range

Enable


Disable

- (b) Automatic refresh settings (refer to Section 5.5)  
Set the CH1 to CH3 measured temperature values and error codes.

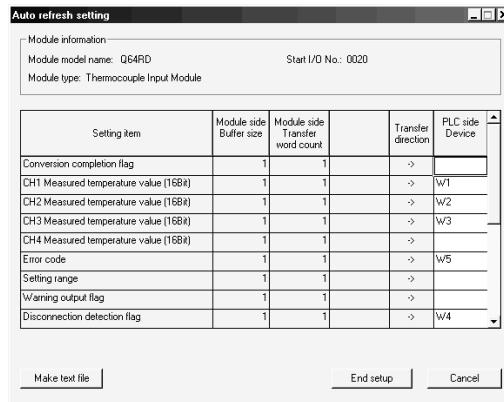

- (c) Write of intelligent function module parameters (refer to Section 5.3.3)  
Write the intelligent function module parameters to the CPU module.  
Perform this operation on the parameter setting unit selection screen.

(3) Program example

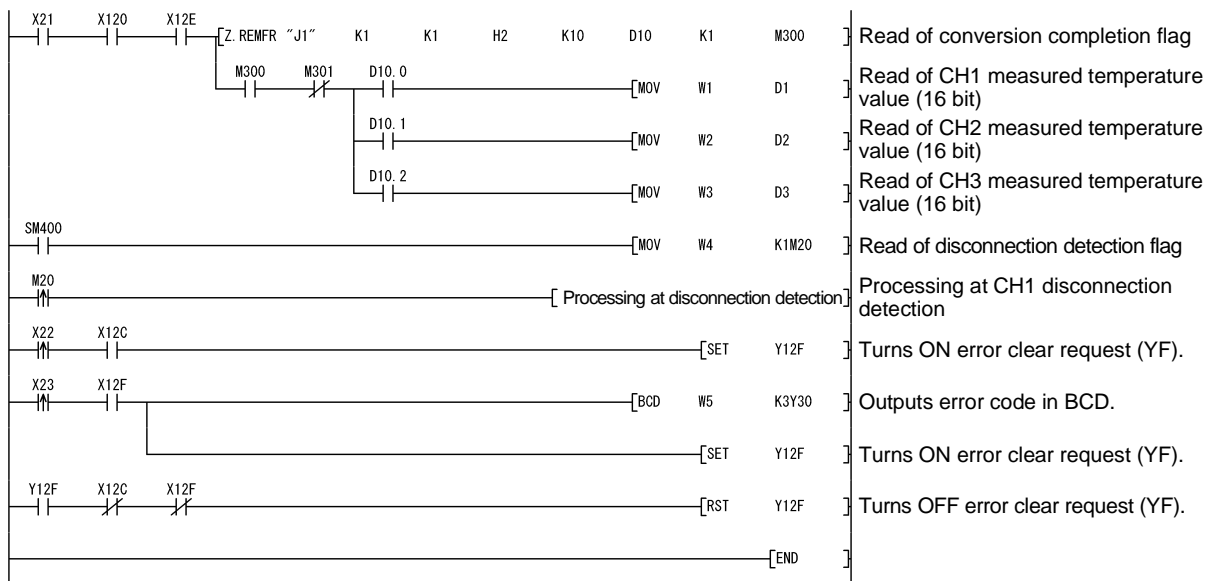

6.2.2 Program example used when utility package is not used

(1) Operation of GX Developer (Setting of CPU parameters)

- Network type : MNET/H (remote master)
- First I/O No : 0000H
- Network No : 1
- Total number of (slave) stations : 1
- Mode : Online
- Network range assignment :

StationNo.	M station -> R station						M station <- R station					
	Y			Y			X			X		
	Points	Start	End	Points	Start	End	Points	Start	End	Points	Start	End
1	256	0100	01FF	256	0000	00FF	256	0100	01FF	256	0000	00FF

- Refresh parameters:

Assignment method

Points/Start


Start/End


Transient transmission error history status

Overwrite  Hold

	Link side						PLC side			
	Dev. name	Points	Start	End	Dev. name		Points	Start	End	
Transfer SB	SB	512	0000	01FF	↔	SB	512	0000	01FF	
Transfer SW	SW	512	0000	01FF	↔	SW	512	0000	01FF	
Random cyclic	LB				↔	▼				
Random cyclic	LW				↔	▼				
Transfer1	LB	8192	0000	1FFF	↔	B	8192	0000	1FFF	
Transfer2	LW	8192	0000	1FFF	↔	W	8192	0000	1FFF	
Transfer3	LX	512	0000	01FF	↔	X	512	0000	01FF	
Transfer4	LY	512	0000	01FF	↔	Y	512	0000	01FF	
Transfer5	▼				↔	▼				
Transfer6	▼				↔	▼				

(2) Program example

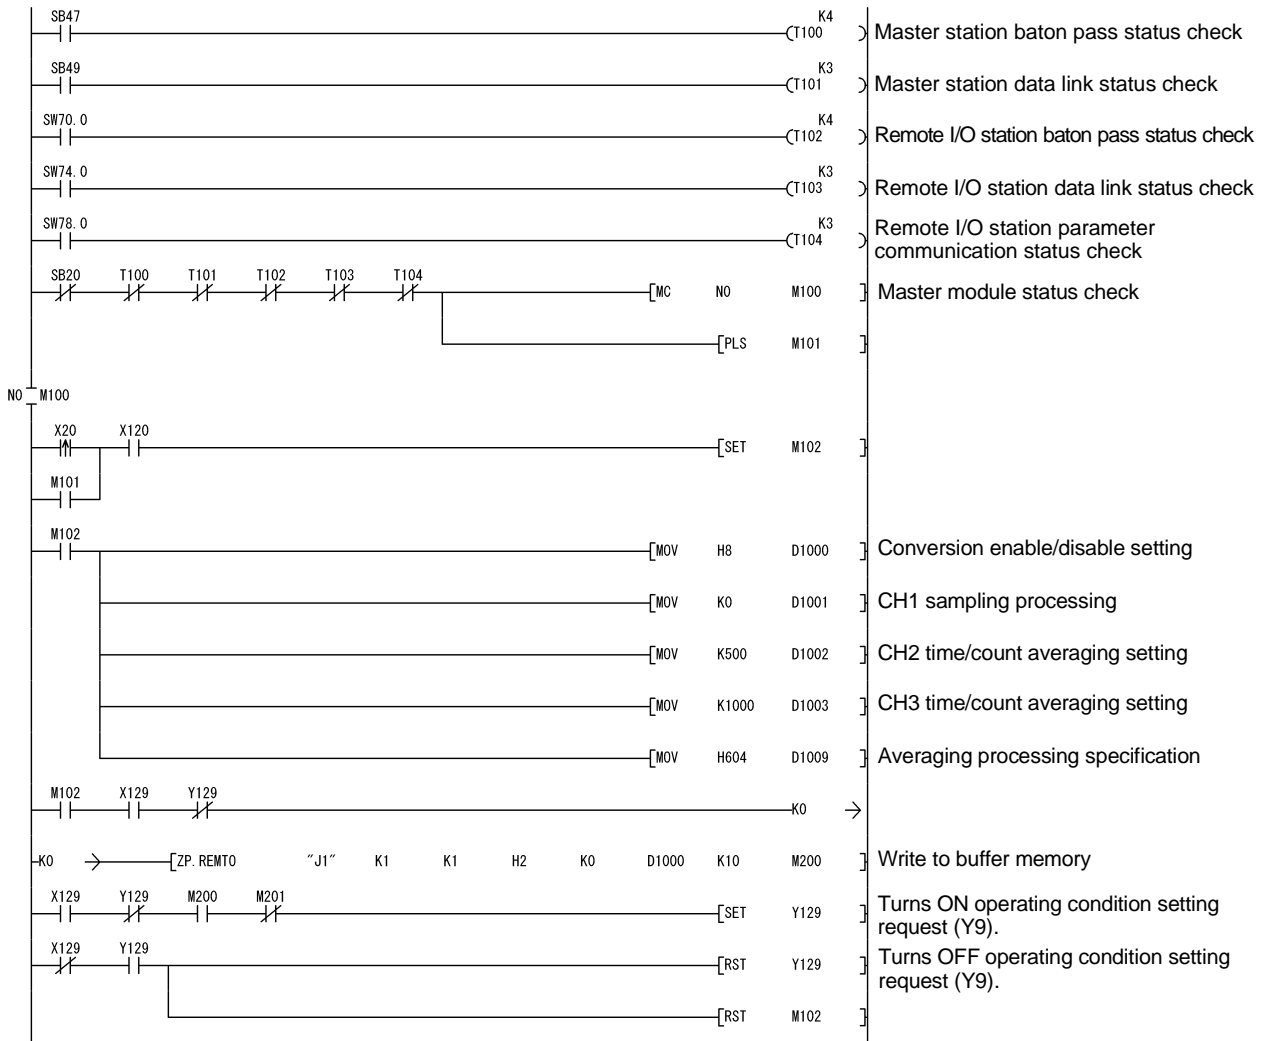

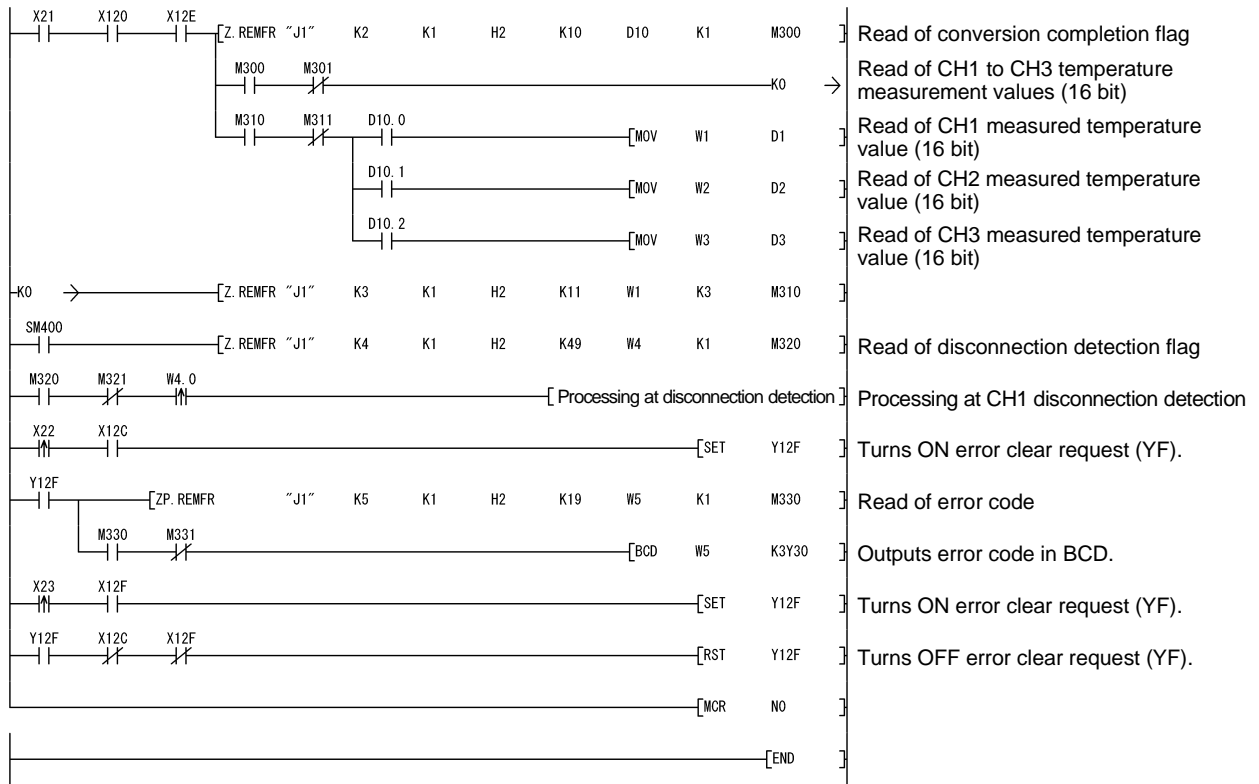



## 7 ONLINE MODULE CHANGE

When changing a module online, carefully read the QCPU User's Manual (Hardware Design, Maintenance and Inspection), section 12.4.1 "Online module change".

This chapter describes the specifications of an online module change.

- (1) Perform an online module change by operating GX Developer.
- (2) To simplify the offset/gain re-setting, there is a user range save/restore function for which dedicated instructions or read/write from/to buffer memory can be used.

POINT
<p>(1) Perform an online module change after making sure that the system outside the PLC will not malfunction.</p> <p>(2) To prevent an electric shock and malfunction of operating modules, provide means such as switches for powering off each of the external power supply and external devices connected to the module to be replaced online.</p> <p>(3) After the module has failed, data may not be saved properly. Referring to Section 3.4.25, prerecord the data to be saved (offset/gain values of the factory default offset/gain value/user range settings offset/gain value/user range settings offset/gain resistance value in the buffer memory).</p> <p>(4) It is recommended to perform an online module change in the actual system in advance to ensure that it would not affect the other modules by checking the following:</p> <ul style="list-style-type: none"> <li>• Means of cutting off the connection to external devices and its configuration are correct.</li> <li>• Switching ON/OFF does not bring any undesirable effect.</li> </ul> <p>(5) Do not mount/remove the module onto/from base unit more than 50 times (IEC 61131-2-compliant), after the first use of the product. Failure to do so may cause the module to malfunction due to poor contact of connector.</p>

(Note)

The dedicated instruction cannot be executed during an online module change. When using the dedicated instruction to execute save/restoration, therefore, execute save/restoration in the other system\*.

If the other system is unavailable, execute restoration by performing write to the buffer memory.

\* : If the module is mounted on the remote I/O station, execute save/restoration in the other system mounted on the main base unit. (Save/restoration cannot be executed in the other system mounted on the remote I/O station.)

## 7.1 Online Module Change Conditions

The CPU, MELSECNET/H remote I/O module, Q64RD, GX Developer and base unit given below are needed to perform an online module change.

(1) CPU

The Q12PHCPU or Q25PHCPU is needed.

For precautions for multiple PLC system configuration, refer to the Process CPU User's Manual (Function Explanation/Program Fundamentals).

(2) MELSECNET/H remote I/O module

The module of function version D or later is necessary.

(3) Q64RD

The module of function version C or later is necessary.

(4) GX Developer

GX Developer of Version 7.10L or later is necessary.

GX Developer of Version 8.18U or later is required to perform an online module change on the remote I/O station.

(5) Base unit

1) When the slim type main base unit (Q3□SB) is used, an online module change cannot be performed.

2) When the power supply module unnecessary type extension base unit (Q5□B) is used, online module change cannot be performed for the modules on all the base units connected.

7.2 Online Module Change Operations

The following gives the operations performed for an online module change.

CPU operation ○: Executed ×: Not executed						(User operation)	(Intelligent function module operation)
X/Y refresh	FROM/TO instruction * 1	Dedicated instruction	Device test	GX Configurator			
				Initial setting parameter	Monitor/test		
○	○	○	○	×	○	(1) Conversion disable Turn OFF all Y signals that were turned ON by a sequence program.	Module is operating as usual.
×	×	×	×	×	×	(2) Dismounting of module Operate GX Developer to start an online module change. Click the [Execution] button of GX Developer to make the module dismountable. Dismount the corresponding module.	Module stops operating. • RUN LED turns off. • Conversion disabled.
○	×	×	×	○	×	(3) Mounting of new module Mount a new module.  After mounting the module, click the [Execution] button of GX Developer.	X/Y refresh resumes and the module starts. • RUN LED turns on. • Default operation (X0 remains OFF) (When there are initial setting parameters, operation is performed according to the initial setting parameters at this point.)
○	×	×	○	×	○	Operation check before control start (4) Operation check Click the [Cancel] button of GX Developer to leave the online mode. Conduct an operation test on the new module using "Device test" of GX Developer or "Monitor/test" of GX Configurator. (Perform user range restoration processing by write to buffer memory at this point.) Operation check completed	Module operates according to test operation *2
○	○	○	○	×	○	(5) Resumption of control Operate GX Developer to resume the online module change mode, and click the [Execution] button to resume control.	X0 (Module Ready) turns ON. Start is made when X0 turns from OFF to ON. Operation is performed according to the initial setting sequence.*2

\* 1: Access to the intelligent function module device (U□G□) is included.

\* 2: In the absence of the operation marked \* 2, the operation of the intelligent function module is the operation performed prior to that.

### 7.3 Online Module Change Procedure

There are the following online module change procedures depending on whether the user range setting has been made or not, whether the initial setting of GX Configurator-AD has been made or not, and whether the other system exists or not.


Range setting	Initial setting	Other system	Reference section
Factory default	GX Configurator-TI	—	Section 7.3.1
Factory default	Sequence program	—	Section 7.3.2
User range setting	GX Configurator-TI	Present	Section 7.3.3
User range setting	GX Configurator-TI	Absent	Section 7.3.4
User range setting	Sequence program	Present	Section 7.3.5
User range setting	Sequence program	Absent	Section 7.3.6

#### 7.3.1 When factory default is used and initial setting was made with GX Configurator-TI

##### (1) Conversion disable


- (a) Set Conversion enable/disable setting (buffer memory address 0: Un\G0) for all channel conversion disable and turn the operating condition setting request (Y9) from OFF to ON to stop conversion.

After confirming that conversion has stopped with the Conversion Completion Flag (buffer memory address 10: Un\G10), turn off Operating Condition Setting Request (Y9).

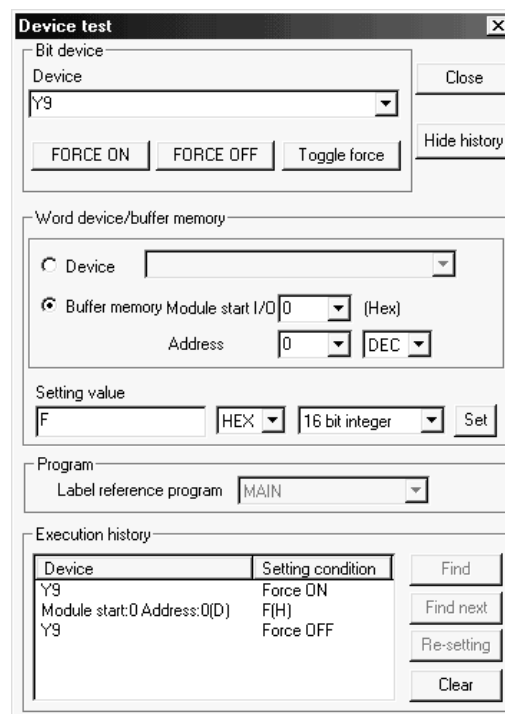


(2) Dismounting of module

- (a) After choosing [Diagnosis] - [Online module change] on GX Developer to enter the "Online module change" mode, double-click the module to be changed online to display the "Online module change" screen.

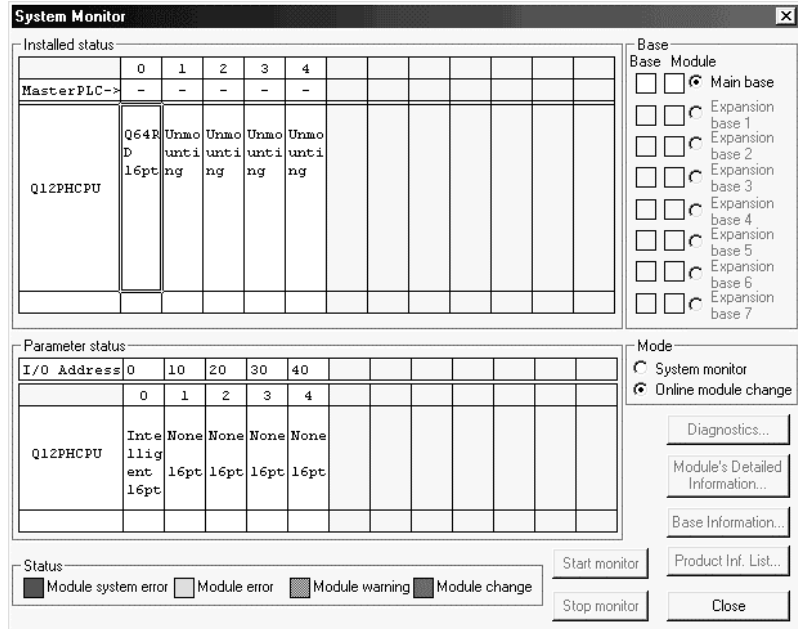

- (b) Click the "Execution" button to enable a module change.

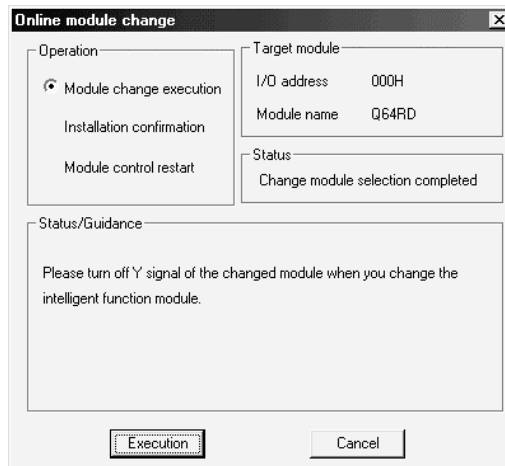

If the following error screen appears, click the [OK] button, dismount the module as-is, and mount a new module.




- (c) After confirming that the "RUN" LED of the module has turned off, disconnect the external wiring and dismount the module.

**POINT**  
Always dismount the module. If mounting confirmation is made without the module being dismounted, the module will not start properly and the "RUN" LED will not be lit.


## (3) Mounting of new module

- (a) Mount a new module to the same slot and connect the external wiring.
- (b) After mounting the module, click the [Execution] button and make sure that the "RUN" LED is lit. Module Ready (X0) remains OFF.

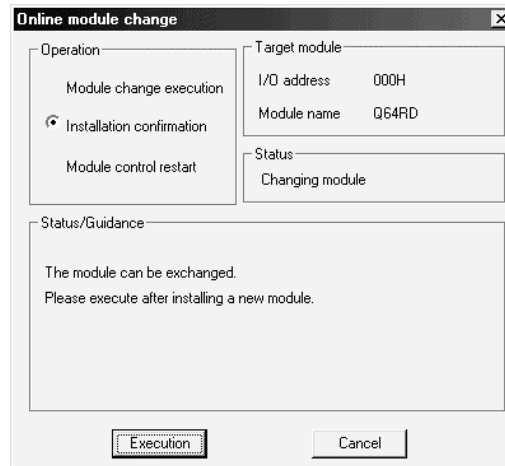


## (4) Operation check


- (a) To make an operation check, click the [Cancel] button to cancel control resumption.

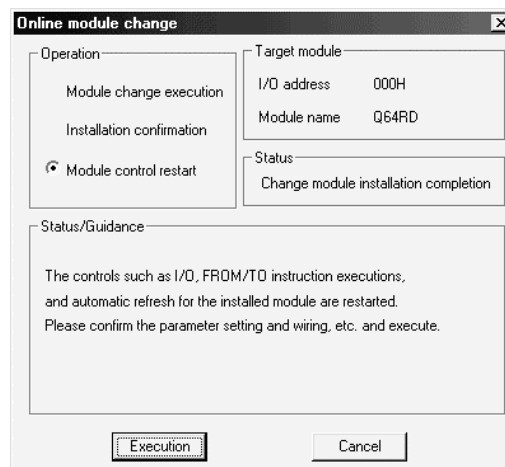


- (b) Click the [OK] button to leave the "Online module change" mode.



- (c) Click the [Close] button to close the System monitor screen.

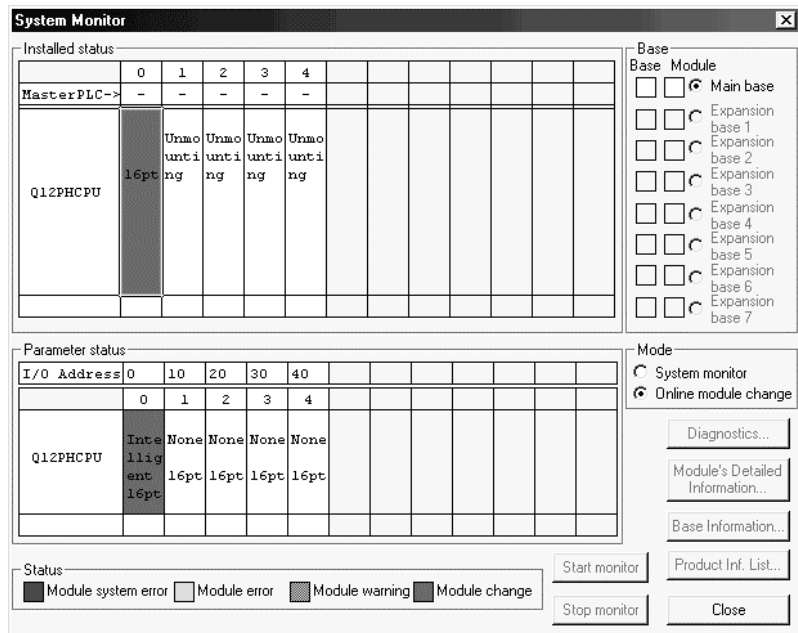


- (d) Monitor the measured temperature values (16 bits) (buffer memory addresses 11 to 14: Un\G11 to 14) or measured temperature values (32 bits) (buffer memory addresses 54 to 61: Un\G54 to 61) to check that proper conversion has been made.

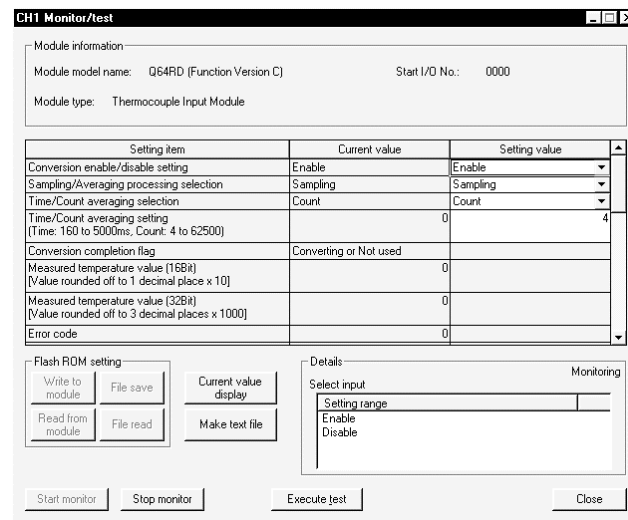

## (5) Resumption of control

- (a) After choosing [Diagnosis] - [Online module change] on GX Developer to redisplay the "Online module change" screen, click the [Execution] button to resume control. The FROM/TO instruction for the module resumes.

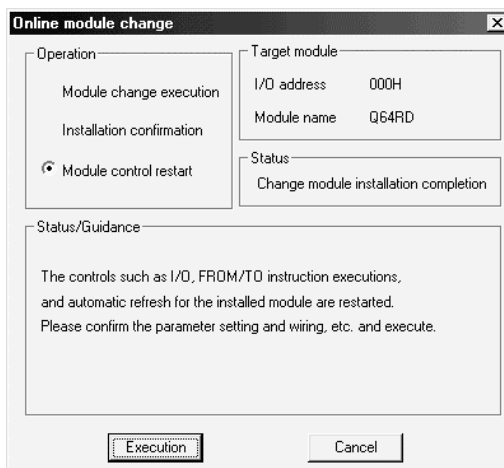

- (b) The "Online module change completed" screen appears.






7.3.2 When factory default is used and initial setting was made with sequence program


(1) Conversion disable

- (a) Set the Conversion enable/disable setting (buffer memory address 0: Un\G0) for all channel conversion disable and turn Operating Condition Setting Request (Y9) from OFF to ON to stop conversion. After confirming that conversion has stopped with the Conversion Completion Flag (buffer memory address 10: Un\G10), turn off Operating Condition Setting Request (Y9).

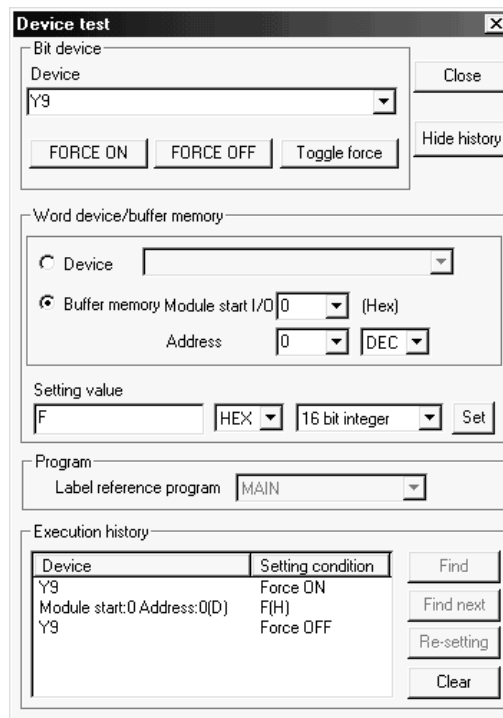


(2) Dismounting of module

- (a) After choosing [Diagnosis] - [Online module change] on GX Developer to enter the "Online module change" mode, double-click the module to be changed online to display the "Online module change" screen.

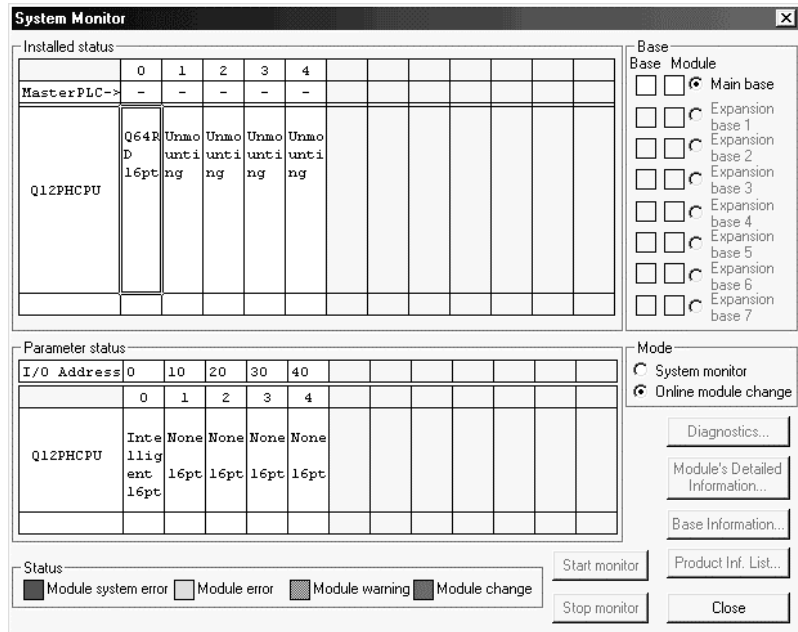

- (b) Click the "Execution" button to enable a module change.

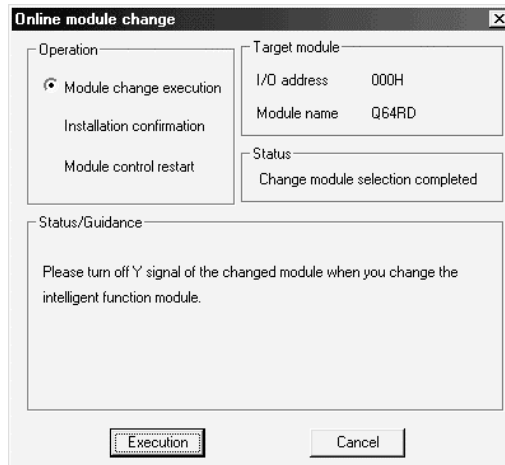

If the following error screen appears, click the [OK] button, dismount the module as-is, and mount a new module.




- (c) After confirming that the "RUN" LED of the module has turned off, disconnect the external wiring and dismount the module.

POINT
Always dismount the module. If mounting confirmation is made without the module being dismounted, the module will not start properly and the "RUN" LED will not be lit.


### (3) Mounting of new module

- (a) Mount a new module to the same slot and connect the external wiring.
- (b) After mounting the module, click the [Execution] button and make sure that the "RUN" LED is lit. Module Ready (X0) remains OFF.

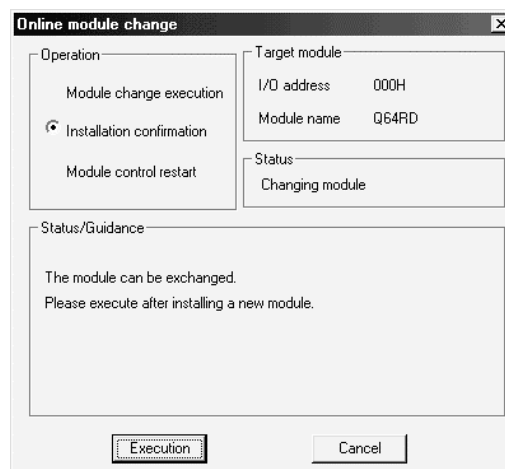


### (4) Operation check


- (a) To make an operation check, click the [Cancel] button to cancel control resumption.

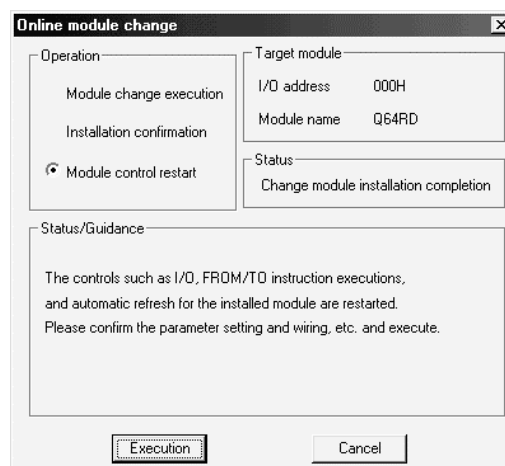

- (b) Click the [OK] button to leave the "Online module change" mode.



- (c) Click the [Close] button to close the System monitor screen.

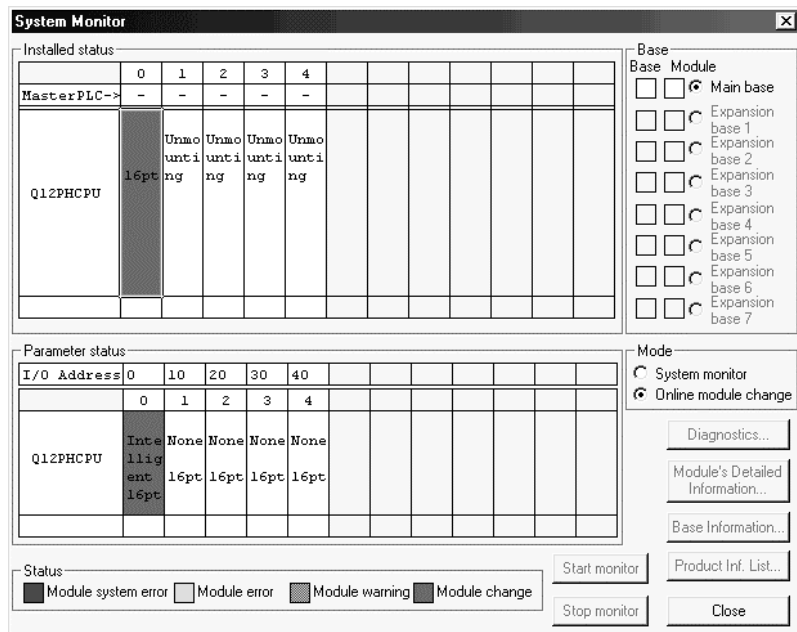


- (d) Referring to (1), enable the conversion of the channels to be used, and monitor the measured temperature values (16 bits) (buffer memory addresses 11 to 14: Un\G11 to 14) or measured temperature values (32 bits) (buffer memory addresses 54 to 61: Un\G54 to 61) to check that proper conversion has been made.
- (e) Since the new module is in a default status, it must be initialized by a sequence program after control resumption. Before performing initialization, check whether the contents of the initialization program are correct or not.
  - 1) Normal system configuration
 

The sequence program should perform initialization on the leading edge of Module READY (X9) of the Q64RD/Q64RD-G. When control resumption is executed, Module READY (X0) turns ON and initialization is performed. (If the sequence program performs initialization only one scan after RUN, initialization is not performed.)
  - 2) When used on remote I/O network
 

Insert a user device that will execute initialization at any timing (initialization request signal) into the sequence program. After control resumption, turn ON the initialization request signal to perform initialization. (If the sequence program performs initialization only one scan after a data link start of the remote I/O network, initialization is not performed.)

## (5) Resumption of control

- (a) After choosing [Diagnosis] - [Online module change] on GX Developer to redisplay the "Online module change" screen, click the [Execution] button to resume control. The FROM/TO instruction for the module resumes.

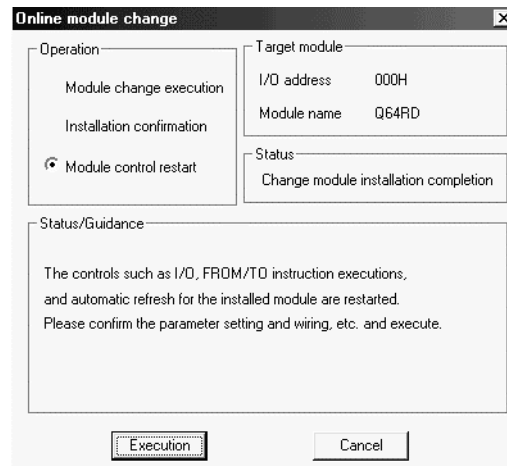


- (b) The "Online module change completed" screen appears.



7.3.3 When user range setting is used and initial setting was made with GX Configurator-TI (other system is available)


(1) Conversion disable

- (a) Set the Conversion enable/disable setting (buffer memory address 0: Un\G0) for all channel conversion disable and turn Operating Condition Setting Request (Y9) from OFF to ON to stop conversion. After confirming that conversion has stopped with the Conversion Completion Flag (buffer memory address 10: Un\G10), turn off Operating Condition Setting Request (Y9).

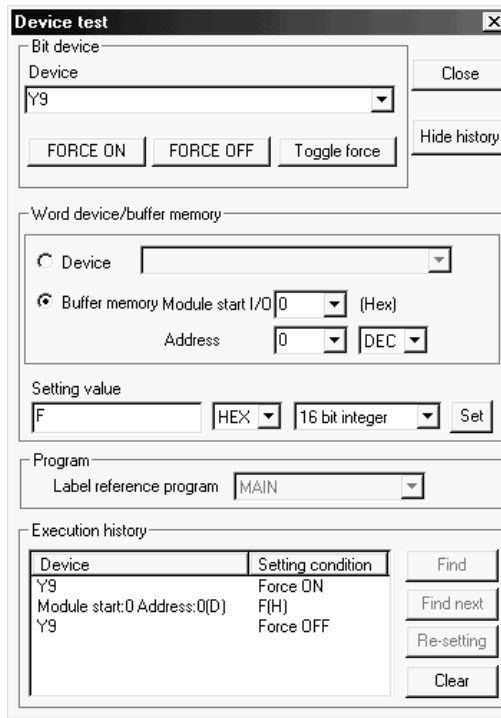


(2) Dismounting of module

- (a) After choosing [Diagnosis] - [Online module change] on GX Developer to enter the "Online module change" mode, double-click the module to be changed online to display the "Online module change" screen.

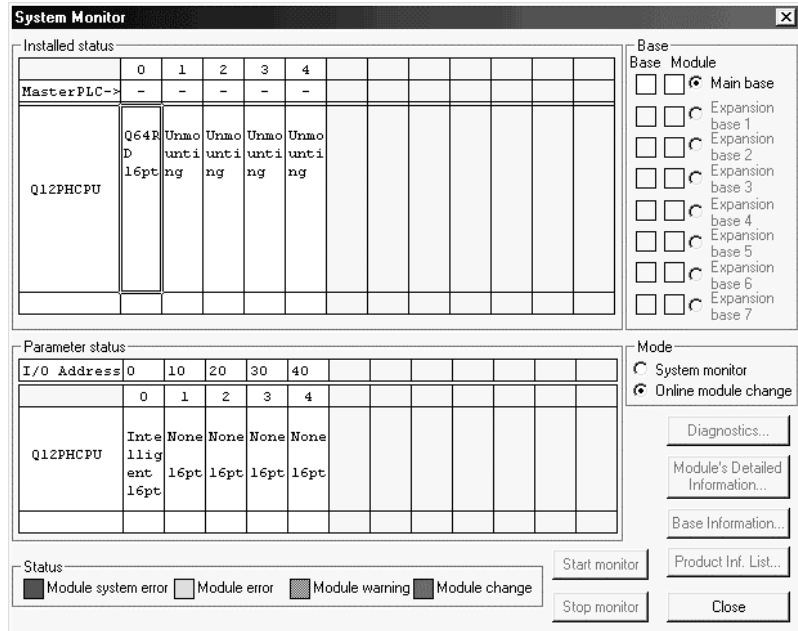

- (b) Click the "Execution" button to enable a module change.

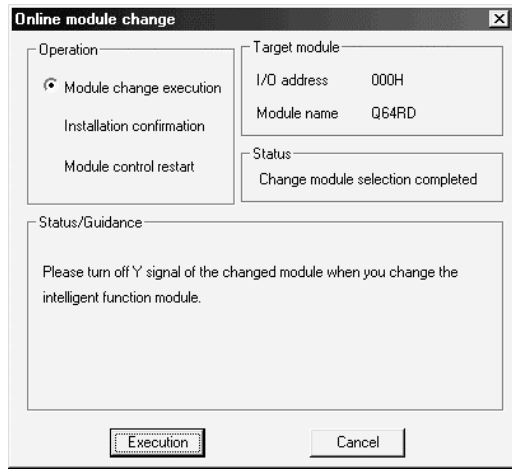

If the following error screen appears, the user range cannot be saved. Click the [OK] button, dismount the module as-is, and perform the operation in Section 7.3.4 (2)(c) and later.




- (c) After confirming that the "RUN" LED of the module has turned off, disconnect the external wiring and dismount the module.

**POINT**

Always dismount the module. If mounting confirmation is made without the module being dismounted, the module will not start properly and the "RUN" LED will not be lit.

**(3) Mounting of new module**


- (a) Mount the dismounted module and new module to the other system.
- (b) Using the G.OGLOAD instruction, save the user range set values to the CPU device. Refer to Appendix 3.2 for the G.OGLOAD instruction.
- (c) Using the G.OGSTOR instruction, restore the user range set values to the module. Refer to Appendix 3.3 for the G.OGSTOR instruction.
- (d) Dismount the new module from the other system, mount it to the slot from where the old module was dismounted in the original system, and connect the external wiring.
- (e) After mounting the module, click the [Execution] button and make sure that the "RUN" LED is lit. Module Ready (X0) remains OFF.

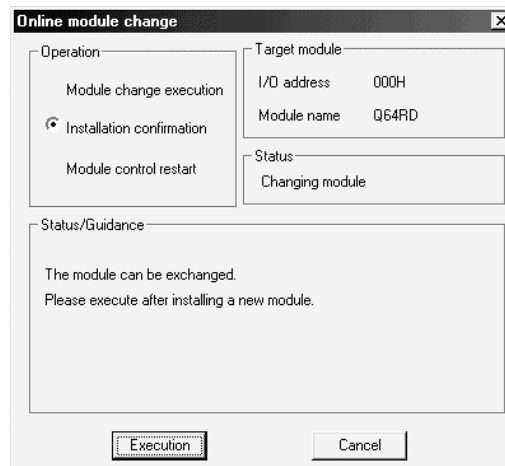




(4) Operation check


- (a) To make an operation check, click the [Cancel] button to cancel control resumption.

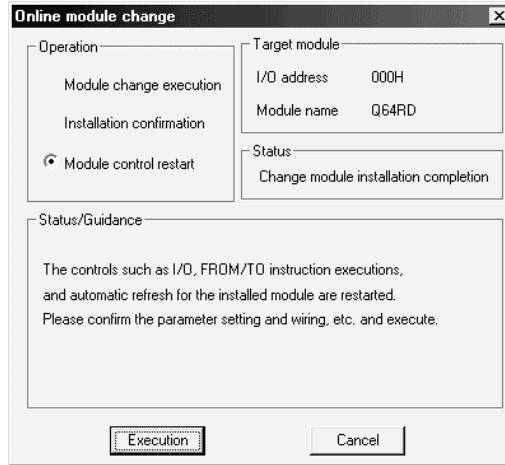


- (b) Click the [OK] button to leave the "Online module change" mode.



- (c) Click the [Close] button to close the System monitor screen.

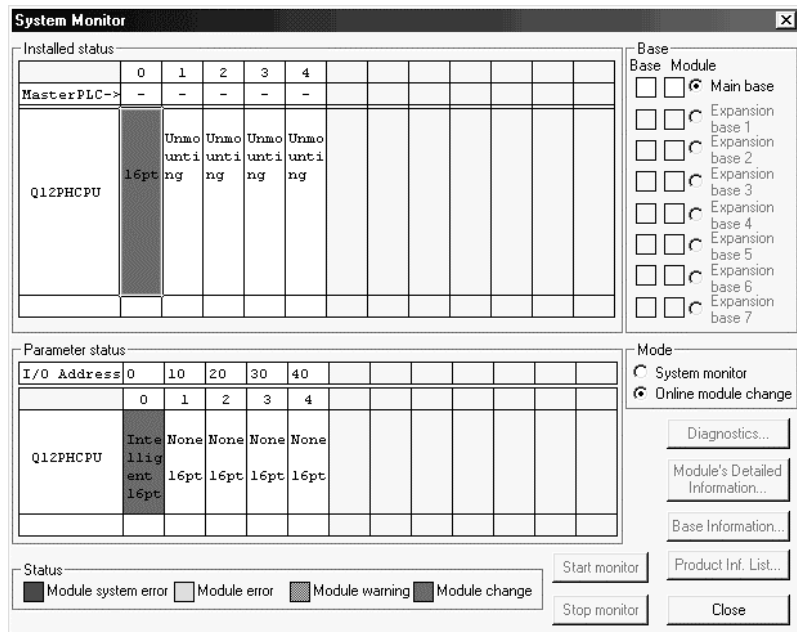


- (d) Monitor the measured temperature values (16 bits) (buffer memory addresses 11 to 14: Un\G11 to 14) or measured temperature values (32 bits) (buffer memory addresses 54 to 61: Un\G54 to 61) to check that proper conversion has been made.

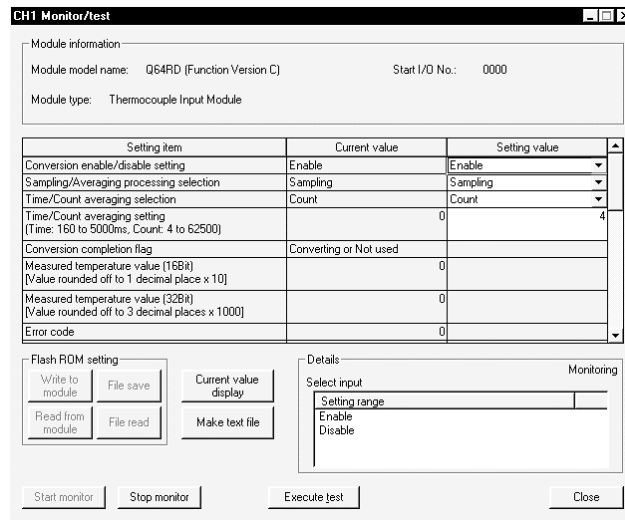

(5) Resumption of control

- (a) After choosing [Diagnosis] - [Online module change] on GX Developer to redisplay the "Online module change" screen, click the [Execution] button to resume control. The FROM/TO instruction for the module resumes.

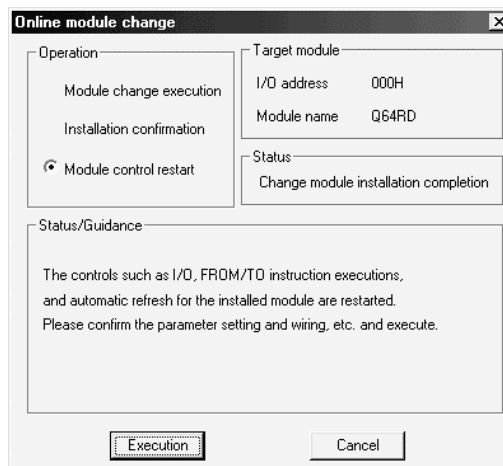


- (b) The "Online module change completed" screen appears.



7.3.4 When user range setting is used and initial setting was made with GX Configurator-TI (other system is unavailable)


(1) Conversion disable

- (a) Set "Disable" in the Setting value field of Conversion Enable/Disable Setting on the CH1 Monitor/Test screen of GX Configurator-TI, and click the **[Execute test]** button.

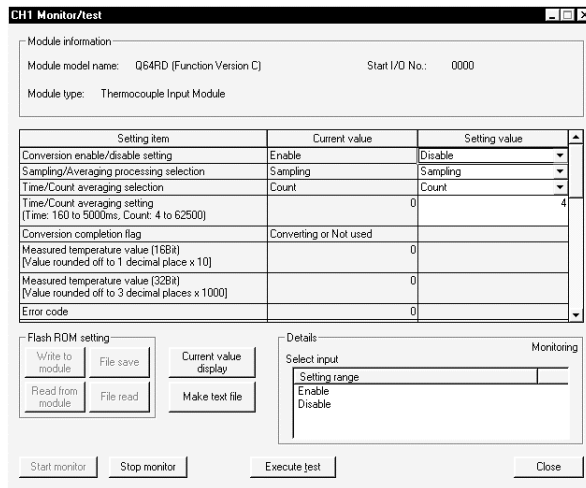

- (b) After making sure that "Disable" is displayed in the Current value field of Conversion Enable/Disable Setting, set "Request" in the Setting value field of Operating Condition Setting Request on the Monitor screen, and click the **[Execute test]** button to stop conversion.

Monitor the Conversion Completion Flag (buffer memory address 10: Un\G10) and confirm that conversion has stopped.

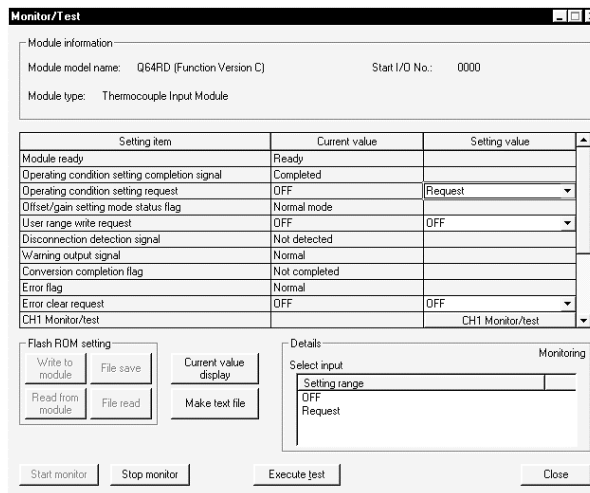


- (c) If the saved buffer memory contents are not yet prerecorded, record them in the following procedure.
  - 1) Display the OMC refresh data screen of GX Configurator-TI.
  - 2) Make a OMC refresh data read request. (Refer to Section 5.6.4)
  - 3) Compare the current values of the factory default offset/gain value/user range settings offset/gain value/user range settings offset/gain resistance value with those of the range reference table. Refer to Section 7.4 for the range reference table.
  - 4) If the values are proper, record the factory default offset/gain value/user range settings offset/gain value/user range settings offset/gain resistance value.

**POINT**


If the buffer memory values compared with the reference table are not proper, save and restoration of the user range cannot be executed.  
 Before executing module control resumption, make offset/gain setting in the GX Configurator-TI. (Refer to Section 5.6.2.)  
 Note that if module control is resumed without offset/gain setting being made, operation will be performed with the default values.

(2) Dismounting of module

- (a) After choosing [Diagnosis] - [Online module change] on GX Developer to enter the "Online module change" mode, double-click the module to be changed online to display the "Online module change" screen.

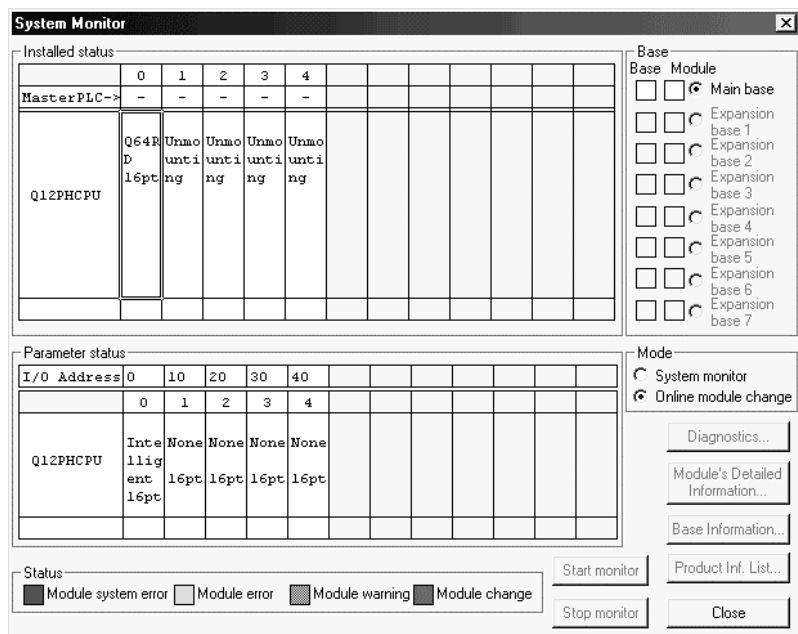

- (b) Click the "Execution" button to enable a module change.

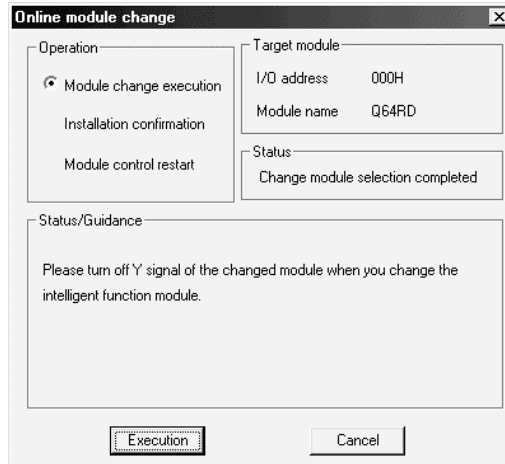

If the following error screen appears, the user range cannot be saved. Click the [OK] button, and perform the operation in Section (2)(c) and later.




- (c) After confirming that the "RUN" LED of the module has turned off, disconnect the external wiring and dismount the module.

**POINT**

Always dismount the module. If mounting confirmation is made without the module being dismounted, the module will not start properly and the "RUN" LED will not be lit.


(3) Mounting of new module

- (a) Mount a new module to the same slot and connect the external wiring.
- (b) After mounting the module, click the [Execution] button and make sure that the "RUN" LED is lit. Module Ready (X0) remains OFF.

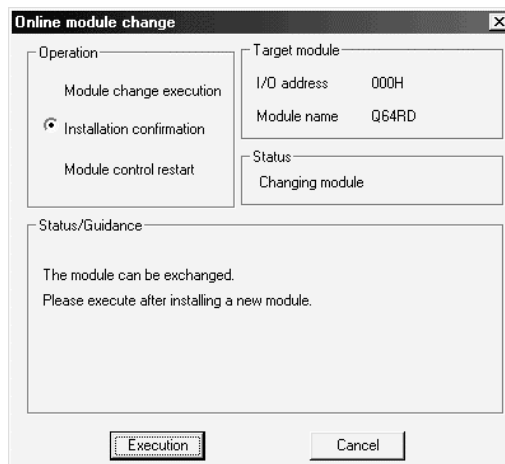


(4) Operation check


- (a) To make an operation check, click the [Cancel] button to cancel control resumption.

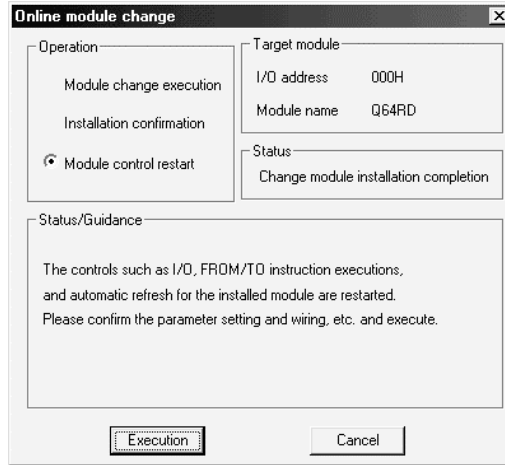

- (b) Click the [OK] button to leave the "Online module change" mode.




- (c) Click the [Close] button to close the System monitor screen.

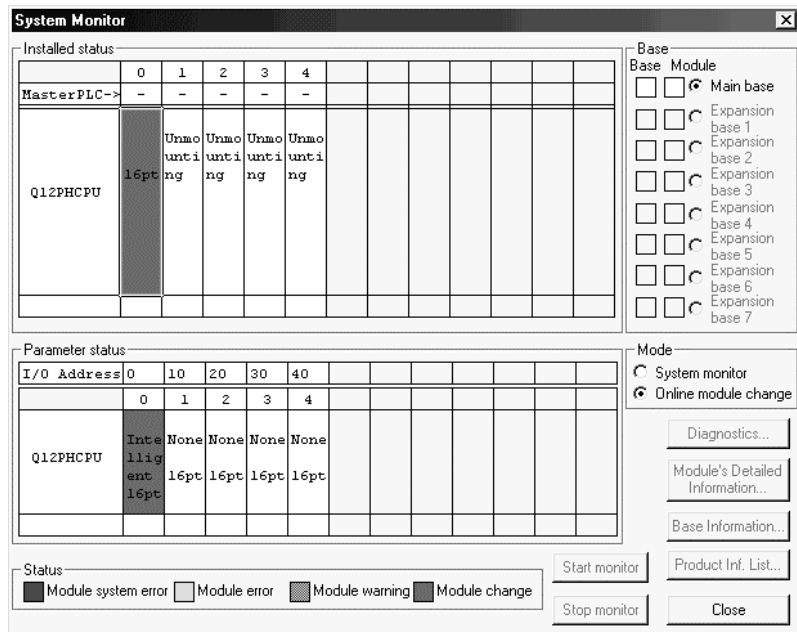


- (d) On the OMC refresh data screen of GX Configurator-TI, set the prerecorded values and make a user range write request. (Refer to Section 5.6.4.)

- (e) Monitor the measured temperature values (16 bits) (buffer memory addresses 11 to 14: Un\G11 to 14) or measured temperature values (32 bits) (buffer memory addresses 54 to 61: Un\G54 to 61) to check that proper conversion has been made.

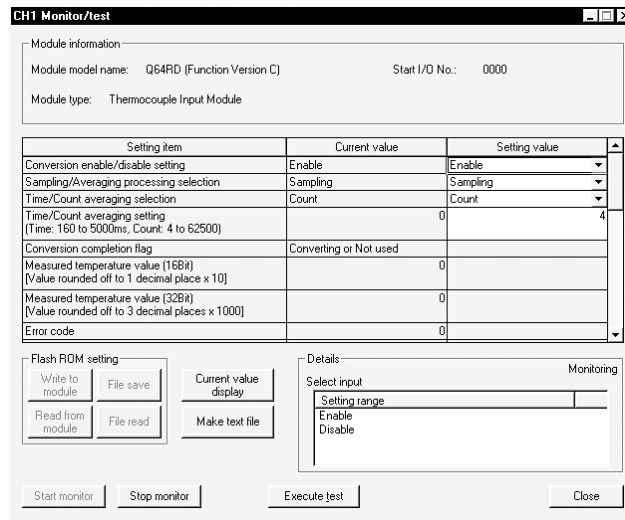

(5) Resumption of control

- (a) After choosing [Diagnosis] - [Online module change] on GX Developer to redisplay the "Online module change" screen, click the [Execution] button to resume control. The FROM/TO instruction for the module resumes.

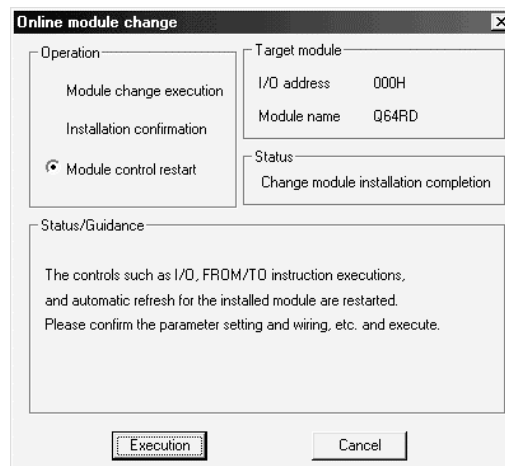

- (b) The "Online module change completed" screen appears.




7.3.5 When user range setting is used and initial setting was made with sequence program (other system is available)

(1) Conversion disable

- (a) Set Conversion enable/disable setting (buffer memory address 0: Un\G0) for all channel conversion disable and turn the operating condition setting request (Y9) from OFF to ON to stop conversion.


After confirming that conversion has stopped with the Conversion Completion Flag (buffer memory address 10: Un\G10), turn off Operating Condition Setting Request (Y9).

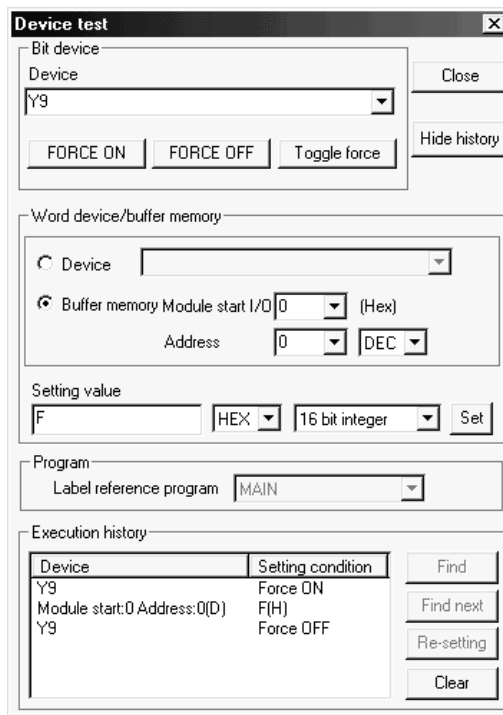




(2) Dismounting of module


- (a) After choosing [Diagnosis] - [Online module change] on GX Developer to enter the "Online module change" mode, double-click the module to be changed online to display the "Online module change" screen.

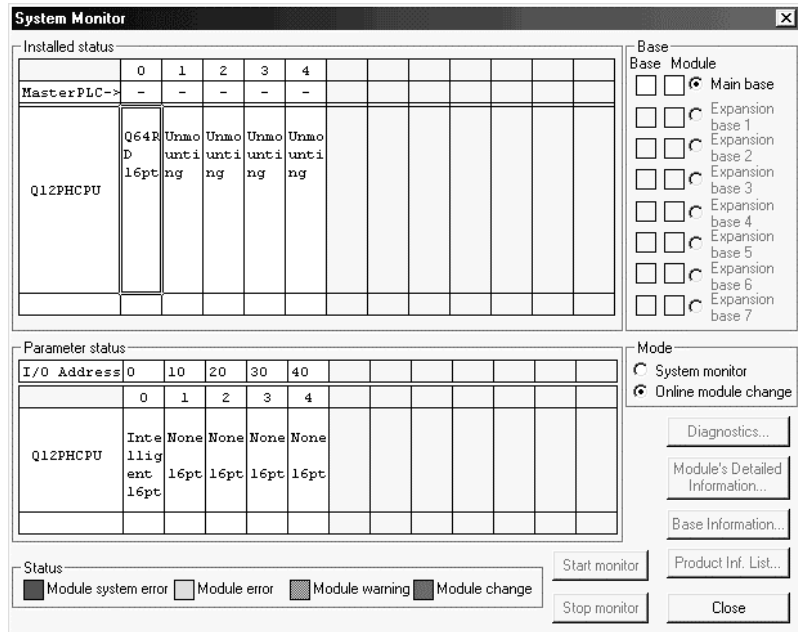

- (b) Click the "Execution" button to enable a module change.

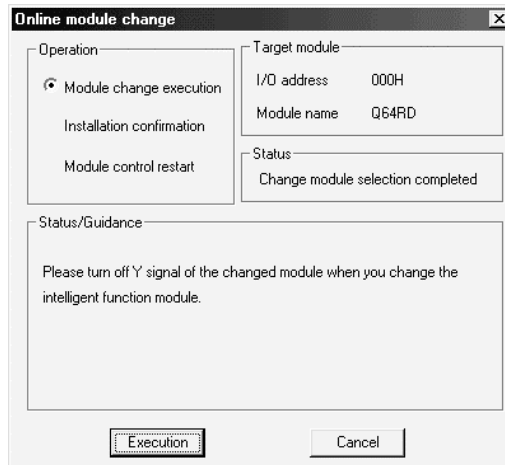

If the following error screen appears, the user range cannot be saved. Click the [OK] button, and perform the operation in Section 7.3.6 (2)(c) and later.

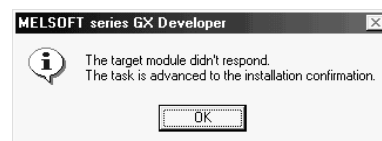


- (c) After confirming that the "RUN" LED of the module has turned off, disconnect the external wiring and dismount the module.

**POINT**

Always dismount the module. If mounting confirmation is made without the module being dismounted, the module will not start properly and the "RUN" LED will not be lit.


**(3) Mounting of new module**

- (a) Mount the dismounted module and new module to the other system.
- (b) Using the G.OGLOAD instruction, save the user range set values to the CPU device. Refer to Appendix 3.2 for the G.OGLOAD instruction.
- (c) Using the G.OGSTOR instruction, restore the user range set values to the module. Refer to Appendix 3.3 for the G.OGSTOR instruction.
- (d) Dismount the new module from the other system, mount it to the slot from where the old module was dismounted in the original system, and connect the external wiring.
- (e) After mounting the module, click the [Execution] button and make sure that the "RUN" LED is lit. Module Ready (X0) remains OFF.

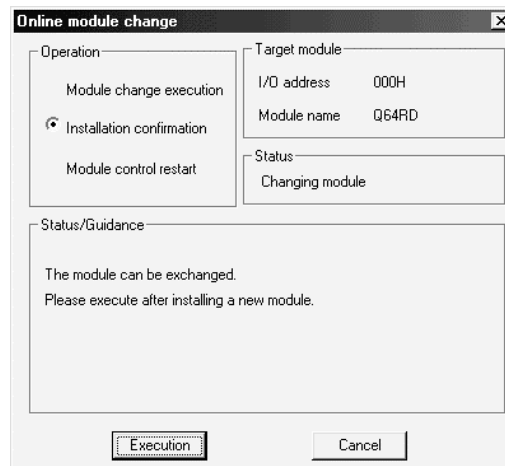


(4) Operation check


- (a) To make an operation check, click the [Cancel] button to cancel control resumption.

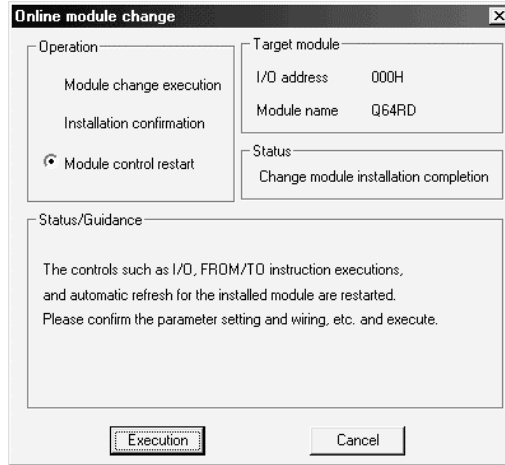

- (b) Click the [OK] button to leave the "Online module change" mode.

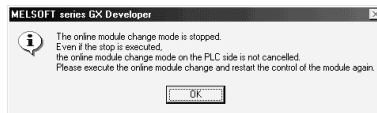

- (c) Click the [Close] button to close the System monitor screen.

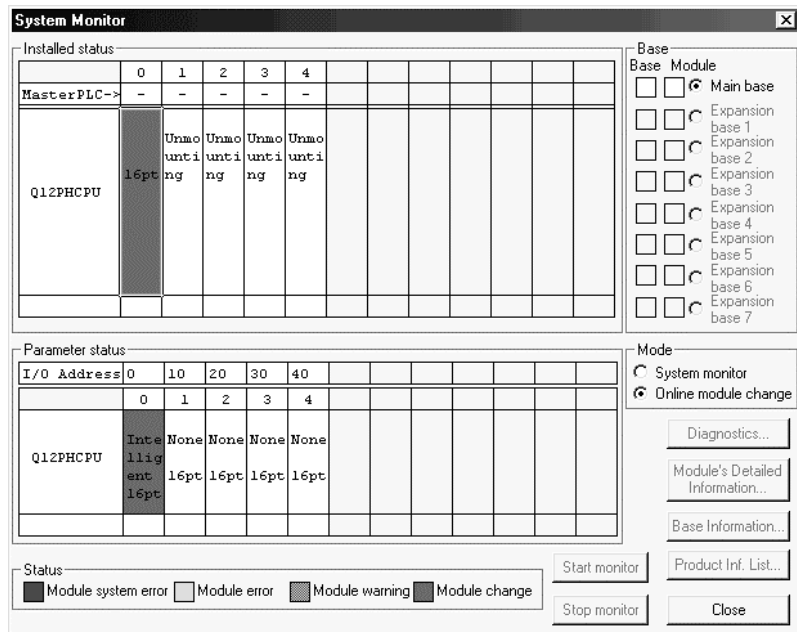


- (d) Referring to (1), enable the conversion of the channels to be used, and monitor the Measured temperature values (16 bits) (buffer memory addresses 11 to 14: Un\G11 to 14) or Measured temperature values (32 bits) (buffer memory addresses 54 to 61: Un\G54 to 61) to check that proper conversion has been made.

- (e) Since the new module is in a default status, it must be initialized by a sequence program after control resumption.
- Before performing initialization, check whether the contents of the initialization program are correct or not.
- 1) Normal system configuration
 

The sequence program should perform initialization on the leading edge of Module READY (X9) of the Q64RD/Q64RD-G.

When control resumption is executed, Module READY (X0) turns ON and initialization is performed. (If the sequence program performs initialization only one scan after RUN, initialization is not performed.)
  - 2) When used on remote I/O network
 

Insert a user device that will execute initialization at any timing (initialization request signal) into the sequence program. After control resumption, turn ON the initialization request signal to perform initialization. (If the sequence program performs initialization only one scan after a data link start of the remote I/O network, initialization is not performed.)
- (5) Resumption of control
- (a) After choosing [Diagnosis] - [Online module change] on GX Developer to redisplay the "Online module change" screen, click the [Execution] button to resume control. The FROM/TO instruction for the module resumes.

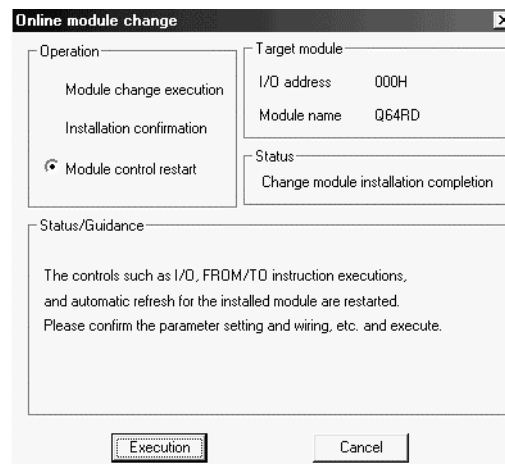

- (b) The "Online module change completed" screen appears.



### 7.3.6 When user range setting is used and initial setting was made with sequence program (other system is unavailable)

#### (1) Conversion disable

- (a) Set Conversion enable/disable setting (buffer memory address 0: Un\G0) for all channel conversion disable and turn the operating condition setting request (Y9) from OFF to ON to stop conversion.

After confirming that conversion has stopped with the Conversion Completion Flag (buffer memory address 10: Un\G10), turn off Operating Condition Setting Request (Y9).

The screenshot shows the 'Device test' window with the following sections:

- Bit device:** Device dropdown set to 'Y9'. Buttons: FORCE ON, FORCE OFF, Toggle force. Close and Hide history buttons are on the right.
- Word device/buffer memory:** Radio buttons for 'Device' and 'Buffer memory Module start I/O'. 'Buffer memory Module start I/O' is selected with value '0' (Hex). Address dropdown is '0' (DEC).
- Setting value:** Input field contains 'F', format is 'HEX', and data type is '16 bit integer'. A 'Set' button is on the right.
- Program:** Label reference program dropdown set to 'MAIN'.
- Execution history:** A table with columns 'Device' and 'Setting condition'.
 

Device	Setting condition
Y9	Force ON
Module start:0 Address:0(D)	F(H)
Y9	Force OFF

 Buttons: Find, Find next, Re-setting, Clear.


- (b) If the saved buffer memory contents are not yet prerecorded, record them in the following procedure.
  - 1) Turn Operating Condition Setting Request (Y9) form OFF to ON.
  - 2) Compare the factory default offset/gain value/user range settings offset/gain value/user range settings offset/gain resistance value (buffer memory addresses 160 to 255: Un\G160 to Un\G255)with the range reference table. Refer to Section 7.4 for the range reference table.
  - 3) If the values are proper, record the factory default offset/gain value/user range settings offset/gain value/user range settings offset/gain resistance value.

**POINT**


If the buffer memory values compared with the reference table are not proper, saving and restoration of the user range cannot be executed.  
 Before executing module control resumption, follow the flowchart in Section 4.6 and make offset/gain setting in the device test of GX Developer.  
 Perform mode switching by making the mode switching setting (buffer memory addresses 158, 159: Un\G158, Un\G159) and turning Operating Condition Setting Request (Y9) from OFF to ON.  
 Note that if module control is resumed without offset/gain setting being made, operation will be performed with the default values.

(2) Dismounting of module

- (a) After choosing [Diagnosis] - [Online module change] on GX Developer to enter the "Online module change" mode, double-click the module to be changed online to display the "Online module change" screen.

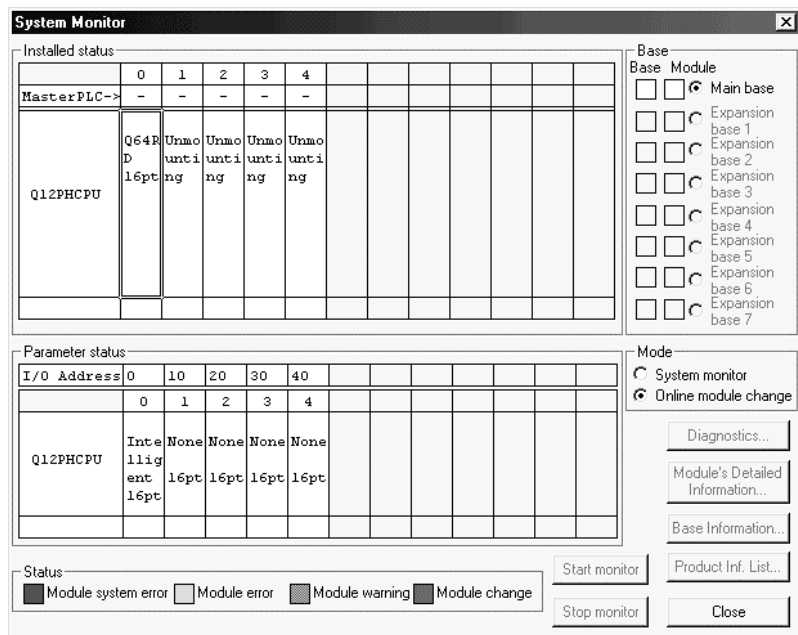

- (b) Click the "Execution" button to enable a module change.

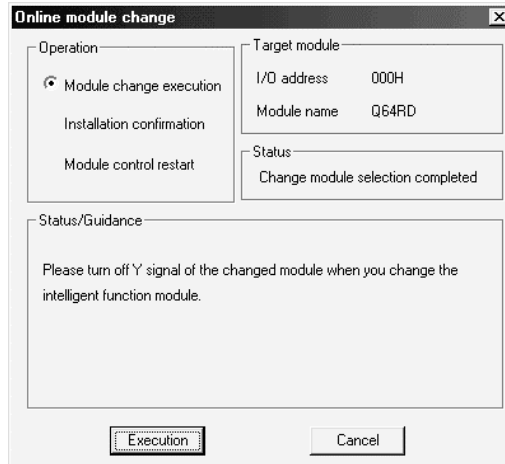

If the following error screen appears, the user range cannot be saved. Click the [OK] button, and perform the operation in Section (2)(c) and later.




- (c) After confirming that the "RUN" LED of the module has turned off, disconnect the external wiring and dismount the module.

**POINT**

Always dismount the module. If mounting confirmation is made without the module being dismounted, the module will not start properly and the "RUN" LED will not be lit.


(3) Mounting of new module

- (a) Mount a new module to the same slot and connect the external wiring.
- (b) After mounting the module, click the [Execution] button and make sure that the "RUN" LED is lit. Module Ready (X0) remains OFF.

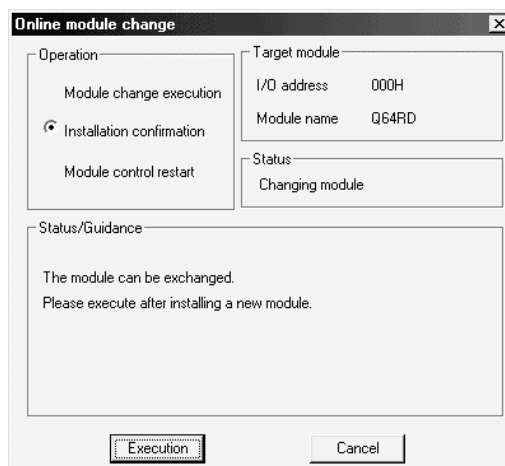


(4) Operation check


- (a) To make an operation check, click the [Cancel] button to cancel control resumption.

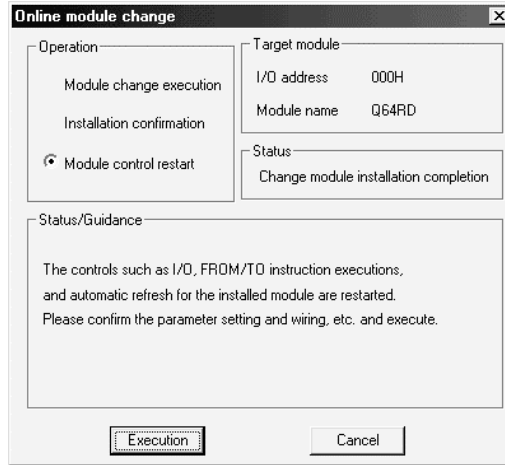

- (b) Click the [OK] button to leave the "Online module change" mode.



- (c) Click the [Close] button to close the System monitor screen.

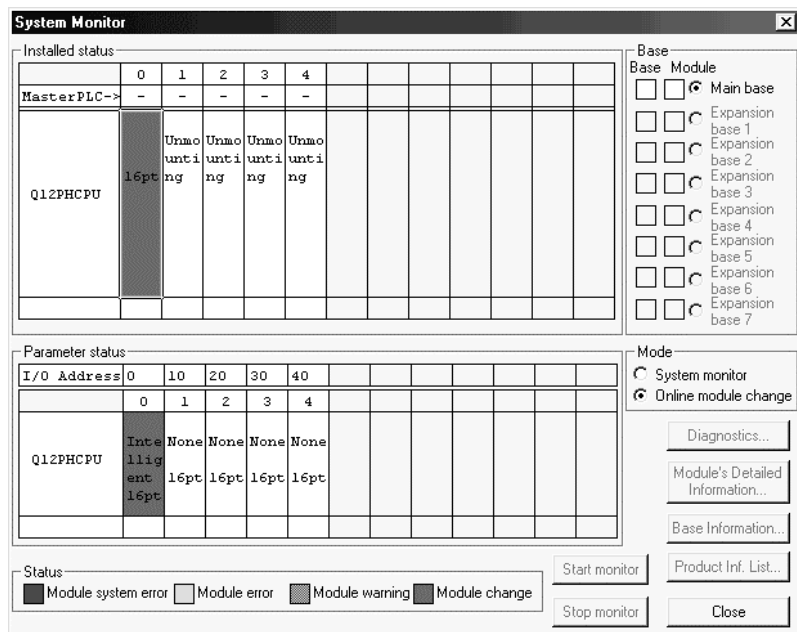


- (d) Choose [Online] - [Debug] - [Device test] on GX Developer and set the values prerecorded in Section (2) to the buffer memory.
- (e) Turn the user range write request (YA) from OFF to ON to restore the user range set values to the module.  
After confirming that the offset/gain setting mode status flag (XA) is ON, turn OFF the user range write request (YA).



- (f) Referring to (1), enable the conversion of the channels to be used, and monitor the measured temperature values (16 bits) (buffer memory addresses 11 to 14: Un\G11 to 14) or measured temperature values (32 bits) (buffer memory addresses 54 to 61: Un\G54 to 61) to check that proper conversion has been made.
- (g) Since the new module is in a default status, it must be initialized by a sequence program after control resumption. Before performing initialization, check whether the contents of the initialization program are correct or not.
  - 1) Normal system configuration  
The sequence program should perform initialization on the leading edge of Module READY (X9) of the Q64RD/Q64RD-G.  
When control resumption is executed, Module READY (X0) turns ON and initialization is performed. (If the sequence program performs initialization only one scan after RUN, initialization is not performed.)
  - 2) When used on remote I/O network  
Insert a user device that will execute initialization at any timing (initialization request signal) into the sequence program. After control resumption, turn ON the initialization request signal to perform initialization. (If the sequence program performs initialization only one scan after a data link start of the remote I/O network, initialization is not performed.)

## (5) Resumption of control

- (a) After choosing [Diagnosis] - [Online module change] on GX Developer to redisplay the "Online module change" screen, click the [Execution] button to resume control. The FROM/TO instruction for the module resumes.

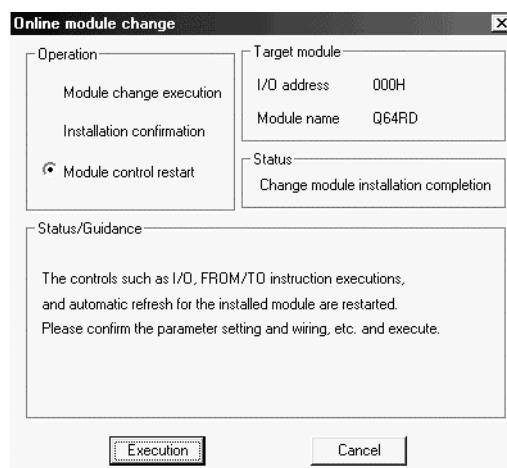

- (b) The "Online module change completed" screen appears.



## 7.4 Range Reference Table

## 7.4.1 Range reference table (Q64RD)

The range reference tables for the Q64RD are given below.

Address (Decimal)				Description	Reference value
CH1	CH2	CH3	CH4		
160	184	208	232	3-wire type factory default offset value * 4	Factory-set offset digital value (theoretical value: 3B1Dh)
161	185	209	233	3-wire type factory default offset value * 4	Factory-set offset digital value (theoretical value: 3B1Dh)
162	186	210	234	3-wire type factory default gain value * 4	Factory-set gain digital value (theoretical value: B158h)
163	187	211	235	3-wire type factory default gain value * 4	Factory-set gain digital value (theoretical value: B158h)
164	188	212	236	3-wire type User range setting offset value * 4	Digital value*2 for user-set offset value * 2
165	189	213	237	3-wire type User range setting offset value * 4	Digital value*2 for user-set offset value * 2
166	190	214	238	3-wire type User range settings gain value * 4	Digital value*3 for user-set gain value * 3
167	191	215	239	3-wire type User range settings gain value * 4	Digital value*3 for user-set gain value * 3
168	192	216	240	3-wire type User range settings offset resistance value (L)	Resistance value for user-set offset set temperature ( $\times 10^{-2} \Omega$ ) * 1
169	193	217	241	(H)	
170	194	218	242	3-wire type User range settings gain resistance value (L)	Resistance value for user-set gain set temperature ( $\times 10^{-2} \Omega$ ) * 1
171	195	219	243	(H)	
172	196	220	244	4-wire type factory default offset value * 4	Factory-set offset digital value (theoretical value: 3B1Dh)
173	197	221	245	4-wire type factory default offset value * 4	Factory-set offset digital value (theoretical value: 3B1Dh)
174	198	222	246	4-wire type factory default gain value * 4	Factory-set gain digital value (theoretical value: B1518h)
175	199	223	247	4-wire type factory default gain value * 4	Factory-set gain digital value (theoretical value: B1518h)
176	200	224	248	4-wire type User range setting offset value * 4	Digital value*2 for user-set offset value * 2
177	201	225	249	4-wire type User range setting offset value * 4	Digital value*2 for user-set offset value * 2
178	202	226	250	4-wire type User range settings gain value * 4	Digital value*3 for user-set gain value * 3
179	203	227	251	4-wire type User range settings gain value * 4	Digital value*3 for user-set gain value * 3
180	204	228	252	4-wire type User range settings offset resistance value (L)	Resistance value for user-set offset set temperature ( $\times 10^{-2} \Omega$ ) * 1
181	205	229	256	(H)	
182	206	230	254	4-wire type User range settings gain resistance value (L)	Resistance value for user-set gain set temperature ( $\times 10^{-2} \Omega$ ) * 1
183	207	231	255	(H)	

\*1: Refer to Appendix 1 for the reference resistance values of the platinum temperature-measuring resistors.

\*2: Use the following expression to calculate the theoretical value of the digital value.

$$\text{Digital value} = \text{User range settings offset resistance value} \times 1.51336$$

\*3: Use the following expression to calculate the theoretical value of the digital value.

$$\text{Digital value} = \text{User range settings gain resistance value} \times 1.51336$$

\*4: There are two identical areas consecutively. (Buffer memory addresses 160, 161 both have the 3-wire type CH. 1 factory default offset values.) Set the same value in each area.

(Example) The following values (theoretical values) are set when user offset/gain adjustment is made at the offset set temperature of  $-200^{\circ}\text{C}$  and the gain set temperature of  $850^{\circ}\text{C}$  with a Pt100 type platinum temperature-measuring resistor connected.

Value type	Set temperature	Reference resistance value	Set value ( $\times 10^{-2} \Omega$ )	Input value
Offset value	$-200.0^{\circ}\text{C}$	$18.52 \Omega$	1852	$1852 \times 1.51336 = 2802$ (theoretical value :AF2h)
Gain value	$850.0^{\circ}\text{C}$	$390.48 \Omega$	39048	$39048 \times 1.51336 = 59093$ (theoretical value :F6D5h)

## 7.4.2 Range reference table (Q64RD-G)

The range reference tables for the Q64RD-G are given below.

Address (Decimal)				Description	Reference value
CH1	CH2	CH3	CH4		
160	184	208	232	3-wire type factory default offset value (L)	Factory-set offset digital value * 4 (theoretical value: 1E2FEEH)
161	185	209	233	3-wire type factory default offset value (H)	
162	186	210	234	3-wire type factory default gain value (L)	Factory-set gain digital value * 4 (theoretical value: 5A8FCAH)
163	187	211	235	3-wire type factory default gain value (H)	
164	188	212	236	3-wire type User range setting offset value (L)	Digital value*2 for user-set offset value * 2
165	189	213	237	3-wire type User range setting offset value (H)	
166	190	214	238	3-wire type User range settings gain value (L)	Digital value*3 for user-set gain value * 3
167	191	215	239	3-wire type User range settings gain value (H)	
168	192	216	240	3-wire type User range settings offset resistance value (L)	Resistance value for user-set offset set temperature ( $\times 10^{-2} \Omega$ ) * 1
169	193	217	241	(H)	
170	194	218	242	3-wire type User range settings gain resistance value (L)	Resistance value for user-set gain set temperature ( $\times 10^{-2} \Omega$ ) * 1
171	195	219	243	(H)	
172	196	220	244	4-wire type factory default offset value (L)	Factory-set offset digital value * 4 (theoretical value: 1E2FEEH)
173	197	221	245	(H)	
174	198	222	246	4-wire type factory default gain value (L)	Factory-set gain digital value * 4 (theoretical value: 5A8FCAH)
175	199	223	247	(H)	
176	200	224	248	4-wire type User range setting offset value (L)	Digital value*2 for user-set offset value * 2
177	201	225	249	(H)	
178	202	226	250	4-wire type User range settings gain value (L)	Digital value*3 for user-set gain value * 3
179	203	227	251	(H)	
180	204	228	252	4-wire type User range settings offset resistance value (L)	Resistance value for user-set offset temperature ( $\times 10^{-2} \Omega$ ) * 1
181	205	229	256	(H)	
182	206	230	254	4-wire type User range settings gain resistance value (L)	Resistance value for user-set gain temperature ( $\times 10^{-2} \Omega$ ) * 1
183	207	231	255	(H)	

\*1: Refer to Appendix 1 for the reference resistance values of the platinum temperature-measuring resistors.

\*2: Use the following expression to calculate the theoretical value of the digital value.

$$\text{Digital value} = \text{User range settings offset resistance value} \times 1.51336$$

\*3: Use the following expression to calculate the theoretical value of the digital value.

$$\text{Digital value} = \text{User range settings gain resistance value} \times 1.51336$$

\*4: Refer to the following example.

(Example) The following values (theoretical values) are set when user offset/gain adjustment is made at the offset set temperature of  $-200^{\circ}\text{C}$  and the gain set temperature of  $850^{\circ}\text{C}$  with a Pt100 type platinum temperature-measuring resistor connected.

Value type	Set temperature	Reference resistance value	Set value ( $\times 10^{-2} \Omega$ )	Input value
Offset value	$-200.0^{\circ}\text{C}$	$18.52 \Omega$	1852	$1852 \times 197.835 = 366390$ (theoretical value : 59736H)
Gain value	$850.0^{\circ}\text{C}$	$390.48 \Omega$	39048	$39048 \times 197.835 = 7725061$ (theoretical value : 75E005H)

### 7.5 Precautions for Online Module Change

The following are the precautions for online module change.

- (1) Always perform an online module change in the correct procedure. Failure to do so can cause a malfunction or failure.
- (2) If a module change is changed online with the user range setting, the accuracy after that will be decreased by approx.3 times compared with the one before the restoration.  
Re-set the offset/gain values as necessary.

## 8 TROUBLESHOOTING

This chapter explains the natures of errors which may occur during use of the Q64RD/Q64RD-G and troubleshooting.

## 8.1 Error Code List

If an error occurs when data are written to or read from the PLC CPU, the Q64RD/Q64RD-G writes the corresponding error code to the buffer memory address 19 (Un\G19).

Error Code (Decimal)	Description	Remedy
10□	The measurement range setting is other than 0 to 5.8 in the intelligent function module switch setting. □ indicates the channel number set incorrectly.	Make a correct setting in the intelligent function module switch setting. (Refer to Section 4.5.)
111	A module error at start-up.	Switch power off, then on again. If the error recurs, the module may have failed. Consult your local Mitsubishi service center or representative.
112	Value set in the intelligent function module switch setting 5 is other than 0.	Set a correct value in the intelligent function module switch setting. (Refer to Section 4.5.)
12□	The offset/gain setting is other than 0 and 1 in the intelligent function module switch setting. □ indicates the channel number set incorrectly.	Make a correct setting in the intelligent function module switch setting. (Refer to Section 4.5.)
13□	The three-/four-conductor type setting is other than 0 and 1 in the intelligent function module switch setting. □ indicates the channel number set incorrectly.	Make a correct setting in the intelligent function module switch setting. (Refer to Section 4.5.)
161 * 1	The G.OGSTOR instruction was executed in the offset/gain setting mode.	Do not execute the G.OGSTOR instruction in the offset/gain setting mode.
162	<ul style="list-style-type: none"> <li>The G.OGSTOR instruction was executed consecutively.</li> <li>At the time of offset/gain setting, a set value was written to the E<sup>2</sup>PROM 26 or more times.</li> </ul>	<ul style="list-style-type: none"> <li>Execute the G.OGSTOR instruction only once for one module.</li> <li>At the time of offset/gain setting, write a set value only once at one time.</li> </ul>
163	The G.OGSTOR instruction was executed for the model that differs from the model for which the G.OGLOAD instruction had been executed.	Execute the G.OGLOAD and G.OGSTOR instructions for the same model.
20□	The time averaging setting is outside the setting range. □ indicates the channel number set incorrectly.	Set a correct value at the buffer memory address 1 to 4 (Un\G1 to 4). (Refer to Section 3.4.4 (Q64RD) or 3.4.5 (Q64RD-G)).
30□	The count averaging setting is outside the setting range. □ indicates the channel number set incorrectly.	Set a correct value at the buffer memory address 1 to 4 (Un\G1 to 4). (Refer to Section 3.4.4 (Q64RD) or 3.4.5 (Q64RD-G)).
31□ (Q64RD-G only)	The moving average setting is outside the setting range. □ indicates the channel number set incorrectly.	Set a correct value at the buffer memory address 1 to 4 (Un\G1 to 4). (Refer to Section 3.4.5.)
32□ (Q64RD-G only)	The time constant setting is outside the setting range. □ indicates the channel number set incorrectly.	Set a correct value at the buffer memory address 1 to 4 (Un\G1 to 4). (Refer to Section 3.4.5.)
40□	In the offset/gain setting, or when the user setting is restored, Gain value - Offset value $\leq 0.1$ [C]. □ indicates the channel number set incorrectly.	Set a correct value in the buffer memory, or measure and check the resistance of the RTD input terminals.
50□	When the offset setting request (Y1, Y3, Y5, Y7) or gain setting request (Y2, Y4, Y6, Y8) is turned on in the offset/gain setting mode, the offset/gain setting of the intelligent function module switch setting on that channel is not user-set. □ indicates the channel number set incorrectly.	Make a correct setting in the intelligent function module switch setting. (Refer to Section 4.5.)
51□	When the offset setting request (Y1, Y3, Y5, Y7) or gain setting request (Y2, Y4, Y6, Y8) is turned on in the offset/gain setting mode, the "offset value" or "gain value" of that channel is outside the measurement range. □ indicates the channel number set incorrectly.	Check the measurement range and set the offset/gain value within the range. (Refer to Section 3.1.1 (Q64RD) or 3.1.2 (Q64RD-G).)
52□	The offset setting request and gain setting request were turned on simultaneously in the offset/gain setting mode. □ indicates the channel number set incorrectly.	Reexamine the sequence program so that they do not turn on simultaneously.

\* 1: This error code is written into G.OGSTOR instruction's completion status area (S) +1, not into the buffer memory address 19 (Un\G19).

Error Code (Decimal)	Description	Remedy
6△□	<p>The set warning output upper/lower limit value is outside the measurable temperature range specified for the used platinum temperature-measuring resistor.</p> <p>□ indicates the channel number set incorrectly.</p> <p>△ indicates any of the following statuses.</p> <p>0: The lower lower limit value is lower than the measurement range.</p> <p>1: The upper upper limit value is higher than the measurement range.</p> <p>2: Lower lower limit value &gt; lower upper limit value</p> <p>3: Lower upper limit value &gt; upper lower limit value</p> <p>4: Upper lower limit value &gt; upper upper limit value</p>	<p>Set a correct value at the buffer memory address 86 to 117 (Un\G86 to 117). (Refer to Section 3.4.21.)</p>

POINT
<ul style="list-style-type: none"> <li>• If two or more errors have occurred, the code of the error found by the Q64RD/Q64RD-G first is stored. The latter errors are not stored.</li> <li>• The error can be cleared by turning on the error clear request (YF).</li> <li>• The error is cleared at the time of mode switching.</li> </ul>

## 8.2 Troubleshooting

## 8.2.1 RUN LED is extinguished

Check Item	Remedy
Check that power is supplied.	Confirm that the supply voltage of the power supply module is within the rated range.
Check that the capacity of the power supply module is sufficient.	Calculate the current consumption of the CPU, I/O, intelligent function and other modules loaded on the base unit, and make sure that the power supply capacity is enough.
Check for a watchdog timer error.	Reset the PLC CPU and verify that it is lit. If the RUN LED does not light even after doing this, the module may be malfunctioning. Consult your local Mitsubishi service center or representative.
Check whether the modules are loaded normally on the base unit.	Check the module loading status.
Is a module change enabled during an online module change?	Refer to Chapter 7 and take corrective action.

## 8.2.2 RUN LED flickers

Check Item	Remedy
Check whether the module is in the offset/gain setting mode or not.	After making offset/gain setting, return to the normal mode.

## 8.2.3 ERROR/ERR. LED flickers

Check Item	Remedy
Check whether the switch 5 of the intelligent function module switches is "other than 0".	Set the switch 5 of the intelligent function module switches for 0. (Refer to Section 4.5)

## 8.2.4 ERROR/ERR. LED is lit

Check Item	Remedy
Check for an error.	Check the error code and take the action given in Section 8.1.

## 8.2.5 ALM LED flickers

Check Item	Remedy
Check for an input signal fault.	Check the Disconnection detection flag (buffer memory address 49, Un\G49) and take the action given in Section 8.2.7.

## 8.2.6 ALM LED is lit

Check Item	Remedy
Check for a warning output.	Check the Warning output flag (buffer memory address 48, Un\G48).



## 8.2.7 Disconnection detection flag (XC) has turned on

Check Item	Remedy
Check whether RTD is connected securely or not.	Connect it securely.
Check for loose terminal screws.	Retighten the terminal screws within the specified torque range.
Check the connected RTD for wire break.	Make continuity check on the RTD, and replace it if its wire is broken.
Check whether the channel where no RTD is connected is specified for conversion enable.	Check the channels which are specified for conversion enable and the channels where RTDs are connected, and make the conversion setting correctly.

## 8.2.8 Temperature conversion value cannot be read

Check Item	Remedy
Check whether the used channel has been set for conversion disable.	Set it for conversion enable in sequence program.
Check whether the PLC CPU is set for STOP.	Set the PLC CPU for RUN.

## 8.2.9 Temperature conversion value is abnormal

Check Item	Remedy
Check whether the RTD differs from the one specified.	Set the RTD connected to the switch 1 in the intelligent function module switch setting.
Check whether the connected RTD is connected reversely.	Connect the RTD correctly.
Check for noise in the RTD input.	Check influence from the ground and adjacent devices, and take action to prevent noise.
Check whether conversion is made with another RTD specified after setting of the offset/gain value.	Make offset/gain setting again for the current RTD.

## 8.2.10 Checking the Q64RD/Q64RD-G status using GX Developer system monitor

When the Q64RD/Q64RD-G detailed information is selected in GX Developer system monitor, an error code and LED status can be checked.

## (1) Operating GX Developer

[Diagnostics] → [System monitor] → "Select Q64RD/Q64RD-G " →

**Module Detailed Information**

## (2) Module's Detailed Information


## (a) Checking the function version

The function version of the Q64RD/Q64RD-G is displayed in the product information field.

## (b) Checking the error code

The error code stored in buffer memory address 19 (Un\G19) of the Q64RD/Q64RD-G is displayed in the Present Error field.


(When the **Error History** button is pressed, the contents displayed in the Present Error field are displayed in the No. 1 field.)

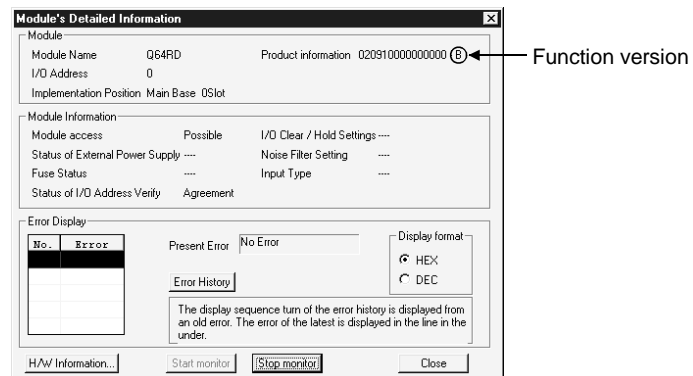

(3) H/W information (Q64RD)

- (a) H/W LED information of Q64RD  
The LED ON status is displayed.

No.	LED name	Status
1	RUN LED	0000H : Indicates that LED is unlit.
2	ERROR LED	0001H : Indicates that LED is lit

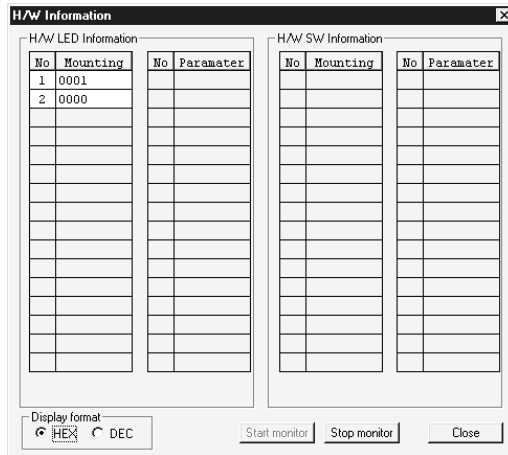

(4) H/W information (Q64RD-G)


- (a) H/W LED information of Q64RD-G  
The LED ON status is displayed.

No.	LED name	Status
1	RUN LED	0000H: Indicates that LED is unlit.
2	ERR LED	0001H: Indicates that LED is lit.
3	ALM LED	Alternate display of 0000 and 0001: Indicates that the LED is flickering.

- (b) H/W switch information of Q64RD-G

The status of the Intelligent function module switch setting is displayed.

No.	Intelligent function module switch
1	Switch 1
2	Switch 2
3	Switch 3
4	Switch 4
5	Switch 5

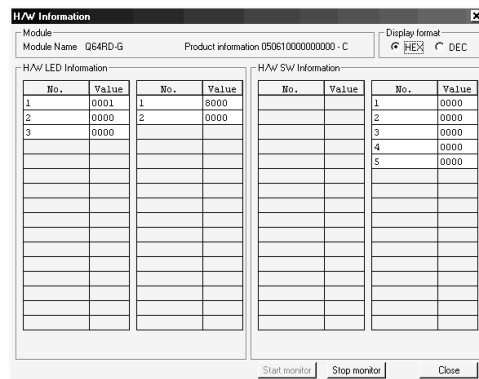

APPENDIX

Appendix 1 Reference Resistance of RTD

Appendix 1.1 New JIS/IEC type (Pt100)

JIS C1604-1997, IEC 751 1983

Unit: Ω

-200	-100	-0	Temperature[°C]	Temperature[°C]	0	100	200	300	400	500	600	700	800
18.52	60.26	100.00	-0	0	100.00	138.51	175.86	212.05	247.09	280.98	313.71	345.28	375.70
	56.19	96.09	-10	10	103.90	142.29	179.53	215.61	250.53	284.30	316.92	348.38	378.68
	52.11	92.16	-20	20	107.79	146.07	183.19	219.15	253.96	287.62	320.12	351.46	381.65
	48.00	88.22	-30	30	111.67	149.83	186.84	222.68	257.38	290.92	323.30	354.53	384.60
	43.88	84.27	-40	40	115.54	153.58	190.47	226.21	260.78	294.21	326.48	357.59	387.55
	39.72	80.31	-50	50	119.40	157.33	194.10	229.72	264.18	297.49	329.64	360.64	390.48
	35.54	76.33	-60	60	123.24	161.05	197.71	233.21	267.56	300.75	332.79	363.67	
	31.34	72.33	-70	70	127.08	164.77	201.31	236.70	270.93	304.01	335.93	366.70	
	27.10	68.33	-80	80	130.90	168.48	204.90	240.18	274.29	307.25	339.06	369.71	
		64.30	-90	90	134.71	172.17	208.48	243.64	277.64	310.49	342.18	372.71	

Appendix 1.2 Old JIS type (JPt100)

JIS C1604-1981

Unit: Ω

-100	-0	Temperature[°C]	Temperature[°C]	0	100	200	300	400	500	600
59.57	100.00	-0	0	100.00	139.16	177.13	213.93	249.56	284.02	317.28
55.44	96.02	-10	10	103.97	143.01	180.86	217.54	253.06	287.40	
51.29	92.02	-20	20	107.93	146.85	184.58	221.15	256.55	290.77	
47.11	88.01	-30	30	111.88	150.67	188.29	224.74	260.02	294.12	
42.91	83.99	-40	40	115.81	154.49	191.99	228.32	263.49	297.47	
38.68	79.96	-50	50	119.73	158.29	195.67	231.89	266.94	300.80	
34.42	75.91	-60	60	123.64	162.08	199.35	235.45	270.38	304.12	
30.12	71.85	-70	70	127.54	165.86	203.01	238.99	273.80	307.43	
25.80	67.77	-80	80	131.42	169.63	206.66	242.53	277.22	310.72	
	63.68	-90	90	135.30	173.38	210.30	246.05	280.63	314.01	

Appendix 1.3 Ni100Ω type

DIN43760 1987

Unit: Ω

-0	Temperature[°C]	Temperature[°C]	0	100
100.0	-0	0	100.0	161.8
94.6	-10	10	105.6	168.8
89.3	-20	20	111.2	176.0
84.2	-30	30	117.1	183.3
79.1	-40	40	123.0	190.9
74.3	-50	50	129.1	198.7
69.5	-60	60	135.3	206.6
	-70	70	141.7	214.8
	-80	80	148.3	223.2
	-90	90	154.9	



## Appendix 2 Function upgrade for the Q64RD

The Q64RD of function versions C have more functions than the conventional model (function version B).

### Appendix 2.1 A comparison of function of the Q64RD

The following table indicates the functions supported by the corresponding function versions.

Function	Function version B	Function version C
Online module change	×	○
Dedicated instruction	×	○
Mode switching that does not require PLC CPU to be reset	—	—
Dedicated instruction (G.OFFGAN)	×	○
Buffer memory (mode switching setting) and operating condition setting request (Y9)	×	○
GX Configurator-TI	×	○

○ : Compatible    × : Not compatible

## Appendix 3 Dedicated Instruction List

The following table lists the dedicated instructions that can be used with the Q64RD/Q64RD-G.

Instruction	Description	Reference section
OFFGAN	Switches to the offset/gain setting mode. Switches to the normal mode.	Appendix 3.1
OGLOAD	Reads the offset/gain values of the user range setting to the CPU.	Appendix 3.2
OGSTOR	Restores the offset/gain values of the user range setting stored in the CPU to the Q64RD/Q64RD-G.	Appendix 3.3


**POINT**

When the module is mounted to a MELSECNET/H remote I/O station, the dedicated instructions are not available.

Appendix 3.1 OFFGAN

Switches the mode of the Q64RD/Q64RD-G. (Normal mode to offset/gain setting mode, offset/gain setting mode to normal mode)

Set data	Usable devices									
	Internal device (System, user)		File register	MELSECNET/H Direct J□□		Special function module U□\G□	Index register Z□	Constant		Other
	Bit	Word		Bit	Word			K, H	S	
(S)	—	○						—	—	—

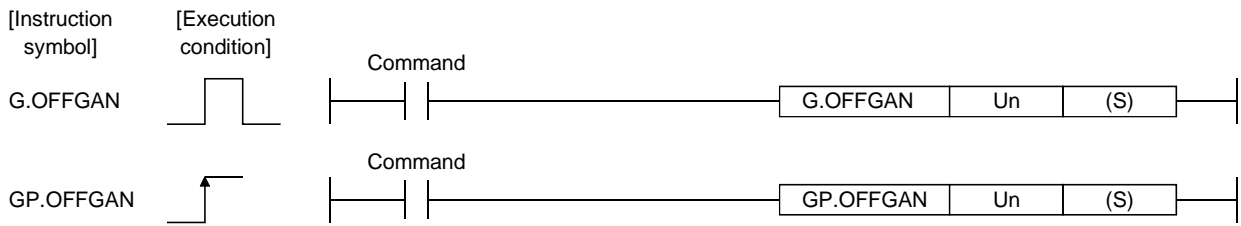

Set data

Device	Description	Setting range	Data type
Un	Start I/O number of the module	0 to FEH	Binary 16 bits
(S)	Mode switching 0: Switching to normal mode 1: Switching to offset/gain setting mode The setting of any other value results in "switching to offset/gain setting mode".	0,1	Binary 16 bits

(1) Function

- Switches the mode of the Q64RD/Q64RD-G.
- Normal mode to offset/gain setting mode
  - Offset/gain setting mode to normal mode

POINT


- (1) When the offset/gain setting mode is switched to the normal mode, Module Ready (X0) turns from OFF to ON.  
Note that initial setting processing will be executed if there is a sequence program that makes initial setting when Module Ready (X0) turns ON.
- (2) The error is cleared when the mode is switched.

(2) Operation error

No errors.

(3) Program example

The following program is designed to switch the Q64RD/Q64RD-G mounted in the position of I/O number X/Y0 to X/YF to the offset/gain setting mode when M10 is turned ON, and to return it to the normal mode when M10 is turned OFF.

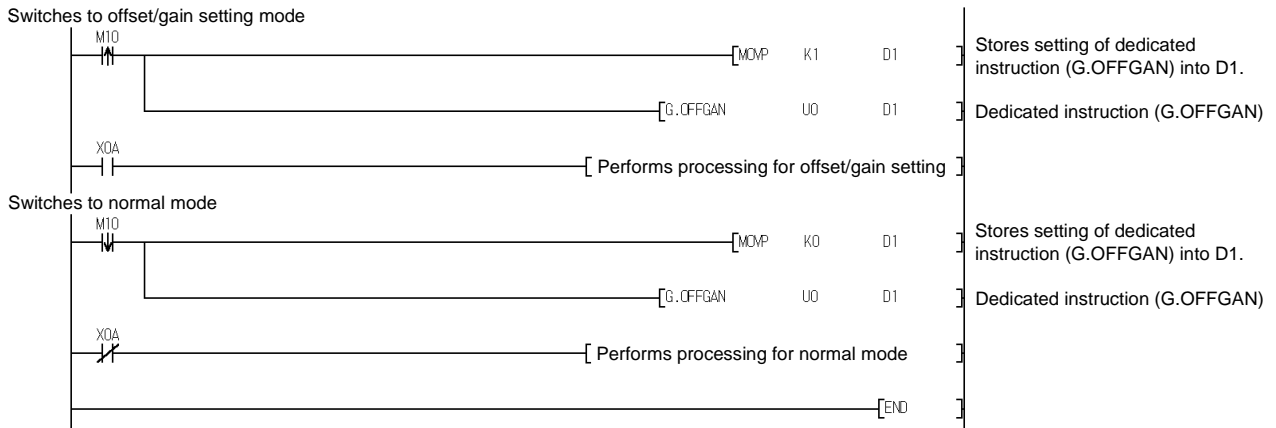




Appendix 3.2 OGLOAD

Reads the offset/gain values of the user range setting of the Q64RD/Q64RD-G to the CPU.

Set data	Usable devices									
	Internal device (System, user)		File register	MELSECNET/H Direct J□□		Special function module U□\G□	Index register Z□	Constant		Other
	Bit	Word		Bit	Word			K, H	S	
(S)	—	○			—			—	—	—
(D)		○			—			—	—	—

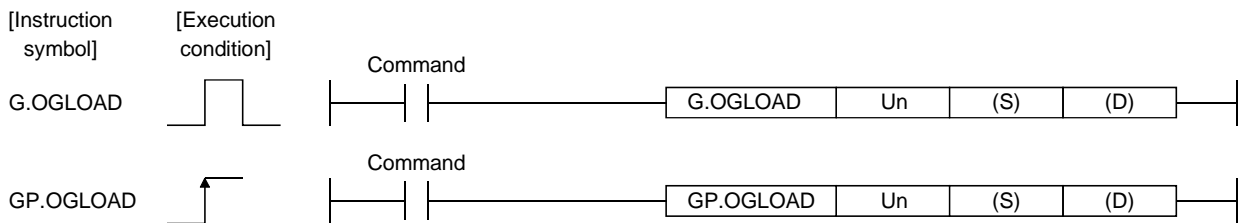

Set data

Device	Description	Setting range	Data type
Un	Start I/O number of the module	0 to FEH	Binary 16 bits
(S)	Start number of the device in which control data is stored.	Within the range of the specified device	Device name
(D)	Device that is turned ON 1 scan on completion of dedicated instruction processing. (D) + 1 also turns ON at an abnormal completion.	Within the range of the specified device	Bit

Control data \*1 (1/4)

Device	Item	Set data	Setting range	Set by	
(S)	System area	—	—	—	
(S) + 1	Completion status	Stores the status when the instruction is complete. 0 : Normal completion Other than 0: Abnormal completion	—	System	
(S) + 2	System area	—	—	—	
(S) + 3					
Q64RD	(S) + 4	3-wire CH1 Factory default offset value	—	—	System
	(S) + 5	3-wire CH1 Factory default offset value	—	—	System
	(S) + 6	3-wire CH1 Factory default gain value	—	—	System
	(S) + 7	3-wire CH1 Factory default gain value	—	—	System
	(S) + 8	3-wire CH1 User range settings offset value	—	—	System
	(S) + 9	3-wire CH1 User range settings offset value	—	—	System
	(S) + 10	3-wire CH1 User range settings gain value	—	—	System
	(S) + 11	3-wire CH1 User range settings gain value	—	—	System

\*1 Setting is not necessary. If setting is made, the offset/gain values will not be read properly.

## Control data \*1 (2/4)

Device	Item	Set data	Setting range	Set by		
Q64RD -G	(S) + 4	3-wire CH1 Factory default offset value (L)	—	—	System	
	(S) + 5	3-wire CH1 Factory default offset value (H)	—	—	System	
	(S) + 6	3-wire CH1 Factory default gain value (L)	—	—	System	
	(S) + 7	3-wire CH1 Factory default gain value (H)	—	—	System	
	(S) + 8	3-wire CH1 User range settings offset value (L)	—	—	System	
	(S) + 9	3-wire CH1 User range settings offset value (H)	—	—	System	
	(S) + 10	3-wire CH1 User range settings gain value (L)	—	—	System	
	(S) + 11	3-wire CH1 User range settings gain value (H)	—	—	System	
	(S) + 12	3-wire CH1 User range settings offset resistance value (L)	—	—	System	
	(S) + 13	3-wire CH1 User range settings offset resistance value (H)	—	—	System	
	(S) + 14	3-wire CH1 User range settings gain resistance value (L)	—	—	System	
	(S) + 15	3-wire CH1 User range settings gain resistance value (H)	—	—	System	
	Q64RD	(S) + 16	4-wire CH1 Factory default offset value	—	—	System
		(S) + 17	4-wire CH1 Factory default offset value	—	—	System
		(S) + 18	4-wire CH1 Factory default gain value	—	—	System
(S) + 19		4-wire CH1 Factory default gain value	—	—	System	
(S) + 20		4-wire CH1 User range settings offset value	—	—	System	
(S) + 21		4-wire CH1 User range settings offset value	—	—	System	
(S) + 22		4-wire CH1 User range settings gain value	—	—	System	
(S) + 23		4-wire CH1 User range settings gain value	—	—	System	
Q64RD -G	(S) + 16	4-wire CH1 Factory default offset value (L)	—	—	System	
	(S) + 17	4-wire CH1 Factory default offset value (H)	—	—	System	
	(S) + 18	4-wire CH1 Factory default gain value (L)	—	—	System	
	(S) + 19	4-wire CH1 Factory default gain value (H)	—	—	System	
	(S) + 20	4-wire CH1 User range settings offset value (L)	—	—	System	
	(S) + 21	4-wire CH1 User range settings offset value (H)	—	—	System	
	(S) + 22	4-wire CH1 User range settings gain value (L)	—	—	System	
(S) + 23	4-wire CH1 User range settings gain value (H)	—	—	System		
(S) + 24	4-wire CH1 User range settings offset resistance value (L)	—	—	System		
(S) + 25	4-wire CH1 User range settings offset resistance value (H)	—	—	System		
(S) + 26	4-wire CH1 User range settings gain resistance value (L)	—	—	System		
(S) + 27	4-wire CH1 User range settings gain resistance value (H)	—	—	System		
Q64RD	(S) + 28	3-wire CH2 Factory default offset value	—	—	System	
	(S) + 29	3-wire CH2 Factory default offset value	—	—	System	
	(S) + 30	3-wire CH2 Factory default gain value	—	—	System	
	(S) + 31	3-wire CH2 Factory default gain value	—	—	System	
	(S) + 32	3-wire CH2 User range settings offset value	—	—	System	
	(S) + 33	3-wire CH2 User range settings offset value	—	—	System	
	(S) + 34	3-wire CH2 User range settings gain value	—	—	System	
	(S) + 35	3-wire CH2 User range settings gain value	—	—	System	
Q64RD -G	(S) + 28	3-wire CH2 Factory default offset value (L)	—	—	System	
	(S) + 29	3-wire CH2 Factory default offset value (H)	—	—	System	
	(S) + 30	3-wire CH2 Factory default gain value (L)	—	—	System	
	(S) + 31	3-wire CH2 Factory default gain value (H)	—	—	System	
	(S) + 32	3-wire CH2 User range settings offset value (L)	—	—	System	
	(S) + 33	3-wire CH2 User range settings offset value (H)	—	—	System	
	(S) + 34	3-wire CH2 User range settings gain value (L)	—	—	System	
(S) + 35	3-wire CH2 User range settings gain value (H)	—	—	System		
(S) + 36	3-wire CH2 User range settings offset resistance value (L)	—	—	System		
(S) + 37	3-wire CH2 User range settings offset resistance value (H)	—	—	System		
(S) + 38	3-wire CH2 User range settings gain resistance value (L)	—	—	System		
(S) + 39	3-wire CH2 User range settings gain resistance value (H)	—	—	System		

\*1 Setting is not necessary. If setting is made, the offset/gain values will not be read properly.

## Control data \*1 (3/4)

Device	Item	Set data	Setting range	Set by	
Q64RD	(S) + 40	4-wire CH2 Factory default offset value	—	—	System
	(S) + 41	4-wire CH2 Factory default offset value	—	—	System
	(S) + 42	4-wire CH2 Factory default gain value	—	—	System
	(S) + 43	4-wire CH2 Factory default gain value	—	—	System
	(S) + 44	4-wire CH2 User range settings offset value	—	—	System
	(S) + 45	4-wire CH2 User range settings offset value	—	—	System
	(S) + 46	4-wire CH2 User range settings gain value	—	—	System
	(S) + 47	4-wire CH2 User range settings gain value	—	—	System
Q64RD -G	(S) + 40	4-wire CH2 Factory default offset value (L)	—	—	System
	(S) + 41	4-wire CH2 Factory default offset value (H)			
	(S) + 42	4-wire CH2 Factory default gain value (L)	—	—	System
	(S) + 43	4-wire CH2 Factory default gain value (H)			
	(S) + 44	4-wire CH2 User range settings offset value (L)	—	—	System
	(S) + 45	4-wire CH2 User range settings offset value (H)			
	(S) + 46	4-wire CH2 User range settings gain value (L)	—	—	System
	(S) + 47	4-wire CH2 User range settings gain value (H)			
(S) + 48	4-wire CH2 User range settings offset resistance value (L)	—	—	System	
(S) + 49	4-wire CH2 User range settings offset resistance value (H)				
(S) + 50	4-wire CH2 User range settings gain resistance value (L)				
(S) + 51	4-wire CH2 User range settings gain resistance value (H)				
(S) + 51	4-wire CH2 User range settings gain resistance value (H)				
Q64RD	(S) + 52	3-wire CH3 Factory default offset value	—	—	System
	(S) + 53	3-wire CH3 Factory default offset value	—	—	System
	(S) + 54	3-wire CH3 Factory default gain value	—	—	System
	(S) + 55	3-wire CH3 Factory default gain value	—	—	System
	(S) + 56	3-wire CH3 User range settings offset value	—	—	System
	(S) + 57	3-wire CH3 User range settings offset value	—	—	System
	(S) + 58	3-wire CH3 User range settings gain value	—	—	System
	(S) + 59	3-wire CH3 User range settings gain value	—	—	System
Q64RD -G	(S) + 52	3-wire CH3 Factory default offset value (L)	—	—	System
	(S) + 53	3-wire CH3 Factory default offset value (H)			
	(S) + 54	3-wire CH3 Factory default gain value (L)	—	—	System
	(S) + 55	3-wire CH3 Factory default gain value (H)			
	(S) + 56	3-wire CH3 User range settings offset value (L)	—	—	System
	(S) + 57	3-wire CH3 User range settings offset value (H)			
	(S) + 58	3-wire CH3 User range settings gain value (L)	—	—	System
	(S) + 59	3-wire CH3 User range settings gain value (H)			
(S) + 60	3-wire CH3 User range settings offset resistance value (L)	—	—	System	
(S) + 61	3-wire CH3 User range settings offset resistance value (H)				
(S) + 62	3-wire CH3 User range settings gain resistance value (L)				
(S) + 63	3-wire CH3 User range settings gain resistance value (H)				
(S) + 63	3-wire CH3 User range settings gain resistance value (H)				
Q64RD	(S) + 64	4-wire CH3 Factory default offset value	—	—	System
	(S) + 65	4-wire CH3 Factory default offset value			
	(S) + 66	4-wire CH3 Factory default gain value	—	—	System
	(S) + 67	4-wire CH3 Factory default gain value			
	(S) + 68	4-wire CH3 User range settings offset value	—	—	System
	(S) + 69	4-wire CH3 User range settings offset value			
	(S) + 70	4-wire CH3 User range settings gain value	—	—	System
	(S) + 71	4-wire CH3 User range settings gain value			

\*1 Setting is not necessary. If setting is made, the offset/gain values will not be read properly.

## Control data \*1 (4/4)

Device	Item	Set data	Setting range	Set by	
Q64RD -G	(S) + 64	4-wire CH3 User range settings offset value (L)	—	—	System
	(S) + 65	4-wire CH3 User range settings offset value (H)	—	—	System
	(S) + 66	4-wire CH3 User range settings gain value (L)	—	—	System
	(S) + 67	4-wire CH3 User range settings gain value (H)	—	—	System
	(S) + 68	4-wire CH3 User range settings offset resistance value (L)	—	—	System
	(S) + 69	4-wire CH3 User range settings offset resistance value (H)	—	—	System
	(S) + 70	4-wire CH3 User range settings gain resistance value (L)	—	—	System
(S) + 71	4-wire CH3 User range settings gain resistance value (H)	—	—	System	
(S) + 72	4-wire CH3 User range settings offset resistance value (L)	—	—	System	
(S) + 73	4-wire CH3 User range settings offset resistance value (H)	—	—	System	
(S) + 74	4-wire CH3 User range settings gain resistance value (L)	—	—	System	
(S) + 75	4-wire CH3 User range settings gain resistance value (H)	—	—	System	
Q64RD	(S) + 76	3-wire CH4 Factory default offset value	—	—	System
	(S) + 77	3-wire CH4 Factory default offset value	—	—	System
	(S) + 78	3-wire CH4 Factory default gain value	—	—	System
	(S) + 79	3-wire CH4 Factory default gain value	—	—	System
	(S) + 80	3-wire CH4 User range settings offset value	—	—	System
	(S) + 81	3-wire CH4 User range settings offset value	—	—	System
	(S) + 82	3-wire CH4 User range settings gain value	—	—	System
(S) + 83	3-wire CH4 User range settings gain value	—	—	System	
Q64RD -G	(S) + 76	3-wire CH4 Factory default offset value (L)	—	—	System
	(S) + 77	3-wire CH4 Factory default offset value (H)	—	—	System
	(S) + 78	3-wire CH4 Factory default gain value (L)	—	—	System
	(S) + 79	3-wire CH4 Factory default gain value (H)	—	—	System
	(S) + 80	3-wire CH4 User range settings offset value (L)	—	—	System
	(S) + 81	3-wire CH4 User range settings offset value (H)	—	—	System
	(S) + 82	3-wire CH4 User range settings gain value (L)	—	—	System
(S) + 83	3-wire CH4 User range settings gain value (H)	—	—	System	
(S) + 84	3-wire CH4 User range settings offset resistance value (L)	—	—	System	
(S) + 85	3-wire CH4 User range settings offset resistance value (H)	—	—	System	
(S) + 86	3-wire CH4 User range settings gain resistance value (L)	—	—	System	
(S) + 87	3-wire CH4 User range settings gain resistance value (H)	—	—	System	
Q64RD	(S) + 88	4-wire CH4 Factory default offset value	—	—	System
	(S) + 89	4-wire CH4 Factory default offset value	—	—	System
	(S) + 90	4-wire CH4 Factory default gain value	—	—	System
	(S) + 91	4-wire CH4 Factory default gain value	—	—	System
	(S) + 92	4-wire CH4 User range settings offset value	—	—	System
	(S) + 93	4-wire CH4 User range settings offset value	—	—	System
	(S) + 94	4-wire CH4 User range settings gain value	—	—	System
(S) + 95	4-wire CH4 User range settings gain value	—	—	System	
Q64RD -G	(S) + 88	4-wire CH4 Factory default offset value (L)	—	—	System
	(S) + 89	4-wire CH4 Factory default offset value (H)	—	—	System
	(S) + 90	4-wire CH4 Factory default gain value (L)	—	—	System
	(S) + 91	4-wire CH4 Factory default gain value (H)	—	—	System
	(S) + 92	4-wire CH4 User range settings offset value (L)	—	—	System
	(S) + 93	4-wire CH4 User range settings offset value (H)	—	—	System
	(S) + 94	4-wire CH4 User range settings gain value (L)	—	—	System
(S) + 95	4-wire CH4 User range settings gain value (H)	—	—	System	
(S) + 96	4-wire CH4 User range settings offset resistance value (L)	—	—	System	
(S) + 97	4-wire CH4 User range settings offset resistance value (H)	—	—	System	
(S) + 98	4-wire CH4 User range settings gain resistance value (L)	—	—	System	
(S) + 99	4-wire CH4 User range settings gain resistance value (H)	—	—	System	

\*1 Setting is not necessary. If setting is made, the offset/gain values will not be read properly.

(1) Functions

(a) Reads the offset/gain values of the user range setting of Q64RD/Q64RD-G to the CPU.

(b) There are two types of interlock signals for the G.OGLOAD instruction: the completion device (D) and the status display device at completion (D) + 1.

1) Completion device


Turns ON in the END processing of the scan where the G.OGLOAD instruction is completed, and turns OFF in the next END processing.

2) Status display device at completion

Turns ON and OFF depending on the completion status of the G.OGLOAD instruction.

Normal completion : Stays OFF and does not change.

Abnormal completion: Turns ON in the END processing of the scan where the G.OGLOAD instruction is completed, and turns OFF in the next END processing.

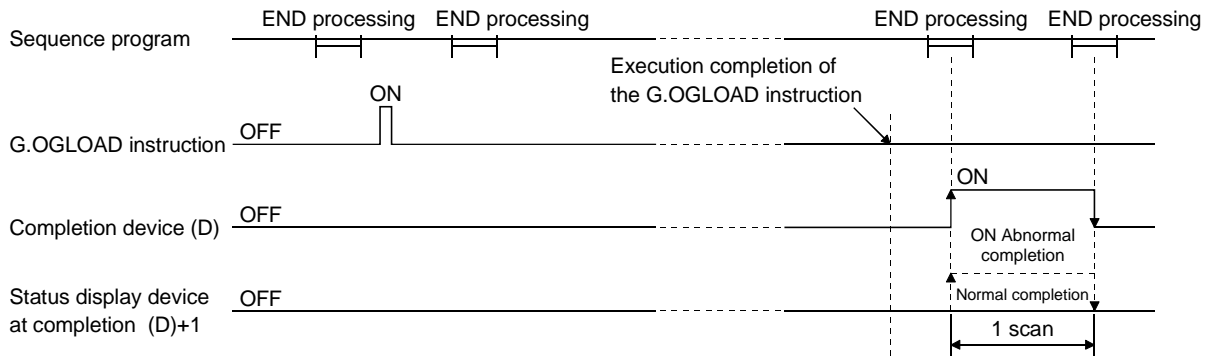


(2) Operation error

No errors.

(3) Program example


The following program is designed to read the offset/gain values of the Q64RD/Q64RD-G mounted in the position of I/O number X/Y0 to X/YF when M11 is turned ON.

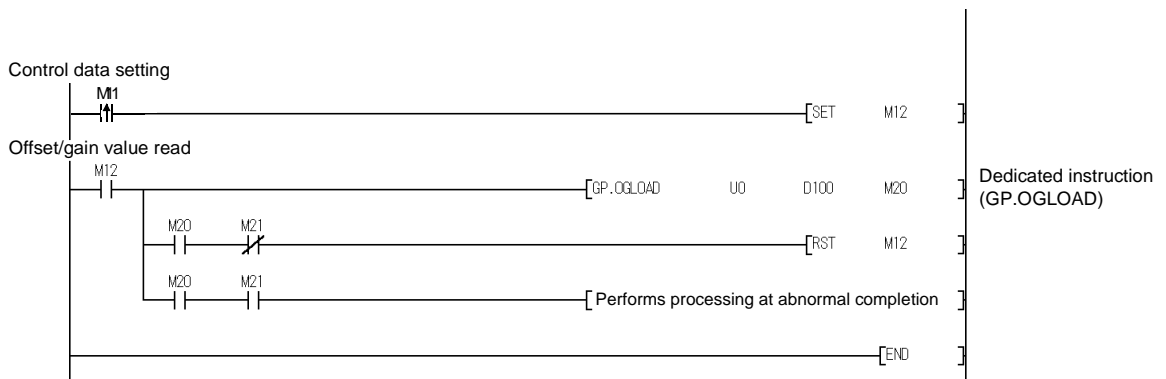

Appendix 3.3 OGSTOR

Restores the offset/gain values of the user range setting stored in the CPU to the Q64RD/Q64RD-G.

Set data	Usable devices									
	Internal device (System, user)		File register	MELSECNET/H Direct J□□		Special function module U□\G□	Index register Z□	Constant		Other
	Bit	Word		Bit	Word			K, H	S	
(S)	—	○						—	—	—
(D)		○						—	—	—

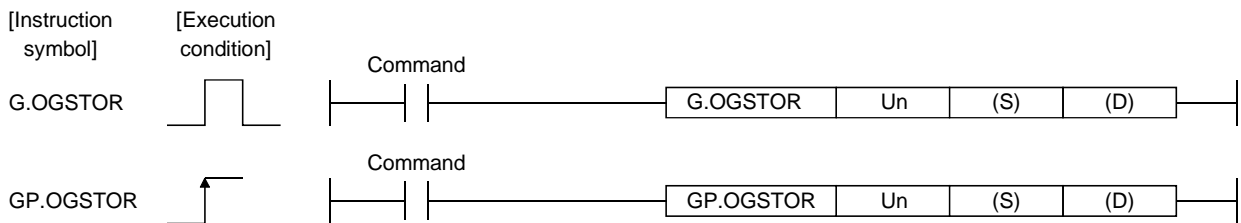

Set data

Device	Description	Setting range	Data type
Un	Start I/O number of the module	0 to FEH	Binary 16 bits
(S) *1	Start number of the device in which control data is stored.	Within the range of the specified device	Device name
(D)	Device that is turned ON 1 scan on completion of dedicated instruction processing. (D) + 1 also turns ON at an abnormal completion.	Within the range of the specified device	Bit

\*1 When executing the G.OGLOAD instruction, specify the device designated in (S).  
Do not change the data read with the G.OGLOAD instruction.  
If it is changed, normal operation cannot be guaranteed.

Control data \*1 (1/4)

Device	Item	Set data	Setting range	Set by
(S)	System area	—	—	—
(S) + 1	Completion status	Stores the status when the instruction is complete. 0 : Normal completion Other than 0: Abnormal completion	—	System
(S) + 2	System area	—	—	—
(S) + 3				
Q64RD	(S) + 4	3-wire CH1 Factory default offset value	—	System
	(S) + 5	3-wire CH1 Factory default offset value	—	System
	(S) + 6	3-wire CH1 Factory default gain value	—	System
	(S) + 7	3-wire CH1 Factory default gain value	—	System
	(S) + 8	3-wire CH1 User range settings offset value	—	System
	(S) + 9	3-wire CH1 User range settings offset value	—	System
	(S) + 10	3-wire CH1 User range settings gain value	—	System
(S) + 11	3-wire CH1 User range settings gain value	—	System	

\*1 Setting is not necessary. If setting is made, the offset/gain values will not be read properly.

Control data \*1 (2/4)

Device	Item	Set data	Setting range	Set by
Q64RD -G	(S) + 4	3-wire CH1 Factory default offset value (L)	—	System
	(S) + 5	3-wire CH1 Factory default offset value (H)	—	System
	(S) + 6	3-wire CH1 Factory default gain value (L)	—	System
	(S) + 7	3-wire CH1 Factory default gain value (H)	—	System
	(S) + 8	3-wire CH1 User range settings offset value (L)	—	System
	(S) + 9	3-wire CH1 User range settings offset value (H)	—	System
	(S) + 10	3-wire CH1 User range settings gain value (L)	—	System
	(S) + 11	3-wire CH1 User range settings gain value (H)	—	System
	(S) + 12	3-wire CH1 User range settings offset resistance value (L)	—	System
	(S) + 13	3-wire CH1 User range settings offset resistance value (H)	—	System
	(S) + 14	3-wire CH1 User range settings gain resistance value (L)	—	System
	(S) + 15	3-wire CH1 User range settings gain resistance value (H)	—	System
Q64RD	(S) + 16	4-wire CH1 Factory default offset value	—	System
	(S) + 17	4-wire CH1 Factory default offset value	—	System
	(S) + 18	4-wire CH1 Factory default gain value	—	System
	(S) + 19	4-wire CH1 Factory default gain value	—	System
	(S) + 20	4-wire CH1 User range settings offset value	—	System
	(S) + 21	4-wire CH1 User range settings offset value	—	System
	(S) + 22	4-wire CH1 User range settings gain value	—	System
	(S) + 23	4-wire CH1 User range settings gain value	—	System
Q64RD -G	(S) + 16	4-wire CH1 Factory default offset value (L)	—	System
	(S) + 17	4-wire CH1 Factory default offset value (H)	—	System
	(S) + 18	4-wire CH1 Factory default gain value (L)	—	System
	(S) + 19	4-wire CH1 Factory default gain value (H)	—	System
	(S) + 20	4-wire CH1 User range settings offset value (L)	—	System
	(S) + 21	4-wire CH1 User range settings offset value (H)	—	System
	(S) + 22	4-wire CH1 User range settings gain value (L)	—	System
	(S) + 23	4-wire CH1 User range settings gain value (H)	—	System
	(S) + 24	4-wire CH1 User range settings offset resistance value (L)	—	System
	(S) + 25	4-wire CH1 User range settings offset resistance value (H)	—	System
	(S) + 26	4-wire CH1 User range settings gain resistance value (L)	—	System
	(S) + 27	4-wire CH1 User range settings gain resistance value (H)	—	System
Q64RD	(S) + 28	3-wire CH2 Factory default offset value	—	System
	(S) + 29	3-wire CH2 Factory default offset value	—	System
	(S) + 30	3-wire CH2 Factory default gain value	—	System
	(S) + 31	3-wire CH2 Factory default gain value	—	System
	(S) + 32	3-wire CH2 User range settings offset value	—	System
	(S) + 33	3-wire CH2 User range settings offset value	—	System
	(S) + 34	3-wire CH2 User range settings gain value	—	System
	(S) + 35	3-wire CH2 User range settings gain value	—	System
Q64RD -G	(S) + 28	3-wire CH2 Factory default offset value (L)	—	System
	(S) + 29	3-wire CH2 Factory default offset value (H)	—	System
	(S) + 30	3-wire CH2 Factory default gain value (L)	—	System
	(S) + 31	3-wire CH2 Factory default gain value (H)	—	System
	(S) + 32	3-wire CH2 User range settings offset value (L)	—	System
	(S) + 33	3-wire CH2 User range settings offset value (H)	—	System
	(S) + 34	3-wire CH2 User range settings gain value (L)	—	System
	(S) + 35	3-wire CH2 User range settings gain value (H)	—	System
	(S) + 36	3-wire CH2 User range settings offset resistance value (L)	—	System
	(S) + 37	3-wire CH2 User range settings offset resistance value (H)	—	System
	(S) + 38	3-wire CH2 User range settings gain resistance value (L)	—	System
	(S) + 39	3-wire CH2 User range settings gain resistance value (H)	—	System

\*1 Setting is not necessary. If setting is made, the offset/gain values will not be read properly.

Control data \*1 (3/4)

Device	Item	Set data	Setting range	Set by	
Q64RD	(S) + 40	4-wire CH2 Factory default offset value	—	—	System
	(S) + 41	4-wire CH2 Factory default offset value	—	—	System
	(S) + 42	4-wire CH2 Factory default gain value	—	—	System
	(S) + 43	4-wire CH2 Factory default gain value	—	—	System
	(S) + 44	4-wire CH2 User range settings offset value	—	—	System
	(S) + 45	4-wire CH2 User range settings offset value	—	—	System
	(S) + 46	4-wire CH2 User range settings gain value	—	—	System
	(S) + 47	4-wire CH2 User range settings gain value	—	—	System
Q64RD -G	(S) + 40	4-wire CH2 Factory default offset value (L)	—	—	System
	(S) + 41	4-wire CH2 Factory default offset value (H)			
	(S) + 42	4-wire CH2 Factory default gain value (L)	—	—	System
	(S) + 43	4-wire CH2 Factory default gain value (H)			
	(S) + 44	4-wire CH2 User range settings offset value (L)	—	—	System
	(S) + 45	4-wire CH2 User range settings offset value (H)			
	(S) + 46	4-wire CH2 User range settings gain value (L)	—	—	System
	(S) + 47	4-wire CH2 User range settings gain value (H)			
(S) + 48	4-wire CH2 User range settings offset resistance value (L)	—	—	System	
(S) + 49	4-wire CH2 User range settings offset resistance value (H)	—	—	System	
(S) + 50	4-wire CH2 User range settings gain resistance value (L)	—	—	System	
(S) + 51	4-wire CH2 User range settings gain resistance value (H)	—	—	System	
Q64RD	(S) + 52	3-wire CH3 Factory default offset value	—	—	System
	(S) + 53	3-wire CH3 Factory default offset value	—	—	System
	(S) + 54	3-wire CH3 Factory default gain value	—	—	System
	(S) + 55	3-wire CH3 Factory default gain value	—	—	System
	(S) + 56	3-wire CH3 User range settings offset value	—	—	System
	(S) + 57	3-wire CH3 User range settings offset value	—	—	System
	(S) + 58	3-wire CH3 User range settings gain value	—	—	System
	(S) + 59	3-wire CH3 User range settings gain value	—	—	System
Q64RD -G	(S) + 52	3-wire CH3 Factory default offset value (L)	—	—	System
	(S) + 53	3-wire CH3 Factory default offset value (H)			
	(S) + 54	3-wire CH3 Factory default gain value (L)	—	—	System
	(S) + 55	3-wire CH3 Factory default gain value (H)			
	(S) + 56	3-wire CH3 User range settings offset value (L)	—	—	System
	(S) + 57	3-wire CH3 User range settings offset value (H)			
	(S) + 58	3-wire CH3 User range settings gain value (L)	—	—	System
	(S) + 59	3-wire CH3 User range settings gain value (H)			
(S) + 60	3-wire CH3 User range settings offset resistance value (L)	—	—	System	
(S) + 61	3-wire CH3 User range settings offset resistance value (H)	—	—	System	
(S) + 62	3-wire CH3 User range settings gain resistance value (L)	—	—	System	
(S) + 63	3-wire CH3 User range settings gain resistance value (H)	—	—	System	
Q64RD	(S) + 64	4-wire CH3 Factory default offset value	—	—	System
	(S) + 65	4-wire CH3 Factory default offset value			
	(S) + 66	4-wire CH3 Factory default gain value	—	—	System
	(S) + 67	4-wire CH3 Factory default gain value			
	(S) + 68	4-wire CH3 User range settings offset value	—	—	System
	(S) + 69	4-wire CH3 User range settings offset value			
	(S) + 70	4-wire CH3 User range settings gain value	—	—	System
	(S) + 71	4-wire CH3 User range settings gain value			

\*1 Setting is not necessary. If setting is made, the offset/gain values will not be read properly.



## Control data \*1 (4/4)

Device	Item	Set data	Setting range	Set by	
Q64RD -G	(S) + 64	4-wire CH3 User range settings offset value (L)	—	—	System
	(S) + 65	4-wire CH3 User range settings offset value (H)	—	—	System
	(S) + 66	4-wire CH3 User range settings gain value (L)	—	—	System
	(S) + 67	4-wire CH3 User range settings gain value (H)	—	—	System
	(S) + 68	4-wire CH3 User range settings offset resistance value (L)	—	—	System
	(S) + 69	4-wire CH3 User range settings offset resistance value (H)	—	—	System
	(S) + 70	4-wire CH3 User range settings gain resistance value (L)	—	—	System
(S) + 71	4-wire CH3 User range settings gain resistance value (H)	—	—	System	
(S) + 72	4-wire CH3 User range settings offset resistance value (L)	—	—	System	
(S) + 73	4-wire CH3 User range settings offset resistance value (H)	—	—	System	
(S) + 74	4-wire CH3 User range settings gain resistance value (L)	—	—	System	
(S) + 75	4-wire CH3 User range settings gain resistance value (H)	—	—	System	
Q64RD	(S) + 76	3-wire CH4 Factory default offset value	—	—	System
	(S) + 77	3-wire CH4 Factory default offset value	—	—	System
	(S) + 78	3-wire CH4 Factory default gain value	—	—	System
	(S) + 79	3-wire CH4 Factory default gain value	—	—	System
	(S) + 80	3-wire CH4 User range settings offset value	—	—	System
	(S) + 81	3-wire CH4 User range settings offset value	—	—	System
	(S) + 82	3-wire CH4 User range settings gain value	—	—	System
Q64RD -G	(S) + 83	3-wire CH4 User range settings gain value	—	—	System
	(S) + 76	3-wire CH4 Factory default offset value (L)	—	—	System
	(S) + 77	3-wire CH4 Factory default offset value (H)	—	—	System
	(S) + 78	3-wire CH4 Factory default gain value (L)	—	—	System
	(S) + 79	3-wire CH4 Factory default gain value (H)	—	—	System
	(S) + 80	3-wire CH4 User range settings offset value (L)	—	—	System
	(S) + 81	3-wire CH4 User range settings offset value (H)	—	—	System
(S) + 82	3-wire CH4 User range settings gain value (L)	—	—	System	
(S) + 83	3-wire CH4 User range settings gain value (H)	—	—	System	
(S) + 84	3-wire CH4 User range settings offset resistance value (L)	—	—	System	
(S) + 85	3-wire CH4 User range settings offset resistance value (H)	—	—	System	
(S) + 86	3-wire CH4 User range settings gain resistance value (L)	—	—	System	
(S) + 87	3-wire CH4 User range settings gain resistance value (H)	—	—	System	
Q64RD	(S) + 88	4-wire CH4 Factory default offset value	—	—	System
	(S) + 89	4-wire CH4 Factory default offset value	—	—	System
	(S) + 90	4-wire CH4 Factory default gain value	—	—	System
	(S) + 91	4-wire CH4 Factory default gain value	—	—	System
	(S) + 92	4-wire CH4 User range settings offset value	—	—	System
	(S) + 93	4-wire CH4 User range settings offset value	—	—	System
	(S) + 94	4-wire CH4 User range settings gain value	—	—	System
Q64RD -G	(S) + 95	4-wire CH4 User range settings gain value	—	—	System
	(S) + 88	4-wire CH4 Factory default offset value (L)	—	—	System
	(S) + 89	4-wire CH4 Factory default offset value (H)	—	—	System
	(S) + 90	4-wire CH4 Factory default gain value (L)	—	—	System
	(S) + 91	4-wire CH4 Factory default gain value (H)	—	—	System
	(S) + 92	4-wire CH4 User range settings offset value (L)	—	—	System
	(S) + 93	4-wire CH4 User range settings offset value (H)	—	—	System
(S) + 94	4-wire CH4 User range settings gain value (L)	—	—	System	
(S) + 95	4-wire CH4 User range settings gain value (H)	—	—	System	
(S) + 96	4-wire CH4 User range settings offset resistance value (L)	—	—	System	
(S) + 97	4-wire CH4 User range settings offset resistance value (H)	—	—	System	
(S) + 98	4-wire CH4 User range settings gain resistance value (L)	—	—	System	
(S) + 99	4-wire CH4 User range settings gain resistance value (H)	—	—	System	

\*1 Setting is not necessary. If setting is made, the offset/gain values will not be read properly.

(1) Functions

(a) Restores the offset/gain values of the user range setting stored in the CPU to the Q64RD/Q64RD-G.

(b) There are two types of interlock signals for the G.OGSTOR instruction: the completion device (D) and the status display device at completion (D) + 1.

1) Completion device


Turns ON in the END processing of the scan where the G.OGSTOR instruction is completed, and turns OFF in the next END processing.

2) Status display device at completion

Turns ON and OFF depending on the completion status of the G.OGSTOR instruction.

Normal completion : Stays OFF and does not change.

Abnormal completion: Turns ON in the END processing of the scan where the G.OGSTOR instruction is completed, and turns OFF in the next END processing.

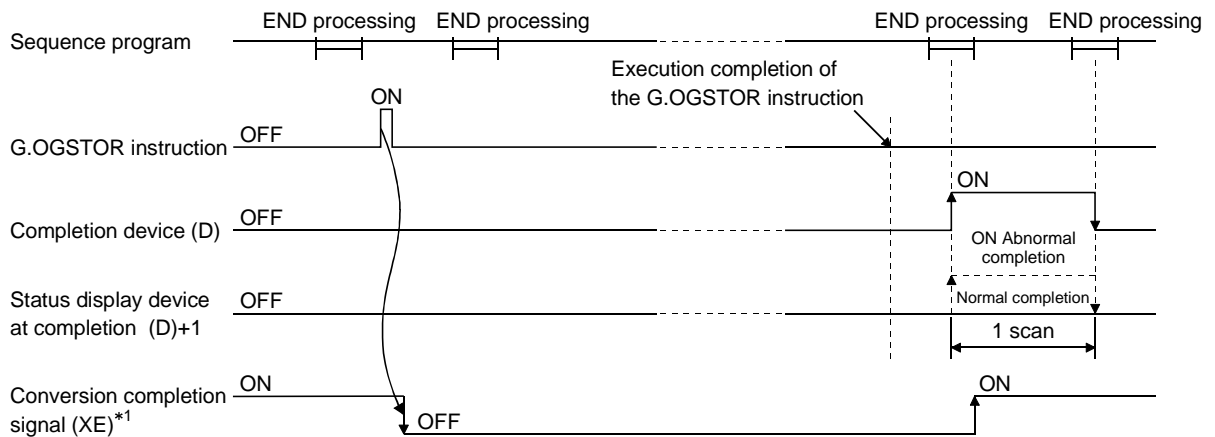

\*1 When the G.OGSTOR instruction is executed, A/D conversion is not performed. After the completion device (D) turns ON, A/D conversion starts, the A/D conversion value is stored into the buffer memory, and the conversion completion signal (XE) then turns ON.

(c) When the offset/gain values are restored, the reference accuracy is decreased by approx. 3 times compared with the one before the restoration.


(2) Operation error

In any of the following cases, an error occurs and the corresponding error code is stored into the completion status area (S)+1.

Error code	Case resulting in operation error
161	The G.OGSTOR instruction was executed in the offset/gain setting mode.
162	The G.OGSTOR instruction was executed consecutively.
163	The G.OGSTOR instruction was executed for the model that differs from the model for which the G.OGLOAD instruction had been executed.


(3) Program example

The following program is designed to read the offset/gain values of the Q64RD/Q64RD-G mounted in the position of I/O number X/Y0 to X/YF when M11 is turned ON.

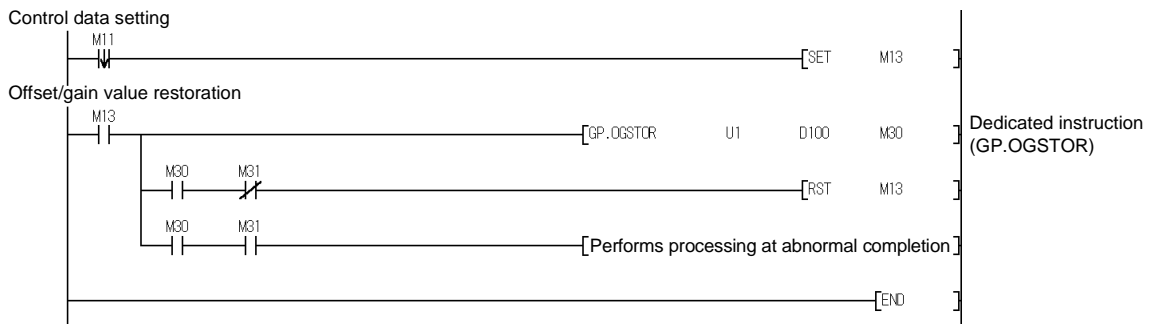


Appendix 4 External Dimension Diagram

(1) Q64RD

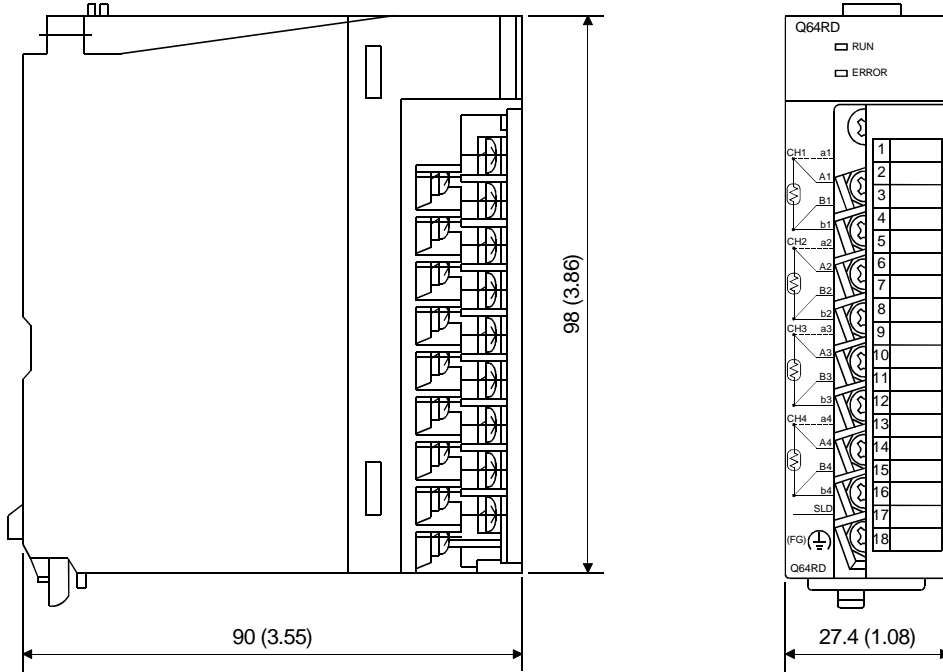

Unit: mm (in.)

(2) Q64RD-G

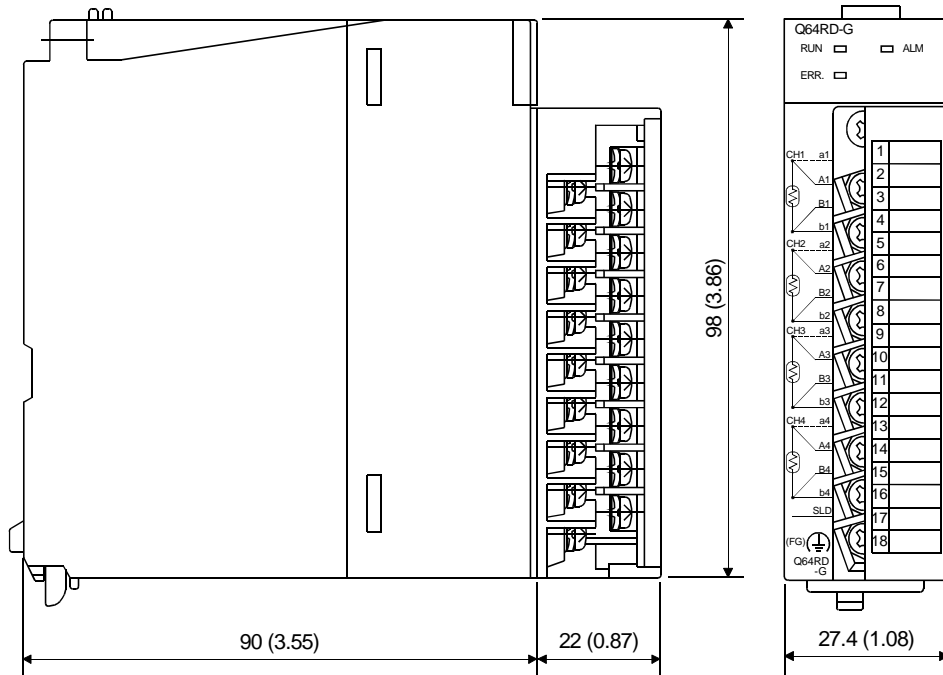

Unit: mm (in.)



## INDEX

## [A]

- Accuracy ..... 3- 1
- ALM LED ..... 4- 3
- Automatic refresh settings ..... 5- 1, 5-13
- Averaging processing..... 3- 4
- Averaging processing specification ..... 3-16
- Averaging time/count ..... 3-16

## [B]

- Buffer memory..... 3-11

## [C]

- Conversion completion flag..... 3-12
- Conversion enable/disable setting..... 3-15
- Conversion enable/disable function..... 3- 3

## [D]

- Dedicated Instruction List..... App-3
- Disconnection detection flag ..... 3-20
- Disconnection detection function ..... 3- 3
- Disconnection detection flag ..... 3- 7

## [E]

- Error clear request..... 3- 9
- Error code ..... 3-18
- Error code list ..... 8- 1
- ERR. LED ..... 4- 3
- ERROR LED ..... 4- 3
- Error flag ..... 3- 8
- Eternal dimension diagram ..... App.-19
- Extended averaging processing specification .....  
..... 3-34
- External wiring ..... 4- 4

## [F]

- Factory default offset/gain value..... 3-35
- Function version ..... 2- 3, 8- 5

## [G]

- Gain setting request ..... 3- 9
- GX Configurator-TI ..... 2- 2, 5- 1
- GX Developer ..... 2- 2

## [H]

- Handling precautions ..... 4- 1
- Hardware information ..... 8- 5

## [ I ]

- I/O signals ..... 3- 5
- Initial setting ..... 5- 1, 5-12
- Installation ..... 5- 3
- Intelligent function module switch setting..... 4- 7

## [M]

- Measured temperature value ..... 3-25, 3-31
- Mode switching setting ..... 3-25
- Module detail information ..... 8- 5
- Module ready ..... 3- 6
- Monitor/test..... 5-15

## [O]

- OFFGAN ..... App-4
- Offset setting request..... 3- 9
- Offset/gain setting ..... 4- 9, 5-18, 5-19
- Offset/gain setting function ..... 3- 3
- Offset/gain setting mode status flag ..... 3-11
- Offset/gain setting status signal ..... 3- 6
- Offset/gain temperature set value ..... 3-24
- OGLOAD ..... App- 6
- OGSTOR..... App-12
- OMC (Online Module Change) refresh data .....  
..... 5-20
- Online module change..... 7- 1
- Operating environment ..... 5- 5
- Operating condition setting completion signal  
..... 3- 6
- Operating condition setting request ..... 3- 9

## [P]

- Parameters..... 5- 6
- Part identification nomenclature ..... 4- 3
- Product lineup ..... A- 8
- Programming..... 6- 1

## [Q]

- Q64RD ..... A- 9, 1- 1
- Q64RD-G ..... A- 9, 1- 1
- QCPU (Q mode) ..... A- 9

[R]	
	Read from PLC..... 5-11
[S]	
	Sampling process..... 3- 4
	Scaling function..... 3- 3
	Scaling range upper/lower limit value..... 3-22
	Scaling value ..... 3-21
	Scaling width upper/lower limit value..... 3-22
	Setting range ..... 3-18
	Setting range 1 ..... 3-27
	Setting range 2 ..... 3-27
	Setup and procedures before operation..... 4- 2
	Status check ..... 8- 5
	System monitor ..... 8- 5
[T]	
	Temperature conversion function ..... 3- 3
	Temperature conversion system ..... 3- 3, 3- 4
	Terminal block ..... 4- 3
	Text file ..... 5- 7
	Troubleshooting..... 8- 1
[U]	
	User range settings offset/gain value ..... 3-35
	User range settings offset/gain resistance value . ..... 3-35
	User range write request..... 3- 9
	Utility package ..... 5- 1
[W]	
	Warning output enable/disable setting ..... 3-19
	Warning output flag ..... 3-19
	Warning output function ..... 3- 3
	Warning output signal ..... 3- 7
	Warning output upper/lower limit value ..... 3-23
	Wiring instructions ..... 4- 4
	Write to PLC ..... 5-11

# WARRANTY

Please confirm the following product warranty details before starting use.

## 1. Gratis Warranty Term and Gratis Warranty Range

If any faults or defects (hereinafter "Failure") found to be the responsibility of Mitsubishi occurs during use of the product within the gratis warranty term, the product shall be repaired at no cost via the dealer or Mitsubishi Service Company. Note that if repairs are required at a site overseas, on a detached island or remote place, expenses to dispatch an engineer shall be charged for.

### [Gratis Warranty Term]

The gratis warranty term of the product shall be for one year after the date of purchase or delivery to a designated place.

Note that after manufacture and shipment from Mitsubishi, the maximum distribution period shall be six (6) months, and the longest gratis warranty term after manufacturing shall be eighteen (18) months. The gratis warranty term of repair parts shall not exceed the gratis warranty term before repairs.

### [Gratis Warranty Range]

- (1) The range shall be limited to normal use within the usage state, usage methods and usage environment, etc., which follow the conditions and precautions, etc., given in the instruction manual, user's manual and caution labels on the product.
- (2) Even within the gratis warranty term, repairs shall be charged for in the following cases.
  1. Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by the user's hardware or software design.
  2. Failure caused by unapproved modifications, etc., to the product by the user.
  3. When the Mitsubishi product is assembled into a user's device, Failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
  4. Failure that could have been avoided if consumable parts (battery, backlight, fuse, etc.) designated in the instruction manual had been correctly serviced or replaced.
  5. Failure caused by external irresistible forces such as fires or abnormal voltages, and Failure caused by force majeure such as earthquakes, lightning, wind and water damage.
  6. Failure caused by reasons unpredictable by scientific technology standards at time of shipment from Mitsubishi.
  7. Any other failure found not to be the responsibility of Mitsubishi or the user.

## 2. Onerous repair term after discontinuation of production

- (1) Mitsubishi shall accept onerous product repairs for seven (7) years after production of the product is discontinued. Discontinuation of production shall be notified with Mitsubishi Technical Bulletins, etc.
- (2) Product supply (including repair parts) is not possible after production is discontinued.

## 3. Overseas service

Overseas, repairs shall be accepted by Mitsubishi's local overseas FA Center. Note that the repair conditions at each FA Center may differ.

## 4. Exclusion of chance loss and secondary loss from warranty liability

Regardless of the gratis warranty term, Mitsubishi shall not be liable for compensation to damages caused by any cause found not to be the responsibility of Mitsubishi, chance losses, lost profits incurred to the user by Failures of Mitsubishi products, damages and secondary damages caused from special reasons regardless of Mitsubishi's expectations, compensation for accidents, and compensation for damages to products other than Mitsubishi products and other duties.

## 5. Changes in product specifications

The specifications given in the catalogs, manuals or technical documents are subject to change without prior notice.

## 6. Product application

- (1) In using the Mitsubishi MELSEC programmable logic controller, the usage conditions shall be that the application will not lead to a major accident even if any problem or fault should occur in the programmable logic controller device, and that backup and fail-safe functions are systematically provided outside of the device for any problem or fault.
- (2) The Mitsubishi general-purpose programmable logic controller has been designed and manufactured for applications in general industries, etc. Thus, applications in which the public could be affected such as in nuclear power plants and other power plants operated by respective power companies, and applications in which a special quality assurance system is required, such as for Railway companies or National Defense purposes shall be excluded from the programmable logic controller applications.

Note that even with these applications, if the user approves that the application is to be limited and a special quality is not required, application shall be possible.

When considering use in aircraft, medical applications, railways, incineration and fuel devices, manned transport devices, equipment for recreation and amusement, and safety devices, in which human life or assets could be greatly affected and for which a particularly high reliability is required in terms of safety and control system, please consult with Mitsubishi and discuss the required specifications.



Microsoft, Windows, Windows NT are registered trademarks of Microsoft Corporation in the United States and other countries.

Pentium is a registered trademark of Intel corporation in the United states and other countries.

Other company and product names herein are either trademarks or registered trademarks of their respective owners.

SPREAD

Copyright (c) 1996 FarPoint Technologies, Inc.

HEADQUARTERS	EUROPEAN REPRESENTATIVES	EUROPEAN REPRESENTATIVES	EUROPEAN REPRESENTATIVES
<b>MITSUBISHI ELECTRIC EUROPE B.V.</b> German Branch Gothaer Straße 8 <b>D-40880 Ratingen</b> Phone: +49 (0)2102 486-0 Fax: +49 (0)2102 486-1120 e mail: megfamail@meg.mee.com	<b>EUROPE</b> <b>GEVA AUSTRIA</b> Wiener Straße 89 <b>AT-2500 Baden</b> Phone: +43 (0)2252 / 85 55 20 Fax: +43 (0)2252 / 488 60 e mail: office@geva.at <b>TEHNIKON BELARUS</b> Oktjabrskaya 16/5, Ap 704 <b>BY-220030 Minsk</b> Phone: +375 (0)17 / 2104626 Fax: +375 (0)17 / 2275830 e mail: tehnikon@belsonet.net <b>Getronics b.v. BELGIUM</b> Control Systems Pontbeeklaan 43 <b>BE-1731 Asse-Zellik</b> Phone: +32 (0)2 / 467 17 51 Fax: +32 (0)2 / 467 17 45 e mail: infoautomation@getronics.com <b>TELECON CO. BULGARIA</b> Motion Control Automation b.v. Markenweg 5 <b>BG-1756 Sofia</b> Phone: +359 (0)2 / 97 44 058 Fax: +359 (0)2 / 97 44 061 e mail: — <b>INEA CR d.o.o. CROATIA</b> Losinjska 4 a <b>HR-10000 Zagreb</b> Phone: +385 (0) 1 / 36 940-01 Fax: +385 (0) 1 / 36 940-03 e mail: inea@inea.hr <b>AutoCont CZECH REPUBLIC</b> Control Systems s.r.o. Nemocnici 12 <b>CZ-70200 Ostrava 2</b> Phone: +420 59 / 6152 111 Fax: +420 59 / 6152 562 e mail: consys@autocont.cz <b>louis poulsen DENMARK</b> industri & automation Geminivej 32 <b>DK-2670 Greve</b> Phone: +45 (0)43 / 95 95 95 Fax: +45 (0)43 / 95 95 91 e mail: lpia@lpmail.com <b>UTU Elektrotehnika AS ESTONIA</b> Pärnu mnt.160i <b>EE-10621 Tallinn</b> Phone: +372 (0)6 / 51 72 80 Fax: +372 (0)6 / 51 72 88 e mail: utu@utu.ee <b>UTU POWEL OY FINLAND</b> Box 236 <b>FIN-28101 Pori</b> Phone: +358 (0)2 / 550 800 Fax: +358 (0)2 / 550 8841 e mail: tehoelektroniikka@urhotuominen.fi <b>UTECO A.B.E.E. GREECE</b> 5, Mavrogenous Str. <b>GR-18542 Piraeus</b> Phone: +302 (0)10 / 42 10 050 Fax: +302 (0)10 / 42 12 033 e mail: uteco@uteco.gr <b>Meltrade Automatika Kft. HUNGARY</b> 55, Harmat St. <b>HU-1105 Budapest</b> Phone: +36 (0)1 / 2605 602 Fax: +36 (0)1 / 2605 602 e mail: office@meltrade.hu <b>SIA POWEL LATVIA</b> Lienes iela 28 <b>LV-1009 Riga</b> Phone: +371 784 2280 Fax: +371 784 2281 e mail: utu@utu.lv	<b>UAB UTU POWEL LITHUANIA</b> Savanoriu Pr. 187 <b>LT-2053 Vilnius</b> Phone: +370 (0)52323-101 Fax: +370 (0)52322-980 e mail: powel@utu.lt <b>Intehsis Srl MOLDOVA</b> Cuza-Voda 36/1-81 <b>MD-2061 Chisinau</b> Phone: +373 (0)2 / 562 263 Fax: +373 (0)2 / 562 263 e mail: intehsis@mdl.net <b>Getronics b.v. NETHERLANDS</b> Control Systems Donauweg 2 B <b>NL-1043 AJ Amsterdam</b> Phone: +31 (0)20 / 587 6700 Fax: +31 (0)20 / 587 6839 e mail: info.gia@getronics.com <b>Motion Control NETHERLANDS</b> Automation b.v. Markenweg 5 <b>NL-7051 HS Varsseveld</b> Phone: +31 (0)315 / 257 260 Fax: +31 (0)315 / 257 269 e mail: — <b>Beijer Electronics AS NORWAY</b> Teglverksveien 1 <b>NO-3002 Drammen</b> Phone: +47 (0)32 / 24 30 00 Fax: +47 (0)32 / 84 85 77 e mail: info@beijer.no <b>MPL Technology Sp. z o.o. POLAND</b> ul. Sliczna 36 <b>PL-31-444 Kraków</b> Phone: +48 (0)12 / 632 28 85 Fax: +48 (0)12 / 632 47 82 e mail: krakow@mpl.pl <b>Sirius Trading &amp; Services srl ROMANIA</b> Str. Biharia Nr. 67-77 <b>RO-013981 Bucuresti 1</b> Phone: +40 (0) 21 / 201 1146 Fax: +40 (0) 21 / 201 1148 e mail: sirius@siriustrading.ro <b>ACP Autocomp a.s. SLOVAKIA</b> Chalupkova 7 <b>SK-81109 Bratislava</b> Phone: +421 (02)5292-2254 Fax: +421 (02)5292-2248 e mail: info@acp-autocomp.sk <b>INEA d.o.o. SLOVENIA</b> Stegne 11 <b>SI-1000 Ljubljana</b> Phone: +386 (0)1 513 8100 Fax: +386 (0)1 513 8170 e mail: inea@inea.si <b>Beijer Electronics AB SWEDEN</b> Box 426 <b>S-20124 Malmö</b> Phone: +46 (0)40 / 35 86 00 Fax: +46 (0)40 / 35 86 02 e mail: info@beijer.de <b>ECONOTEC AG SWITZERLAND</b> Postfach 282 <b>CH-8309 Nürensdorf</b> Phone: +41 (0)1 / 838 48 11 Fax: +41 (0)1 / 838 48 12 e mail: info@econotec.ch <b>GTS TURKEY</b> Darülaceze Cad. No. 43A KAT: 2 <b>TR-80270 Okmeydani-Istanbul</b> Phone: +90 (0)212 / 320 1640 Fax: +90 (0)212 / 320 1649 e mail: gts@turk.net	<b>CSC Automation UKRAINE</b> 15, M. Raskova St., Fl. 10, Off. 1010 <b>UA-02002 Kiev</b> Phone: +380 (0)44 / 238 83 16 Fax: +380 (0)44 / 238 83 17 e mail: csc-a@csc-a.kiev.ua
			<b>EURASIAN REPRESENTATIVE</b> <b>CONSUS RUSSIA</b> Promyshlennaya St. 42 <b>RU-198099 St Petersburg</b> Phone: +7 812 / 325 36 53 Fax: +7 812 / 325 36 53 e mail: consus@consus.spb.ru <b>ELEKTROSTYLE RUSSIA</b> ul. Garschina 11 <b>RU-140070 Moscow Oblast</b> Phone: +7 095 / 557 9756 Fax: +7 095 / 746 8880 e mail: mjuly@elektrostyle.ru <b>ELEKTROSTYLE RUSSIA</b> Krasnij Prospekt 220-1, Office 312 <b>RU-630049 Novosibirsk</b> Phone: +7 3832 / 10 66 18 Fax: +7 3832 / 10 66 26 e mail: elo@elektrostyle.ru <b>ICOS RUSSIA</b> Ryazanskij Prospekt, 8A, Office 100 <b>RU-109428 Moscow</b> Phone: +7 095 / 232 0207 Fax: +7 095 / 232 0327 e mail: mail@icos.ru <b>SMENA RUSSIA</b> Polzunova 7 <b>RU-630051 Novosibirsk</b> Phone: +7 095 / 416 4321 Fax: +7 095 / 416 4321 e mail: smena-nsk@yandex.ru <b>SSMP Rosgidromontazh Ltd RUSSIA</b> 23, Lesoparkovaya Str. <b>RU-344041 Rostov On Don</b> Phone: +7 8632 / 36 00 22 Fax: +7 8632 / 36 00 26 e mail: — <b>STC Drive Technique RUSSIA</b> Poslannikov per., 9, str.1 <b>RU-107005 Moscow</b> Phone: +7 095 / 786 21 00 Fax: +7 095 / 786 21 01 e mail: info@privod.ru
			<b>MIDDLE EAST REPRESENTATIVE</b> <b>SHERF Motion Techn. Ltd ISRAEL</b> Rehov Hamerkava 19 <b>IL-58851 Holon</b> Phone: +972 (0)3 / 559 54 62 Fax: +972 (0)3 / 556 01 82 e mail: —
			<b>AFRICAN REPRESENTATIVE</b> <b>CBI Ltd SOUTH AFRICA</b> Private Bag 2016 <b>ZA-1600 Isando</b> Phone: +27 (0)11 / 928 2000 Fax: +27 (0)11 / 392 2354 e mail: cbi@cbi.co.za